













DARCY TV STAND

Parts List (18 parts)

1. Top	x 1	8. Left Divider	x 1
2. Bottom	x 1	9. Small Shelf	x 2
3. Side Right	x 1	10. Large Shelf	x 1
4. Side Left	x 1	11. Ribbed Door L + R	x 2
5. Cleat Large	x 1	12. Skirting	x 1
6. Cleat Small	x 2	13. Mid Backing 3mm	x 1
7. Right Divider	x 1	14. Side Backing 3mm	x 2

Hardware

A	Confirmat Screws (use the supplied Allen Key)	x 14	
B	Allen Key	x 1	
C	Cams	x 20	
D	Cam Pins	x 20	
E	Ferrari Door Hinge Ferrari Screws (8 x 16)	x 4 x 24	
F	Sofa Legs	x 5	
G	G-Screws	x 20	
H	Wooden Dowels & Glue	x 5	
I	Push Lock	x 2	
J	4 x 16 Screws	x 4	
K	Covers	x 4	

Scan to
watch
assembly
video



SCAN TO WATCH VIDEO



CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.



DARCY TV STAND



Unit Assembly

- Set the Top Panel (1) on a soft surface with the drill holes facing upwards.
- With a Phillips screwdriver (not included), insert 8 Cam Pins (D) into the smaller holes.
- Place the Cams (C) into the larger drill holes on the Sides & Dividers (3, 4, 7, 8), ensuring the arrows on the Cams are pointing towards the drill holes.
- Position the Sides and Dividers over the cam pins on the Top Panel in the correct sequence: Left Side, Left Divider, Right Divider, Right Side.
Do not tighten the screws yet.
- Insert Cam Pin (C) into the small holes on the Sides and Dividers. Each Side Panel contains 2 Cam Pins, while each Divider has 4 Cam Pins (2 on each side).
- Slide the Small Shelf (9) and Small Cleat (6) between the Left Side and Left Divider, ensuring the cam pins are facing up, and then tighten them. Continue this process for all the Shelves and Cleats, pairing Small Shelf with Small Cleat on the sides, and Large Shelf (10) with Large Cleat (5) in the middle.
- Insert Cams (C) into the larger drilled holes on the Shelves and secure them. Tighten the Cleats using Confirmat Screws (A) and an Allen Key through the Sides and Dividers.
- Once all the shelves and cleats are installed and tightened, proceed to tighten the Cams that connect the Sides, Dividers, and Top Panel.
- Slide the 3mm Backing (13, 14) into the grooves at the back of the unit, placing Side Foil (14) on the Sides and Mid Foil (13) in the center. Ensure the Backing fits snugly into the grooves on the Side, Divider, and Top.
- Attach the Bottom Panel (2) to the assembly, making sure the backing fits correctly into the groove, and secure it with 10 Confirmat Screws.
- Distribute the 5 Sofa Legs (F) evenly on the Bottom Panel to align with the small pre-drilled holes, fastening them with the supplied screws.
- Apply a small amount of glue into each of the 5 larger holes on the Bottom Panel and attach the Skirting (12).



Unit Assembly

- Secure Hinges (E) to Doors Left and Right (11) using silver screws. (Make sure you have the right door on the right side)
- Next, flip the unit upright and attach the doors to the sides, making sure to refer to the special markings (four mini holes for each hinge).
- The hinges offer four-way adjustments through the set screws.
- Finally, attach the Push Locks (I) to both dividers (7, 8) using the small pre-drilled holes. Once the bracket is secured, simply clip the Push Lock into place. Twist the front cylindrical part for any necessary adjustments.

There we go! You are all done. Congratulations !



SCAN TO WATCH VIDEO