



me&co
QUALITY, AFFORDABLE FURNITURE

ASSEMBLY INSTRUCTIONS



OPTIMA TV STAND


Parts List (18 parts)

1. Top	x 1	9. Side Cleat	x 2
2. Bottom	x 1	10. Mid Cleat	x 1
3. Side Right	x 1	11. Top Cleat	x 1
4. Side Left	x 1	12. Doors	x 2
5. Division Left	x 1	13. Backing 3mm	x 3
6. Division Right	x 1		
7. Side Shelves	x 2		
8. Mid Shelf	x 1		

Hardware

A	Confirmat Screws <i>(use the supplied Allen Key)</i>	x 20	
B	Allen Key	x 1	
C	Cams	x 8	
D	Cam Pins	x 8	
E	Touch Release Piston Screws (4 x 16)	x 2 x 4	
F	Overlay Door Hinge Ferarri Screws	x 4 x 24	
G	T-Leg 150mm G-Screws	x 5 x 20	
H	Shelf Studs	x 4	
I	Cover Stickers	x 8	

Before you begin, make sure you have all the parts listed in the assembly guide and organise them by type and size. You will also need a star or Philip's screwdriver, and an allen key will be provided

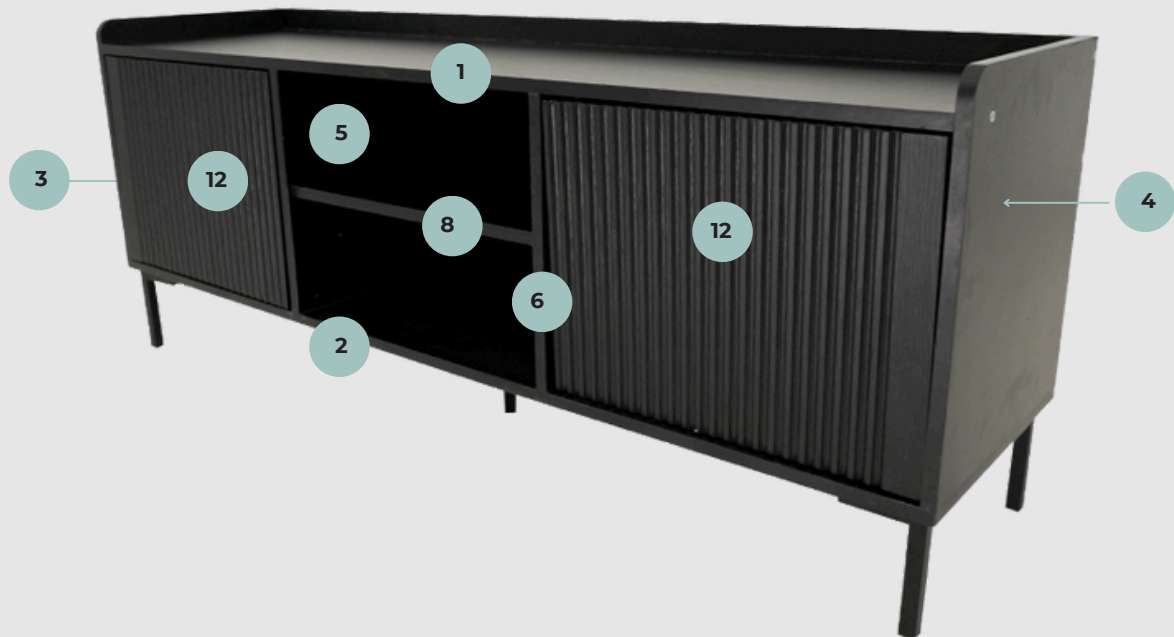

CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.



Scan QR Code - Follow video for precise assembly

- 1** Place the bottom panel (2) against the left side panel (4) in an L-shape, and secure them together using confirmat screws (A).
- 2** Slide in the left side cleat (9), ensuring the wooden dowel fits into the hole. Secure with a confirmat screw (A).
- 3** Screw a cam pin (D) into the left side panel (4).
- 4** Lay down the left shelf panel (4) and insert cams (18).
- 5** Slide the left shelf panel (7) into the left side panel (4), ensuring the wooden dowel and cam pin (D) fit into the holes. Then tighten the cam (C) on the left shelf panel (7).
- 6** Lay down the left side division panel (5), screw in cam pins (D), and insert cams (C) into the holes (ensure the arrows face the nearest side).
- 7** Slide the left side division panel (5) into the left cleat (9) and left shelf panel (7), ensuring the wooden dowels and cam pins fit into the holes. Secure with confirmat screws (A).
- 8** Slide in the middle cleat (10), make sure the wooden dowel fits into the hole, then secure with a confirmat screw (A).
- 9** Lay down the right side division panel (6), screw in cam pins (D), and insert cams (C) into the holes (arrows facing nearest side).
- 10** Slide the right side division panel (6) into the middle cleat (10), ensuring the wooden dowels fit into the holes. Secure with a confirmat screw (A).
- 11** Secure the right side division panel (6) to the bottom panel (2) using confirmat screws (A).
- 12** Slide in the right side cleat (9), ensuring the wooden dowel fits into the hole, and secure with a confirmat screw (A).
- 13** Lay down the right shelf panel (7) and insert cams (C).
- 14** Slide the right shelf panel (7) into the right division panel (6), ensuring the wooden dowel and cam pin fit into the holes. Then tighten the cam.
- 15** Lay down the right side panel (3) and screw in cam pins (D).
- 16** Slide the right side panel (3) into the right cleat (9), right shelf panel (7), and bottom panel (2). Ensure the wooden dowels and cam pins fit into the holes. Secure with confirmat screws and tighten the cams.
- 17** Slide all three backing panels (13) into the designated grooves.
- 18** Lay the top panel (1) upside down and attach the top trimming (11) using confirmat screws (A).
- 19** Flip over the top panel (1), screw in cam pins (D), and attach the touch release pistons (E).
- 20** Place the top panel (1) over the unit, ensuring the cam pins fit into the holes.
Tip: If necessary, slightly loosen the confirmat screws on the side panels to help align the top panel. Re-tighten once the panel is properly seated.
- 21** Secure the top panel (1) to the side panels (3,4) using confirmat screws (A).
- 22** Flip the unit over and attach the legs (C) with the provided screws.
- 23** Lay the door panels (12) upside down and attach the door hinges (F) to the inside of each panel.
- 24** Attach the door panels (12) to the inside of the unit by securing the hinges (F) to the side panels (3,4).
- 25** Insert the shelf pins (H) into both division panels (5/6). You may adjust them to the desired height.

There we go, setup is complete. Remember to use a damp cloth when cleaning. Avoid using excessive water as this may cause damage and void the warranty.

Thank you for choosing me&co!



SCAN TO WATCH VIDEO