ALTO DRAWER UNIT ASSEMBLY INSTRUCTIONS

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to saftey testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create a beautifully space to feel comfortable in.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carfully read through the instructions- you are already on your way to create a beautifully functional space!



Set The Mood

Put on your favourite playlist, order a pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You Did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging.

Creating your home

Time to assemble 30 min - People needed 1 - Difficulty level 6/10 - Tools needed - Phillips scredriver - allen key (supplied)

ALTO DRAWER UNIT ASSEMBLY INSTRUCTIONS

Parts List

1.	Left Side	X 1	**6.**	Drawer Front	x 2
2.	Right Side	X 1	**7.**	Drawer Sides	x 4
3.	Bottom	X 1	**8.**	Drawer Rear	x 2
4.	Top Panel	X 1	**9.**	Cleat	x 1
5.	Drawer Bottom	x 2	**10.**	Cabinet Backing 3mm	x 1

Hardware

A
Confirmat Screws
(use supplied Allen Key)



x 4

B
350mm Runner Set
Screws (6 x 16) x 16



x 2

C
Cam



x 12

D
Cam Pins



x 12

E
Push Lock
4x 16 Screws x 4



x 2

F
Bunfeet
8x40 Screw (x4)



x 4

G
Cover Stickers



x 8

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall.




Phillips screwdrivers required. For quicker assembly, we recommend the use of a power drill on a low-speed setting.

Body Assembly

Step 1


Insert and tighten cam pins**(D)** into small holes in top panel**(4)**

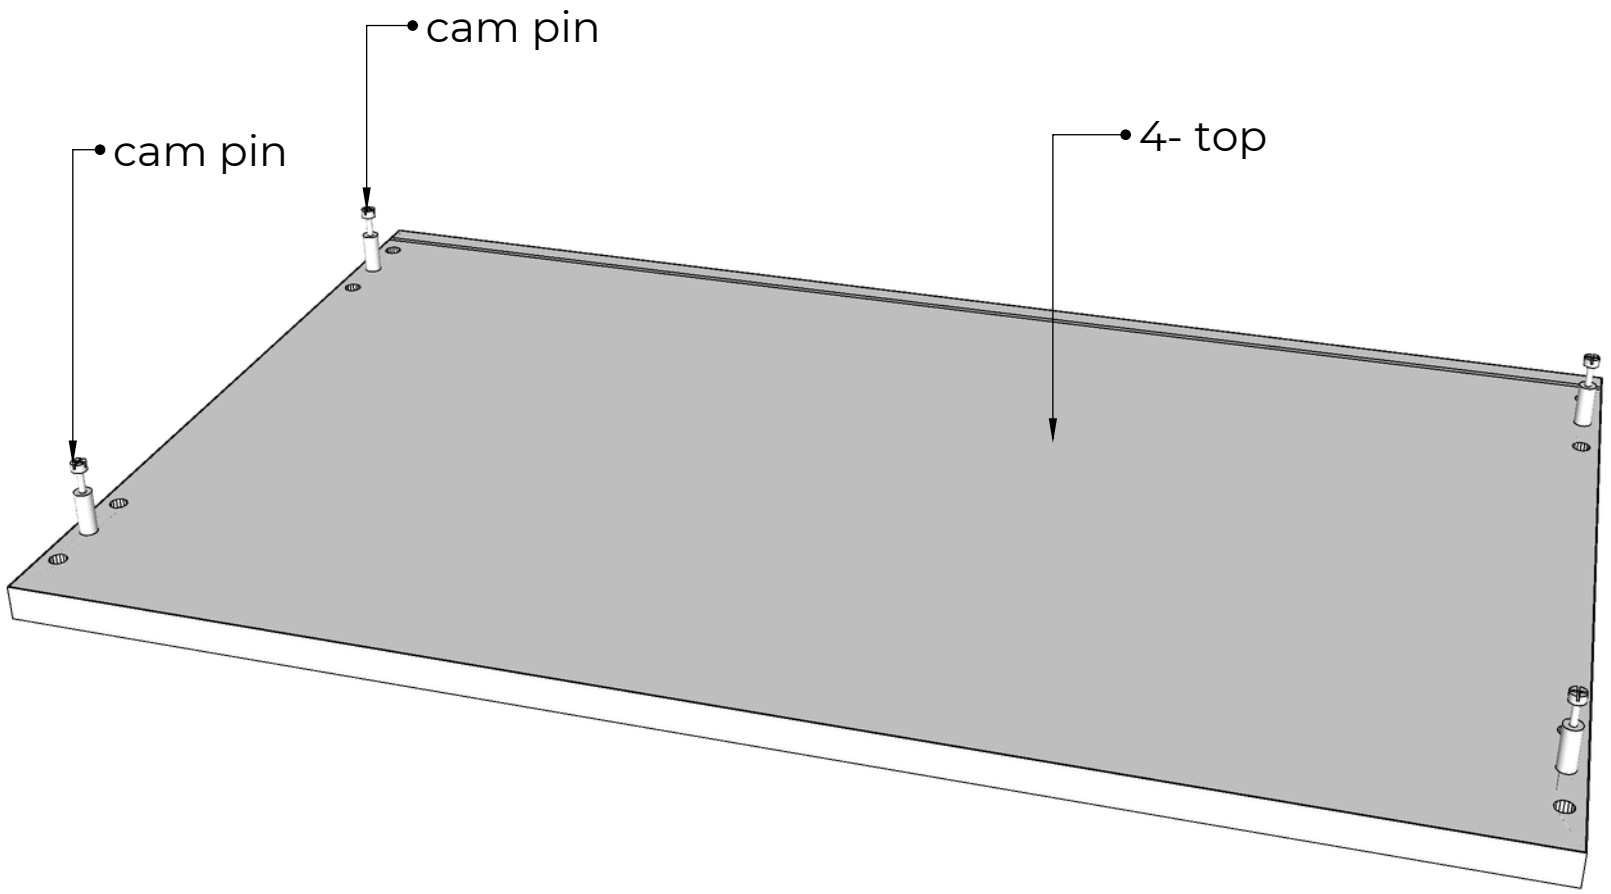


Step 2

Body Assembly

Attach drawer runners**(B)** to sides left**(1)** and right**(2)** taking note of marked area attach touch release bases to pre-drilled holes on right side**(2)**
Insert touch release pistons**(E)** into their bases and press down firmly in front to securely attach the pistons to their bases
Insert cams**(C)** into big holes with arrow on cam facing nearest edge

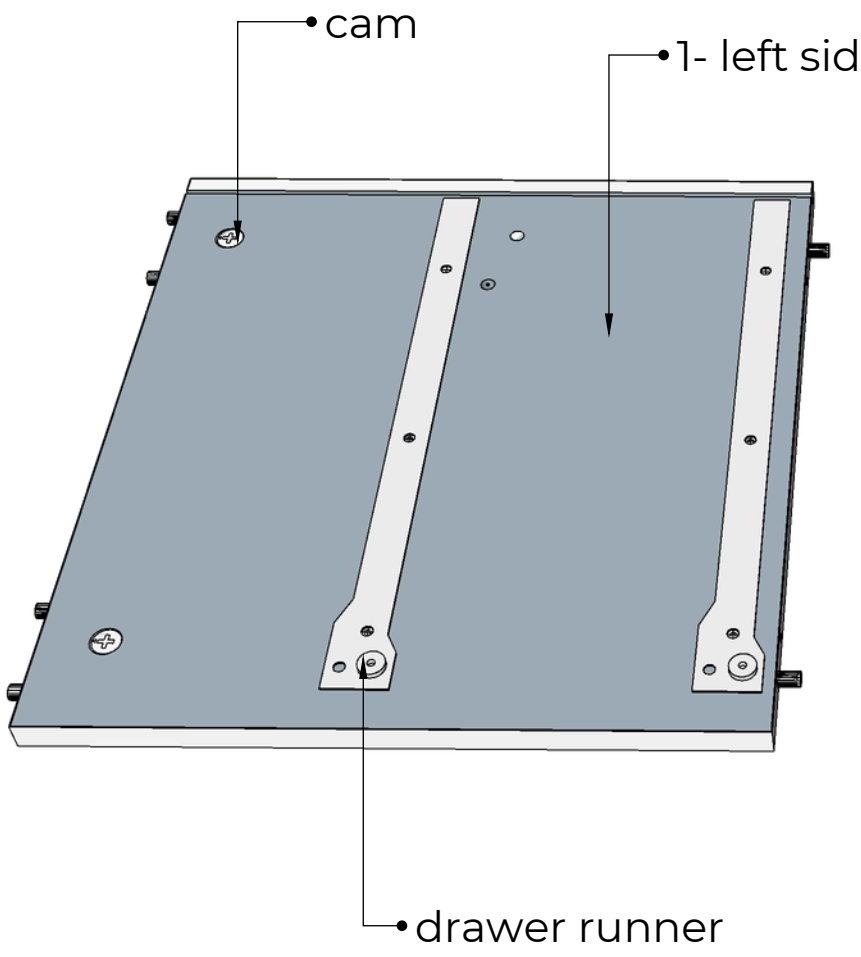


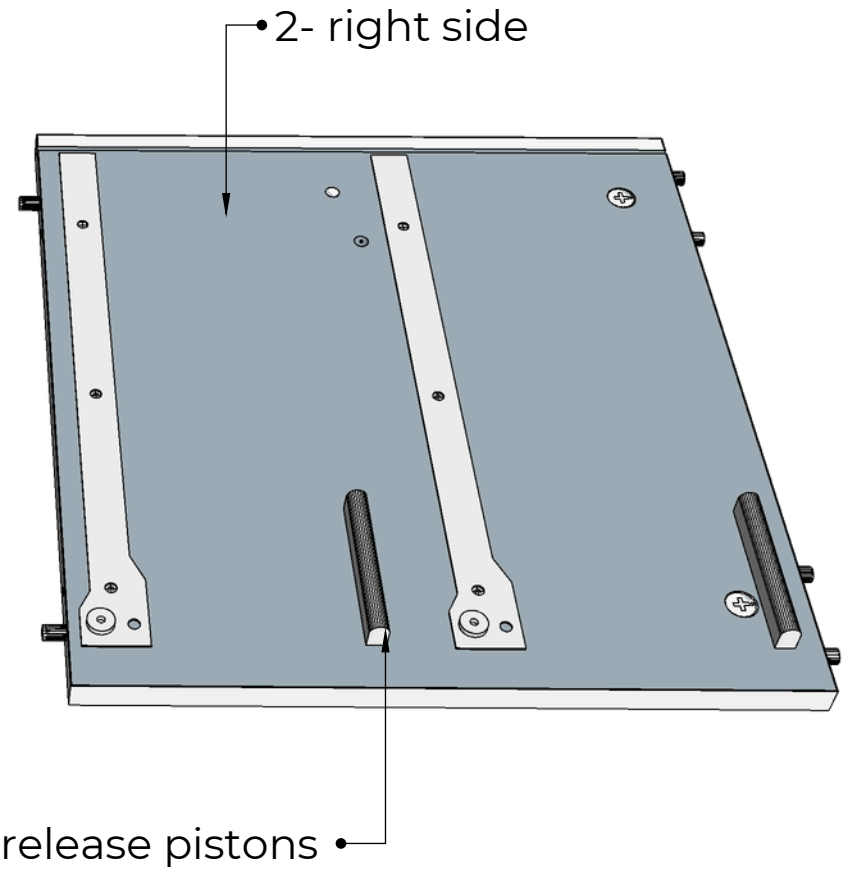

Body Assembly

Step 3


Place top upside down on a soft surface and attach left**(1)** and right side**(2)** to top and fasten the cams**(C)** in left**(1)** and right side**(2)** please ensure that the groove in each panel lines up

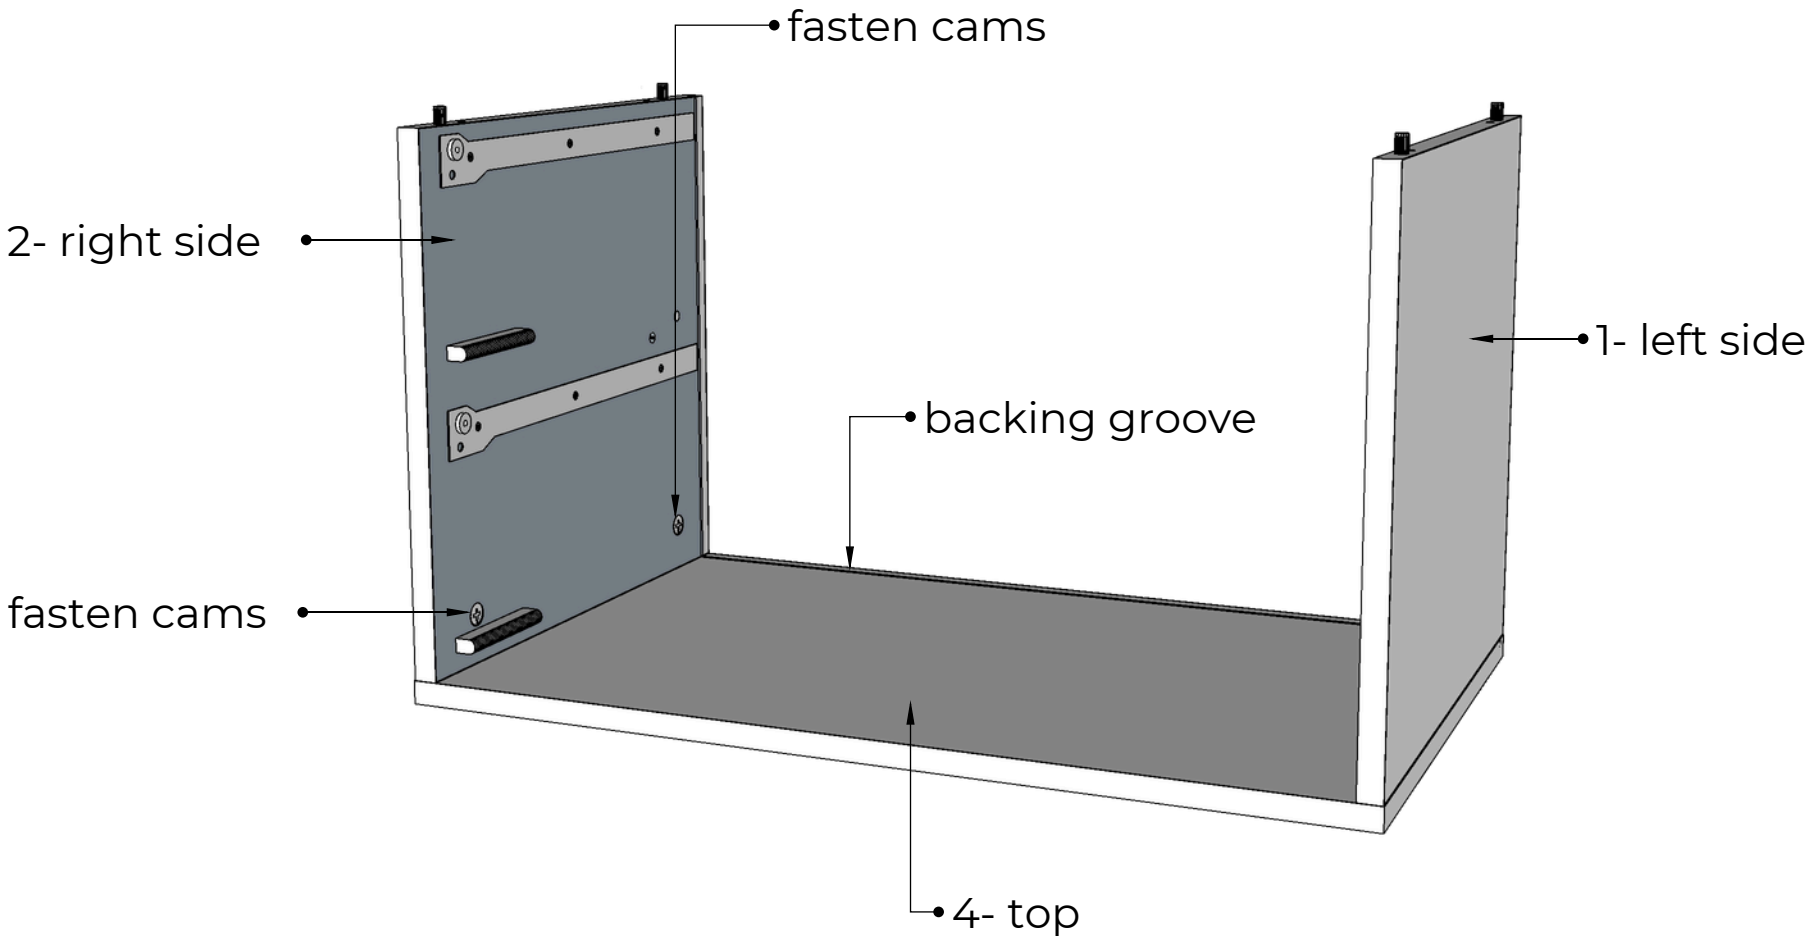

Body Assembly

Step 4


slide cleat**(9)** in-between sides**(1,2)** ensuring the dowels fit into their respective holes

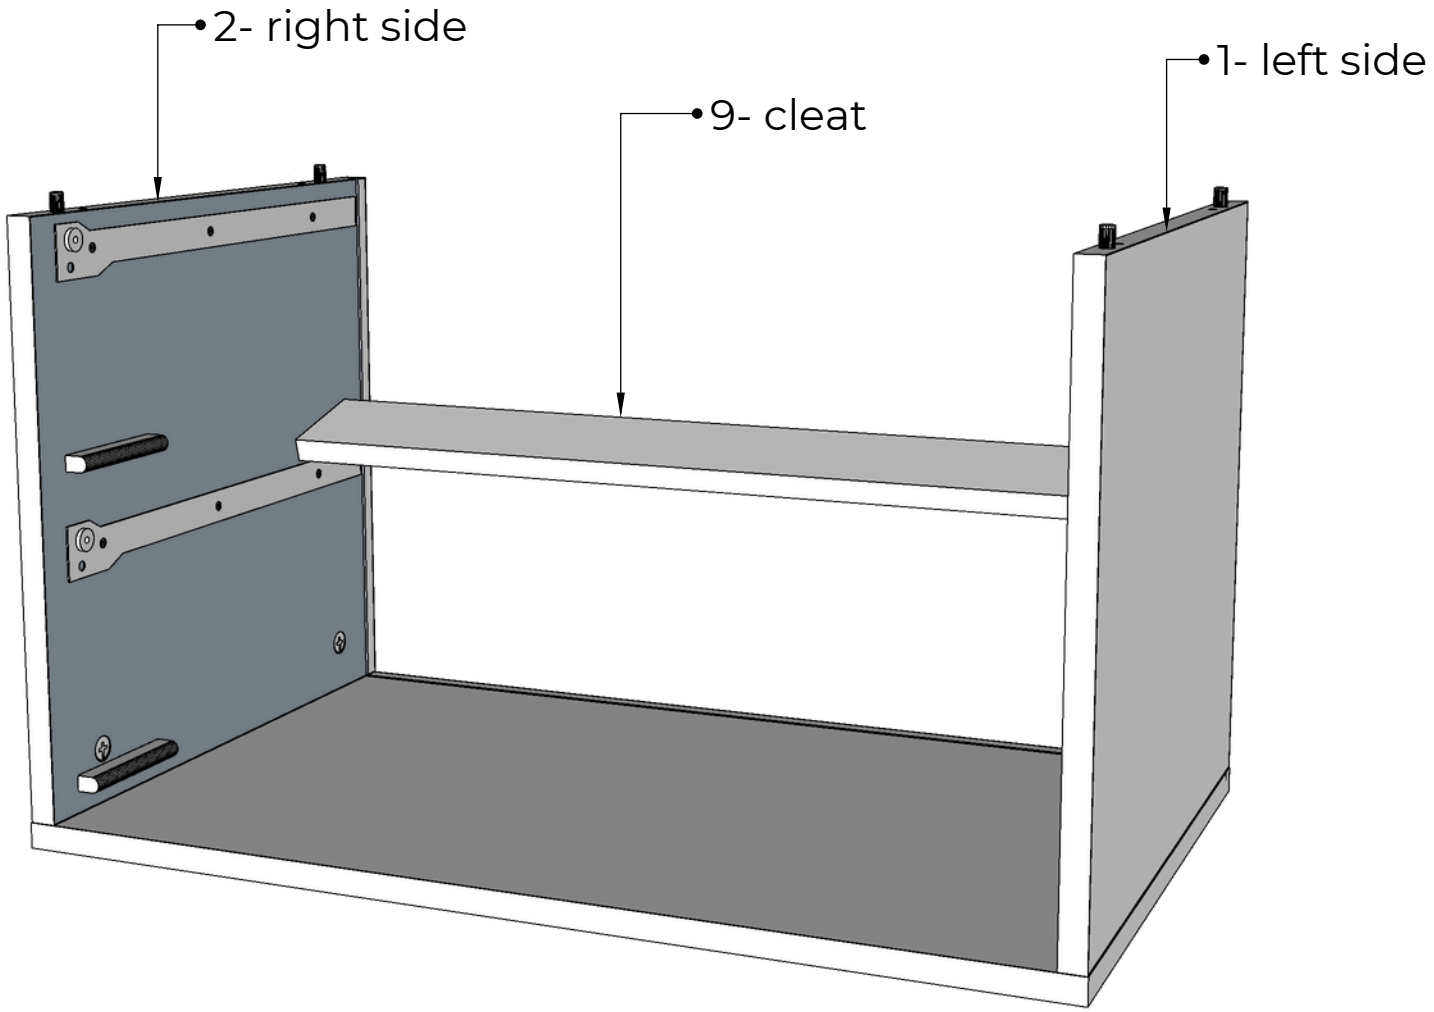

Body Assembly

Step 5


Slide backing panel**(10)** into groove on left**(1)** and right side**(2)** while also ensuring that the backing panel**(10)** fits into the groove in the top panel**(4)**

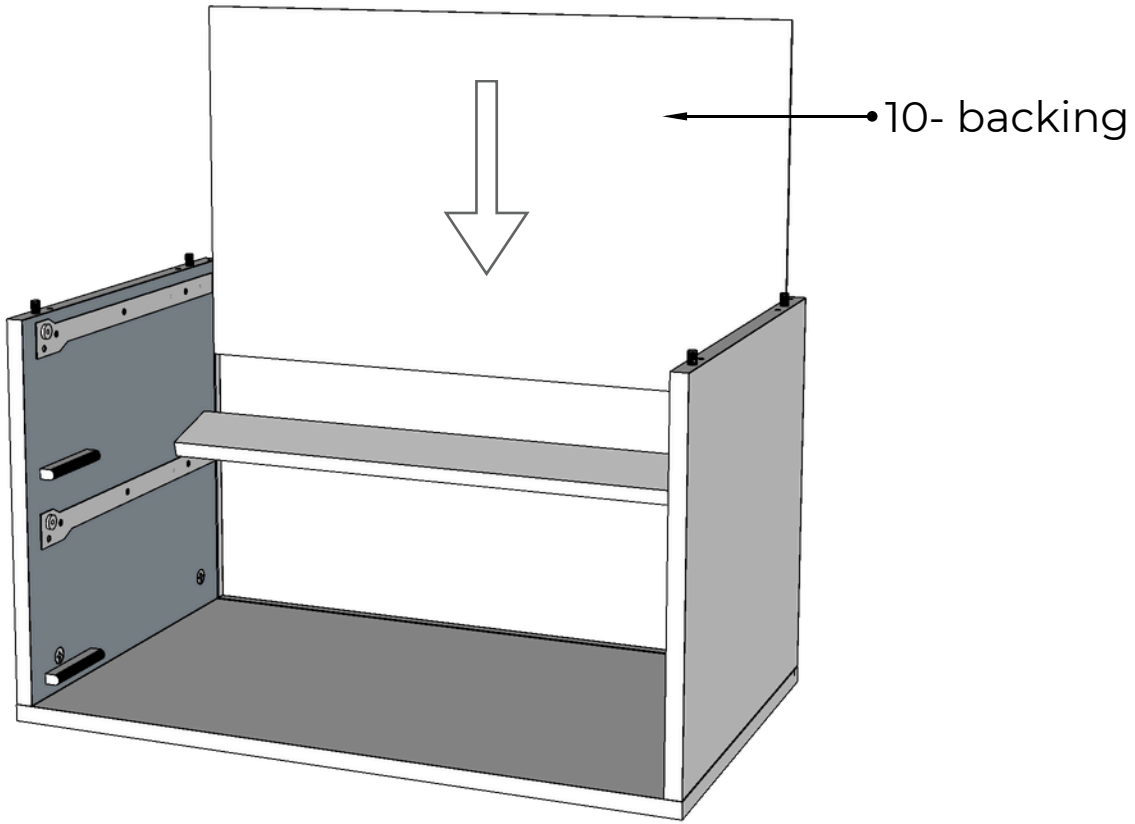

Body Assembly

Step 6


Align bottom panel**(3)** over assembly and secure in place with confirmat screws**(A)**

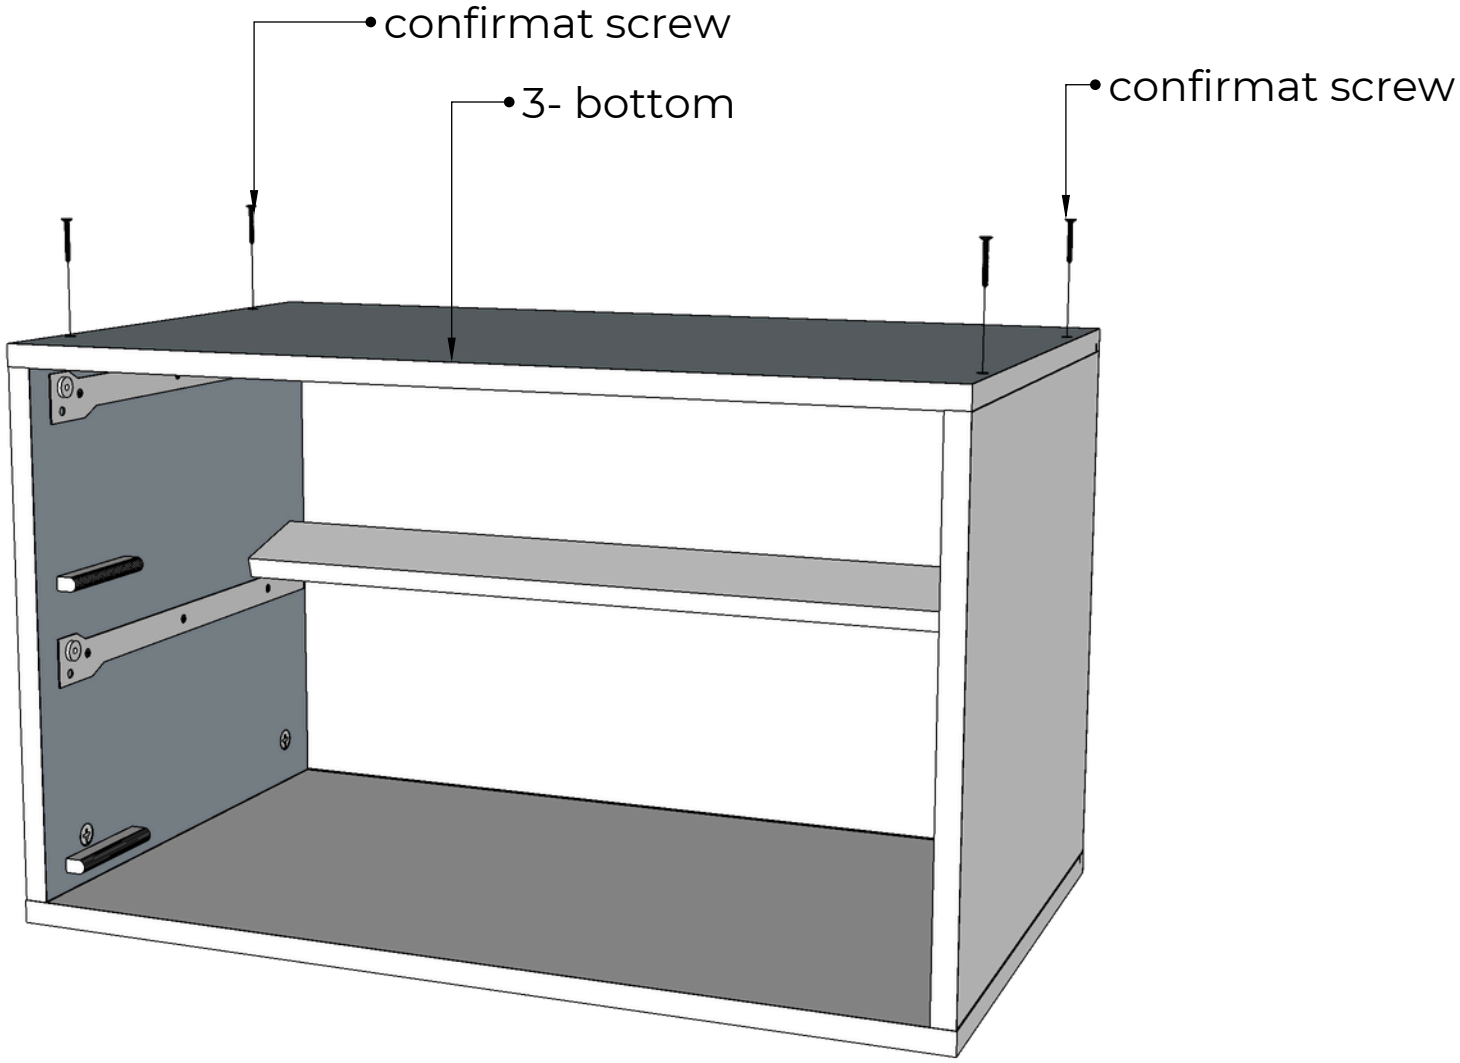

Body Assembly

Step 7


Align bun feet**(F)** over holes in bottom and fasten with supplied self tapping screws

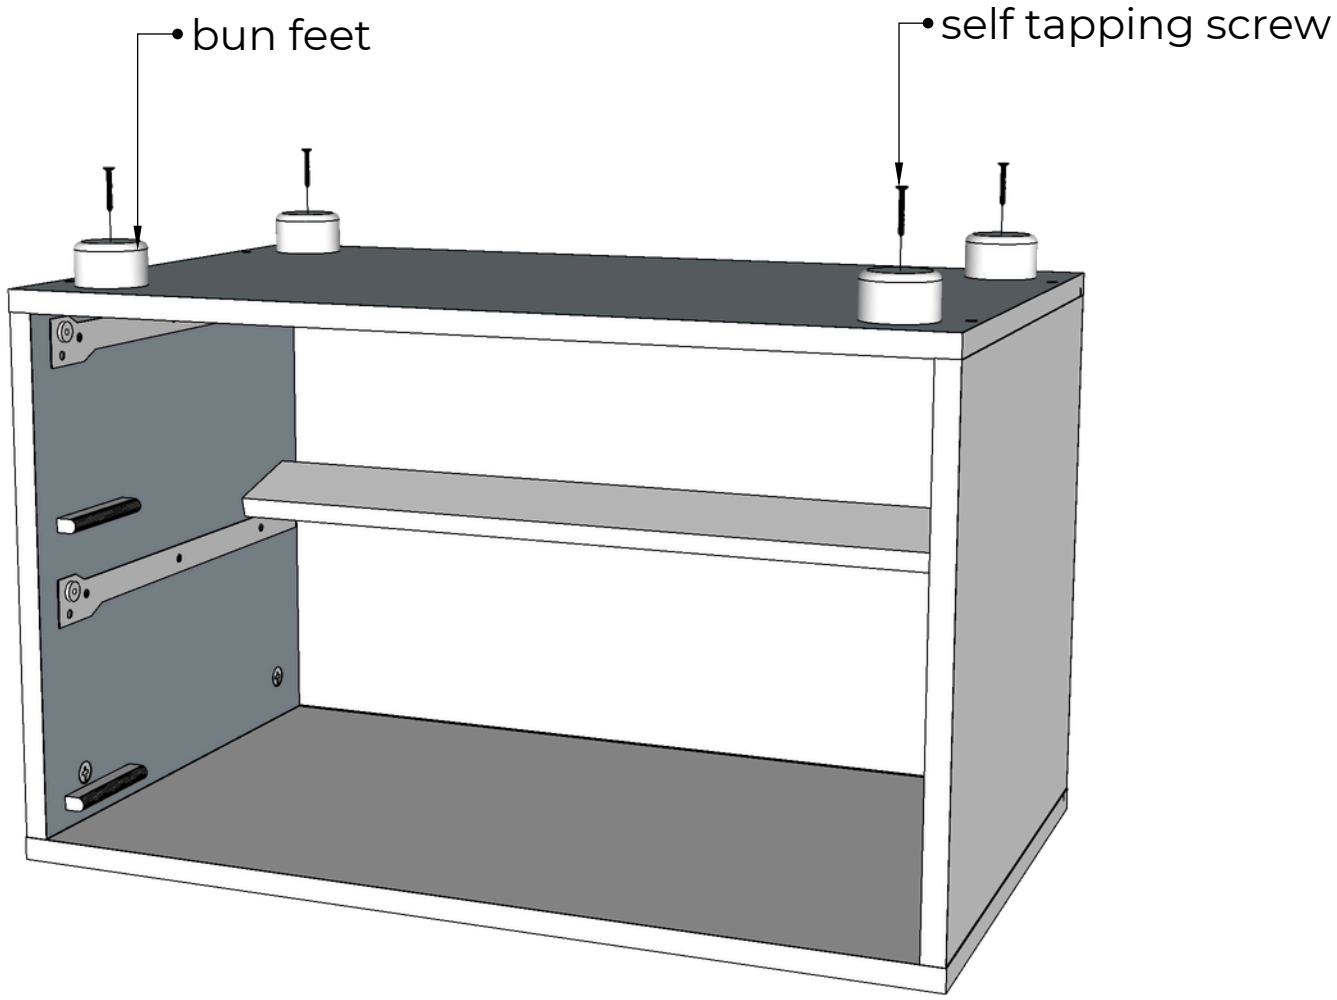

Body Assembly

Step 8


After drawer assembly is done, insert drawers into cabinet assembly by slightly tilting the drawer assembly downward and pressing forward. Make sure the wheels are running inside the guides.

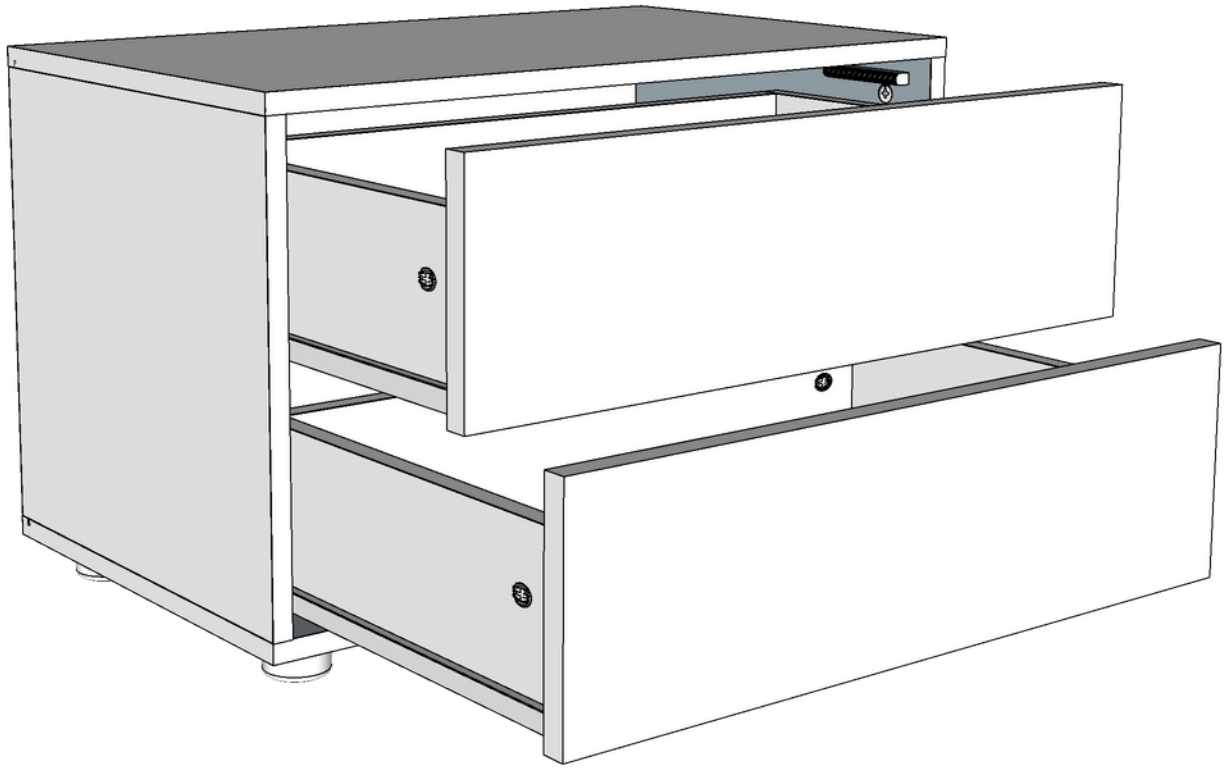

Body Assembly

Step 9


completed unit

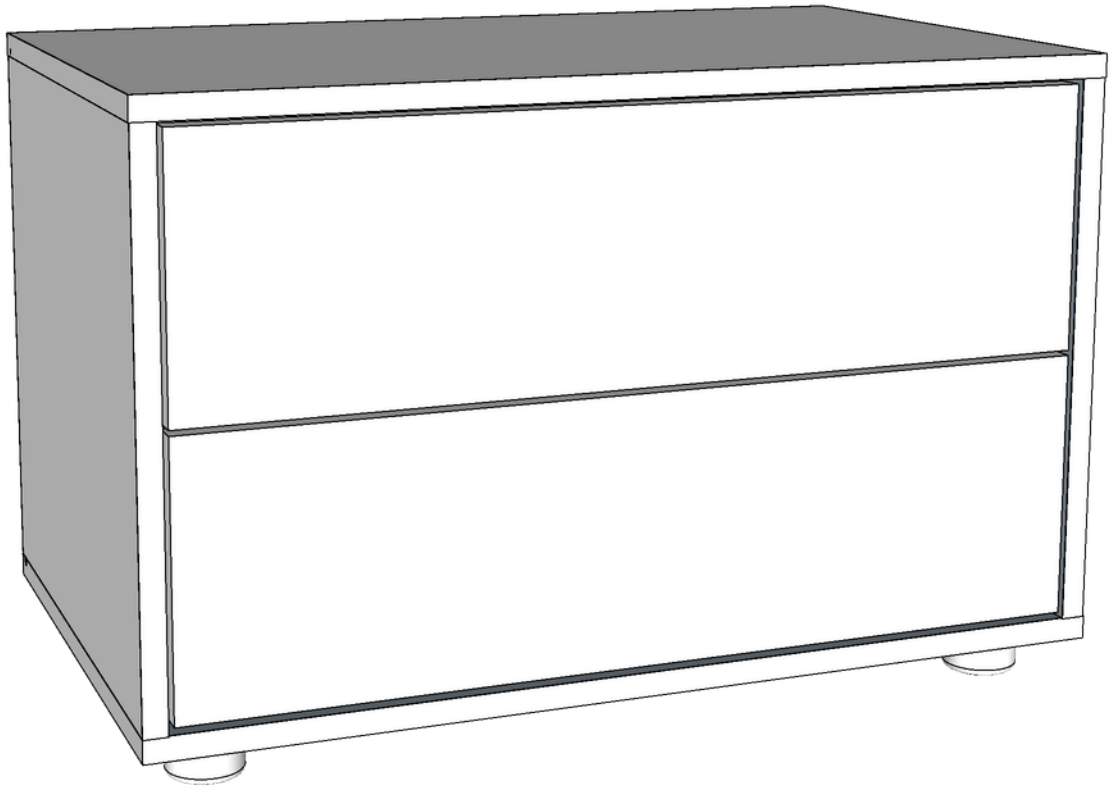

Drawer Assembly

Step 1


Insert cam pins**(D)** into drawer front**(6)** and drawer sides**(7)**

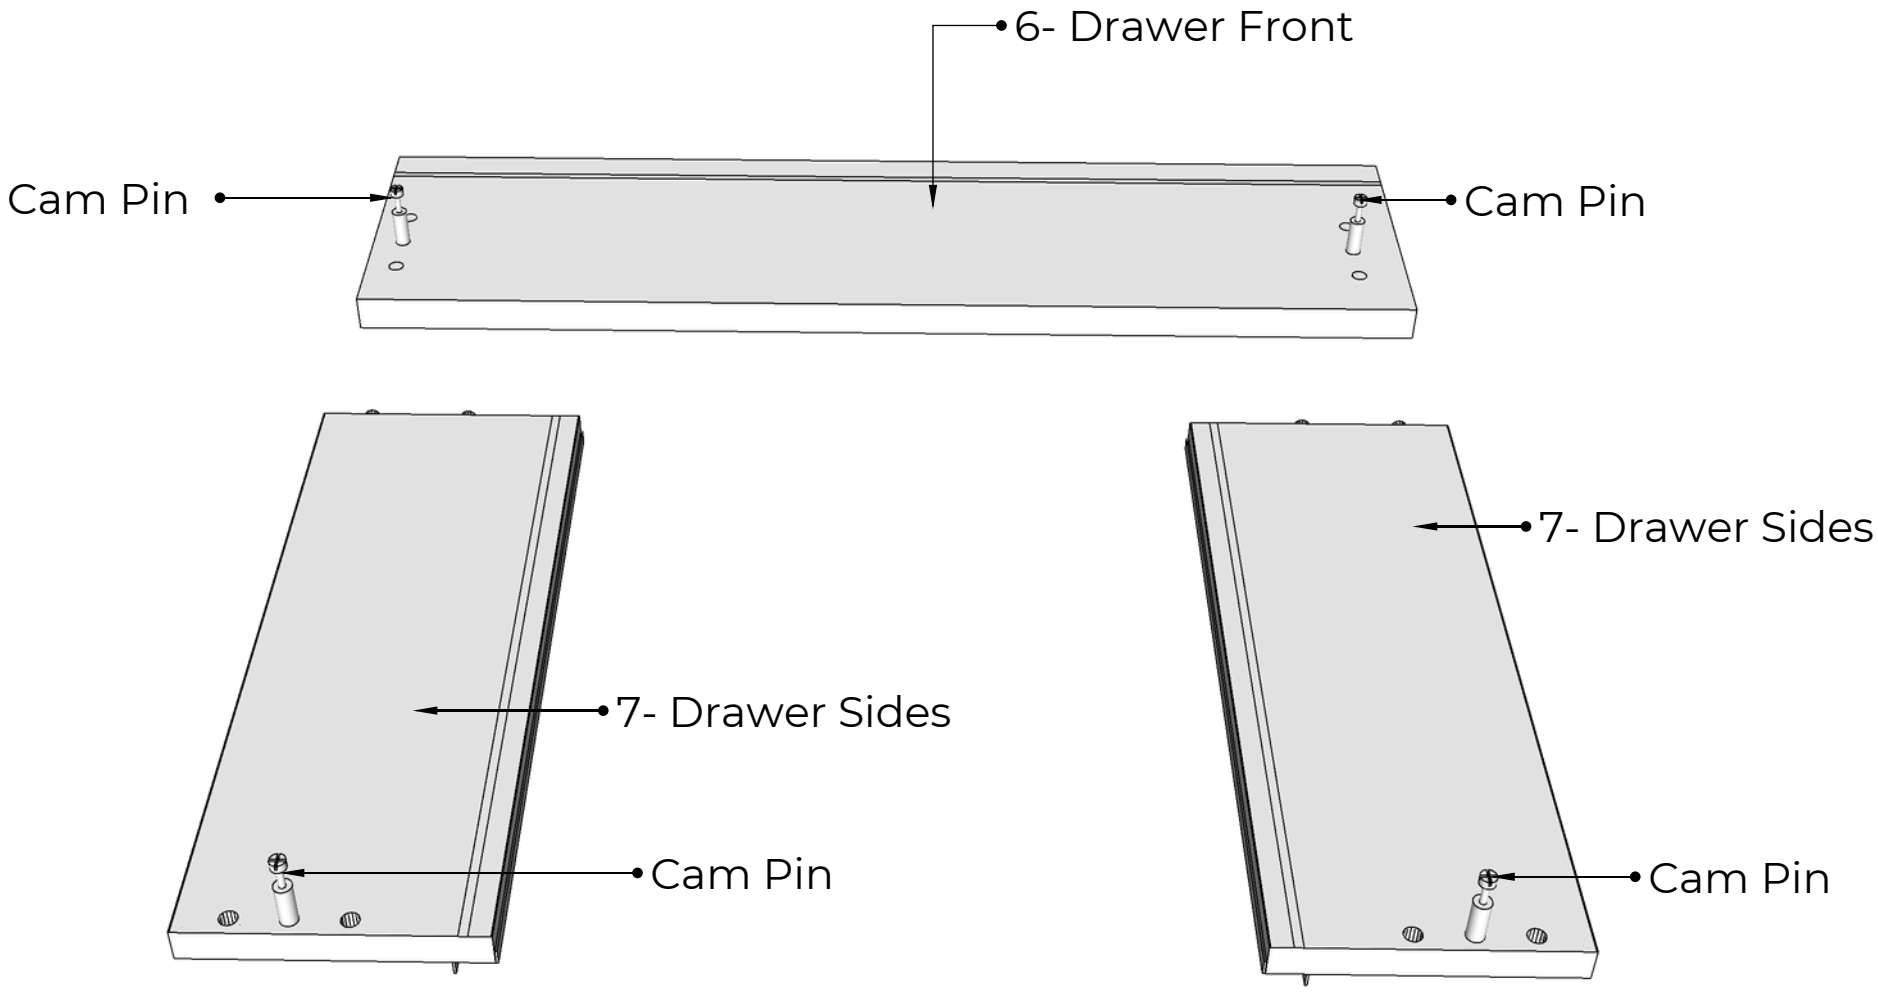

Step 2

Drawer Assembly


Insert cams**(C)** into large holes in drawer sides**(7)** and drawer rear**(8)**, ensuring the arrow on the cam faces nearest edge

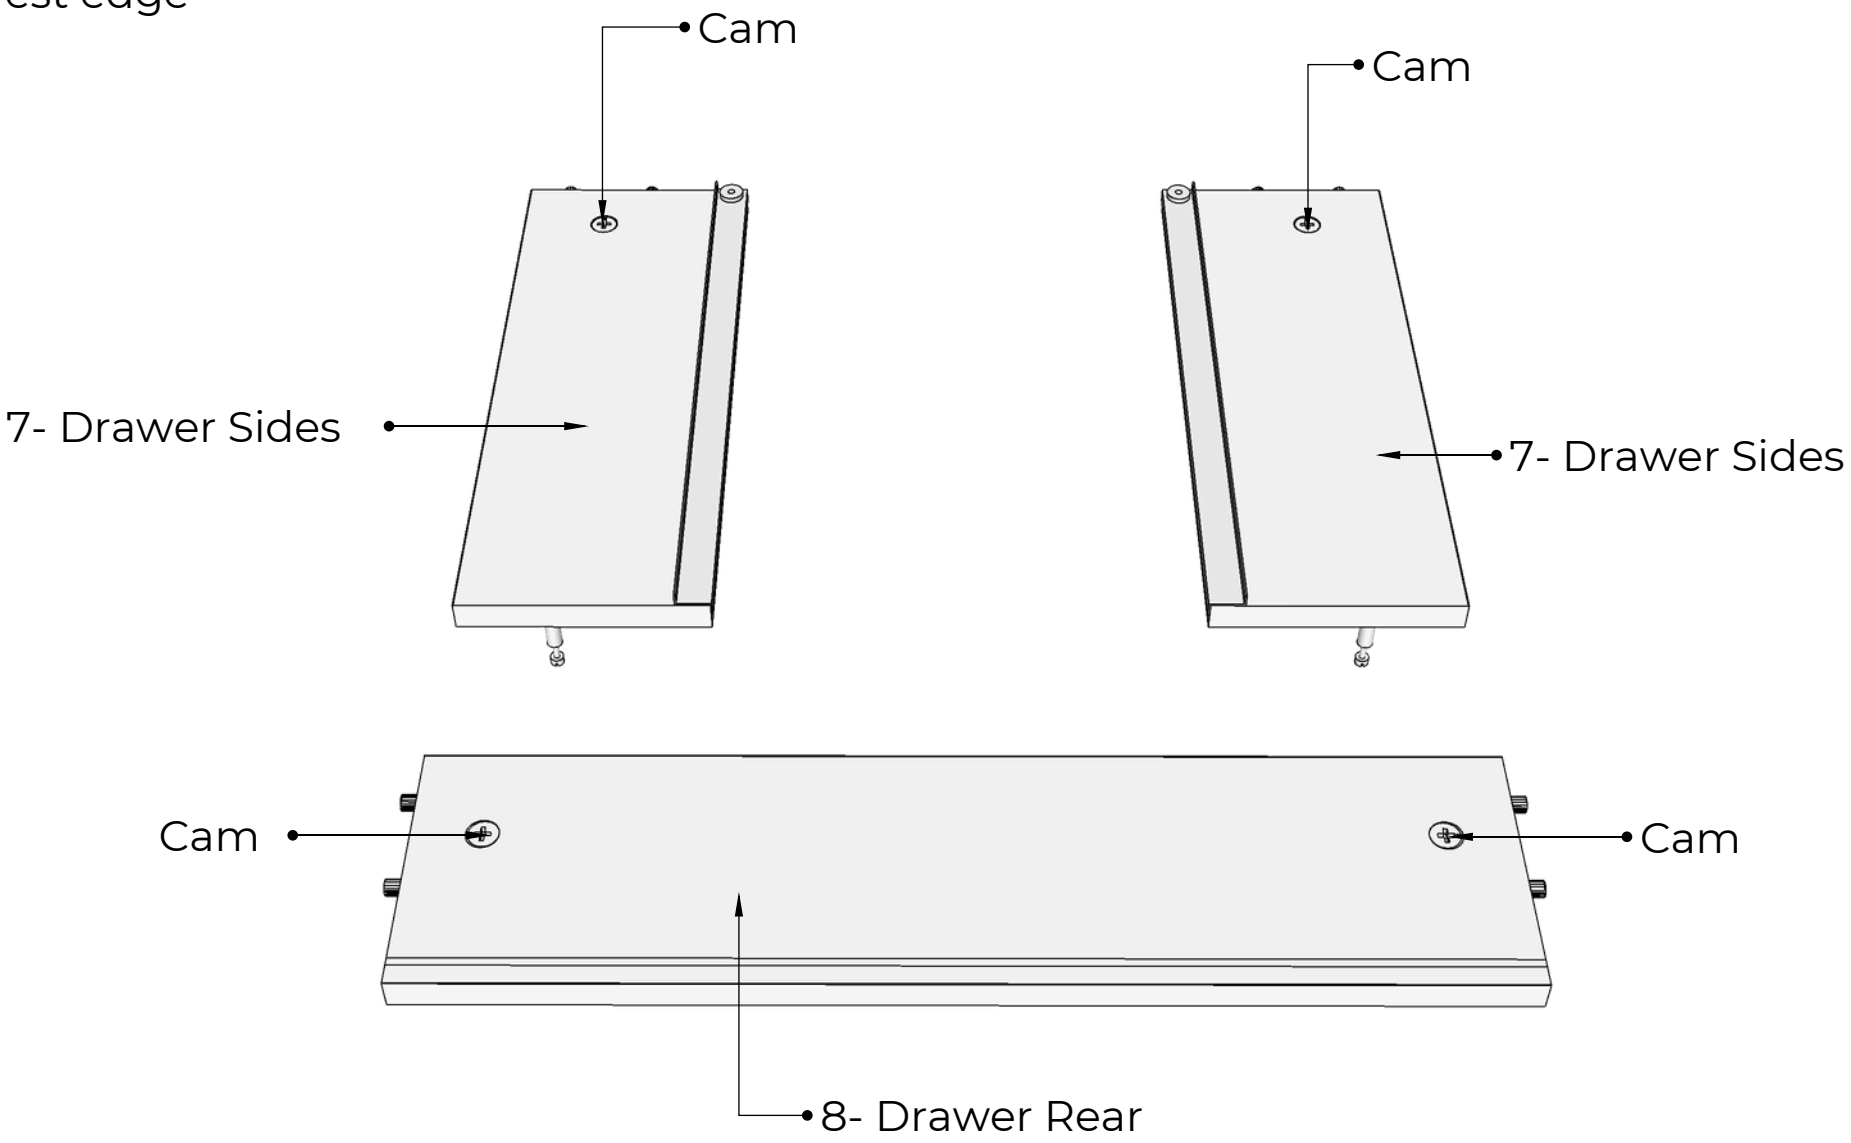

Drawer Assembly

Step 3


Attach drawer sides**(7)** to drawer rear**(8)** and tighten cams**(C)**

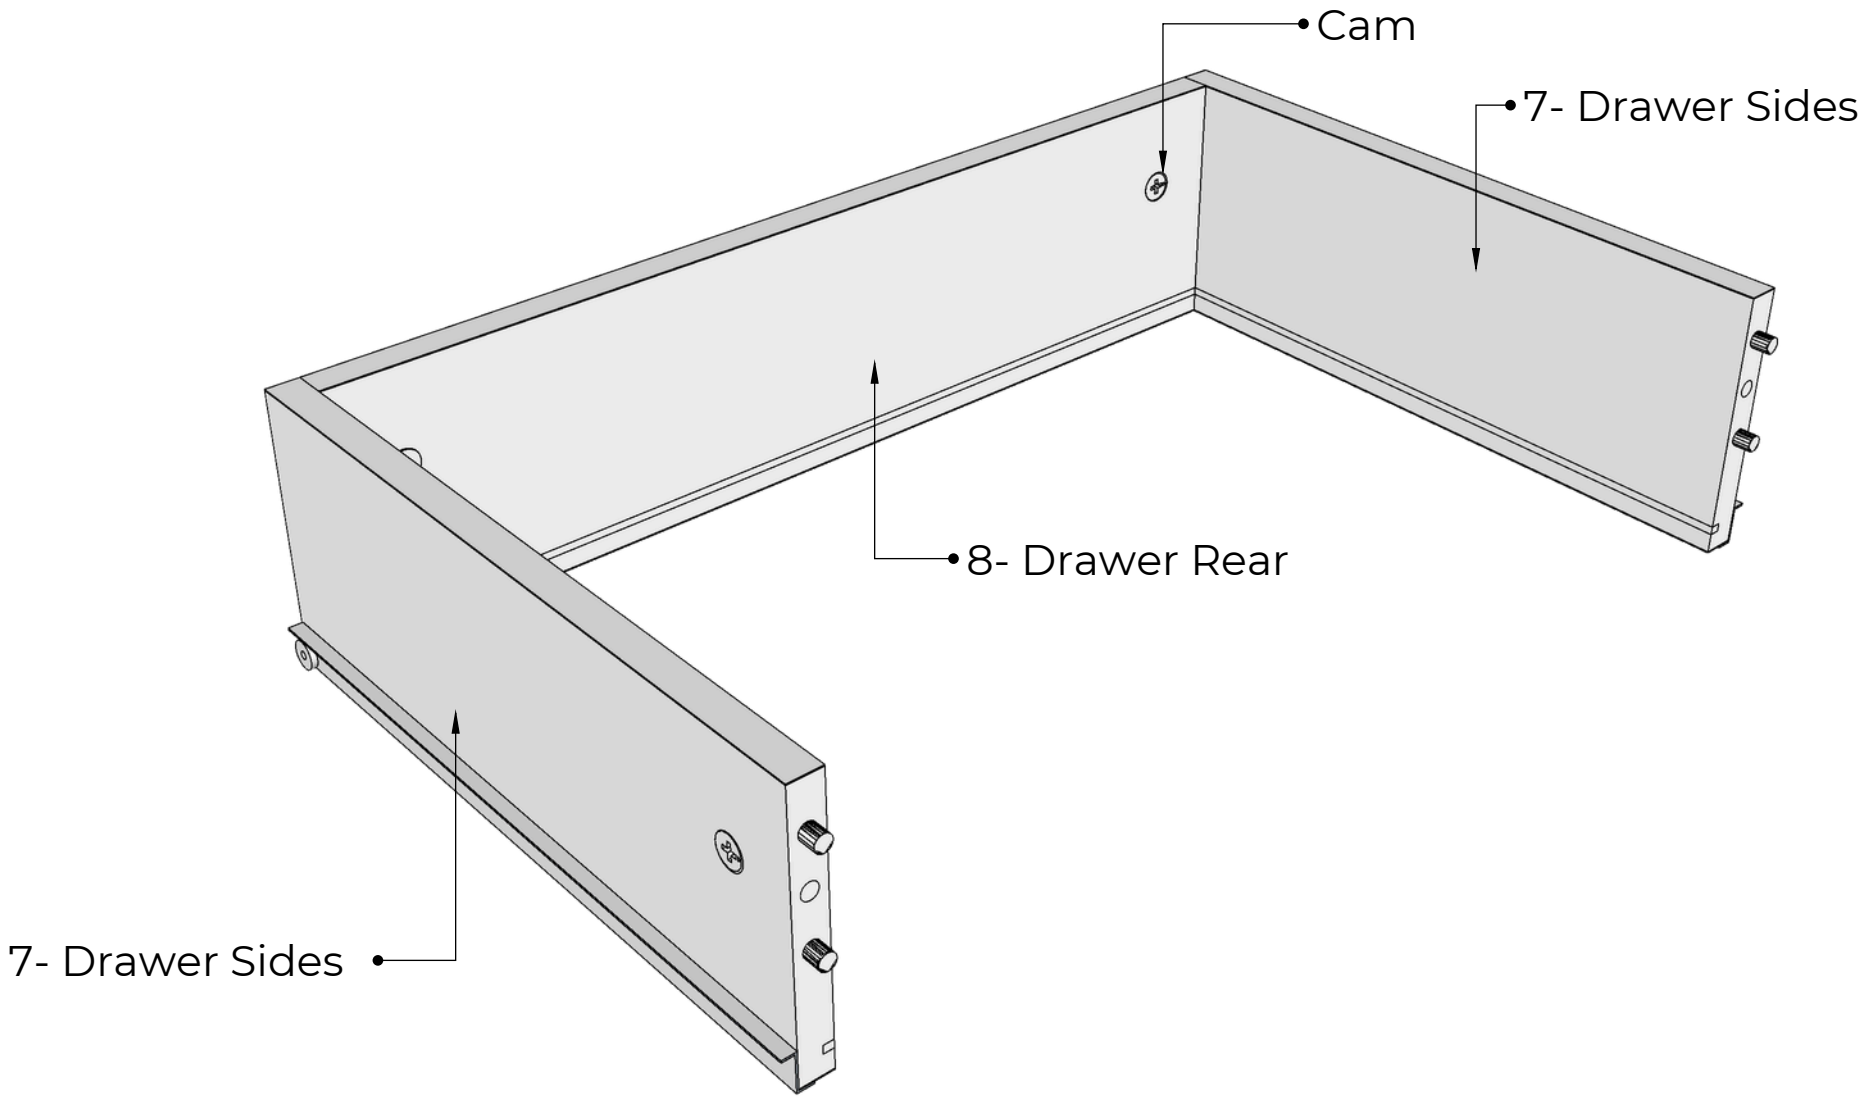

Drawer Assembly

Step 4

Slide drawer bottom**(5)** into the grooves on the drawer sides**(7)** and drawer rear**(8)**

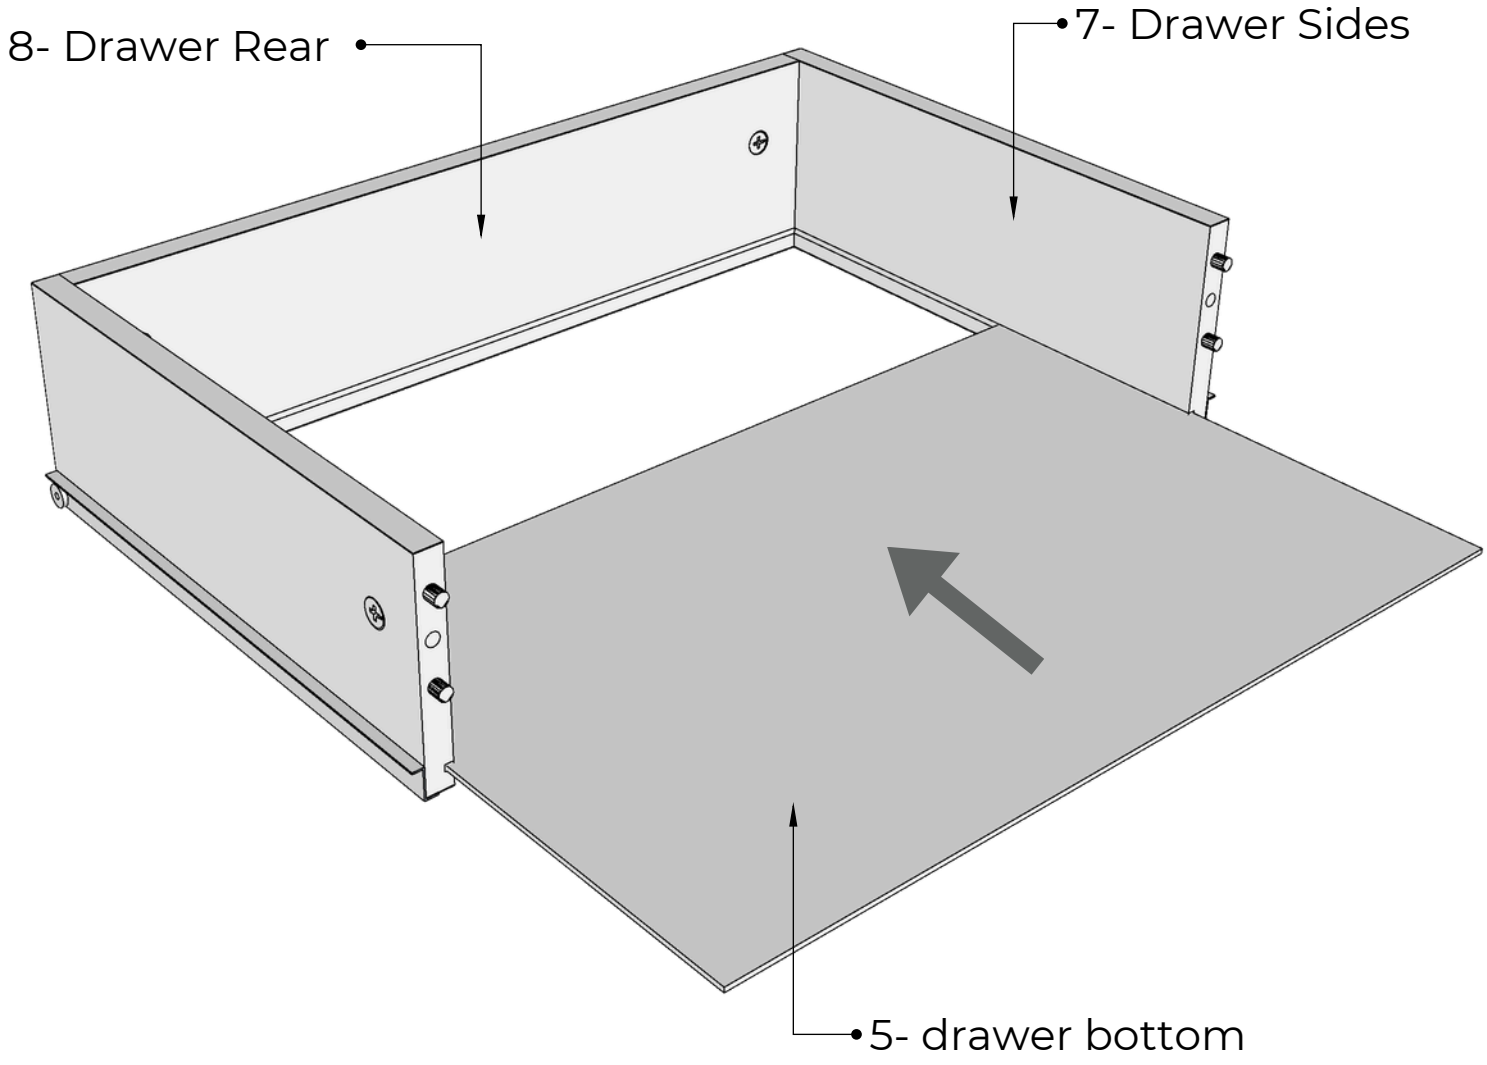

Step 5

Drawer Assembly

Attach drawer front**(6)** to drawer assembly by sliding the cam pins**(D)** into the holes on the drawer sides**(7)** and tightening the cams**(C)**
Ensure that the drawer bottom**(5)** fits into the groove in the drawer front**(6)**

