AMARA HEADBOARD ASSEMBLY INSTRUCTIONS

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to saftey testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create a beautifully space to feel comfortable in.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carfully read through the instructions- you are already on your way to create a beautifully functional space!



Set The Mood

Put on your favourite playlist, order a pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You Did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging.

Creating your home

Time to assemble 30 min - People needed 1 - Difficulty level 6/10 - Tools needed - Phillips scredriver - allen key (supplied)

AMARA HEADBOARD ASSEMBLY INSTRUCTIONS

Parts List

1.	Left Leg	X 1
2.	Right Leg	X 1
3.	Headboad Panel Assembled	X 1

Hardware

A

Cam Pins



x 4

B

Cam



x 4


WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall.



Phillips screwdrivers required. For quicker assembly, we recommend the use of a power drill on a low-speed setting.


Step 1

Turn headboard panel assembly upside down and insert cam pins**(A)** into small holes and cams**(B)** into large holes ensuring arrow on cam**(B)** faces nearest edge

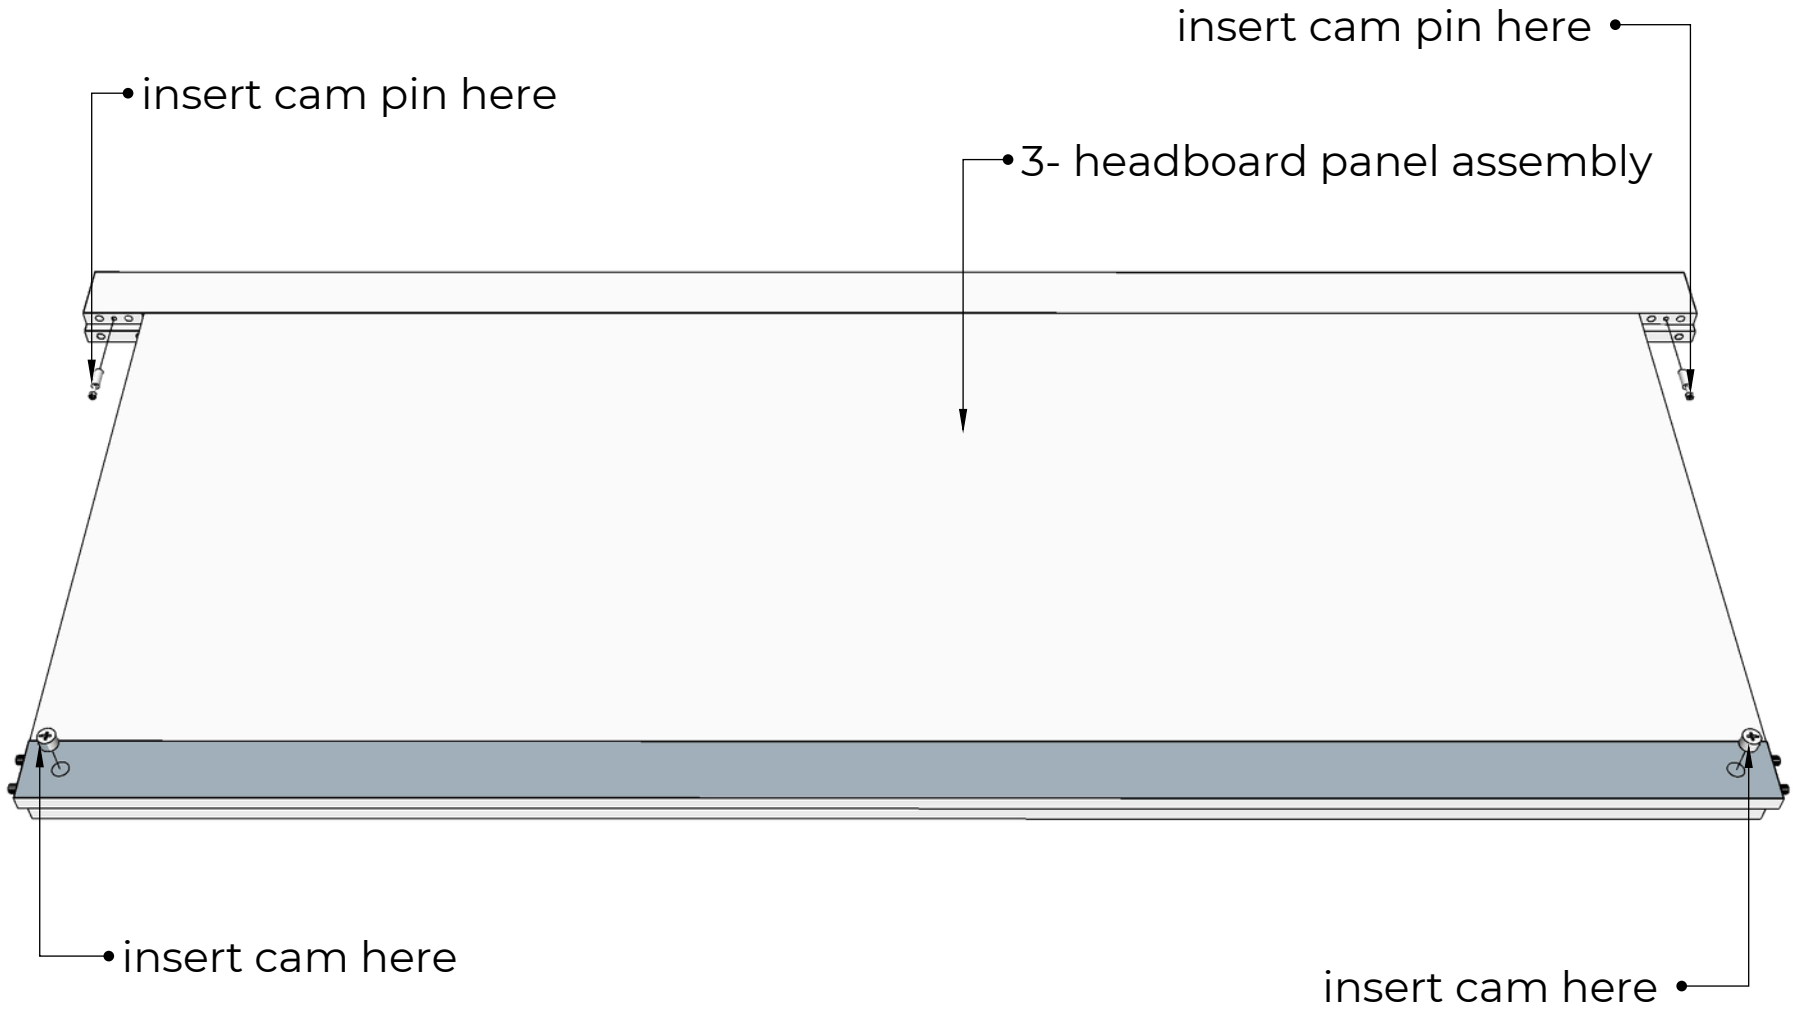


Step 2

Turn legs**(1,2)** upside down and insert cam pins**(A)** into small holes
and cams**(B)** into large holes ensuring arrow on cam**(B)** faces nearest edge

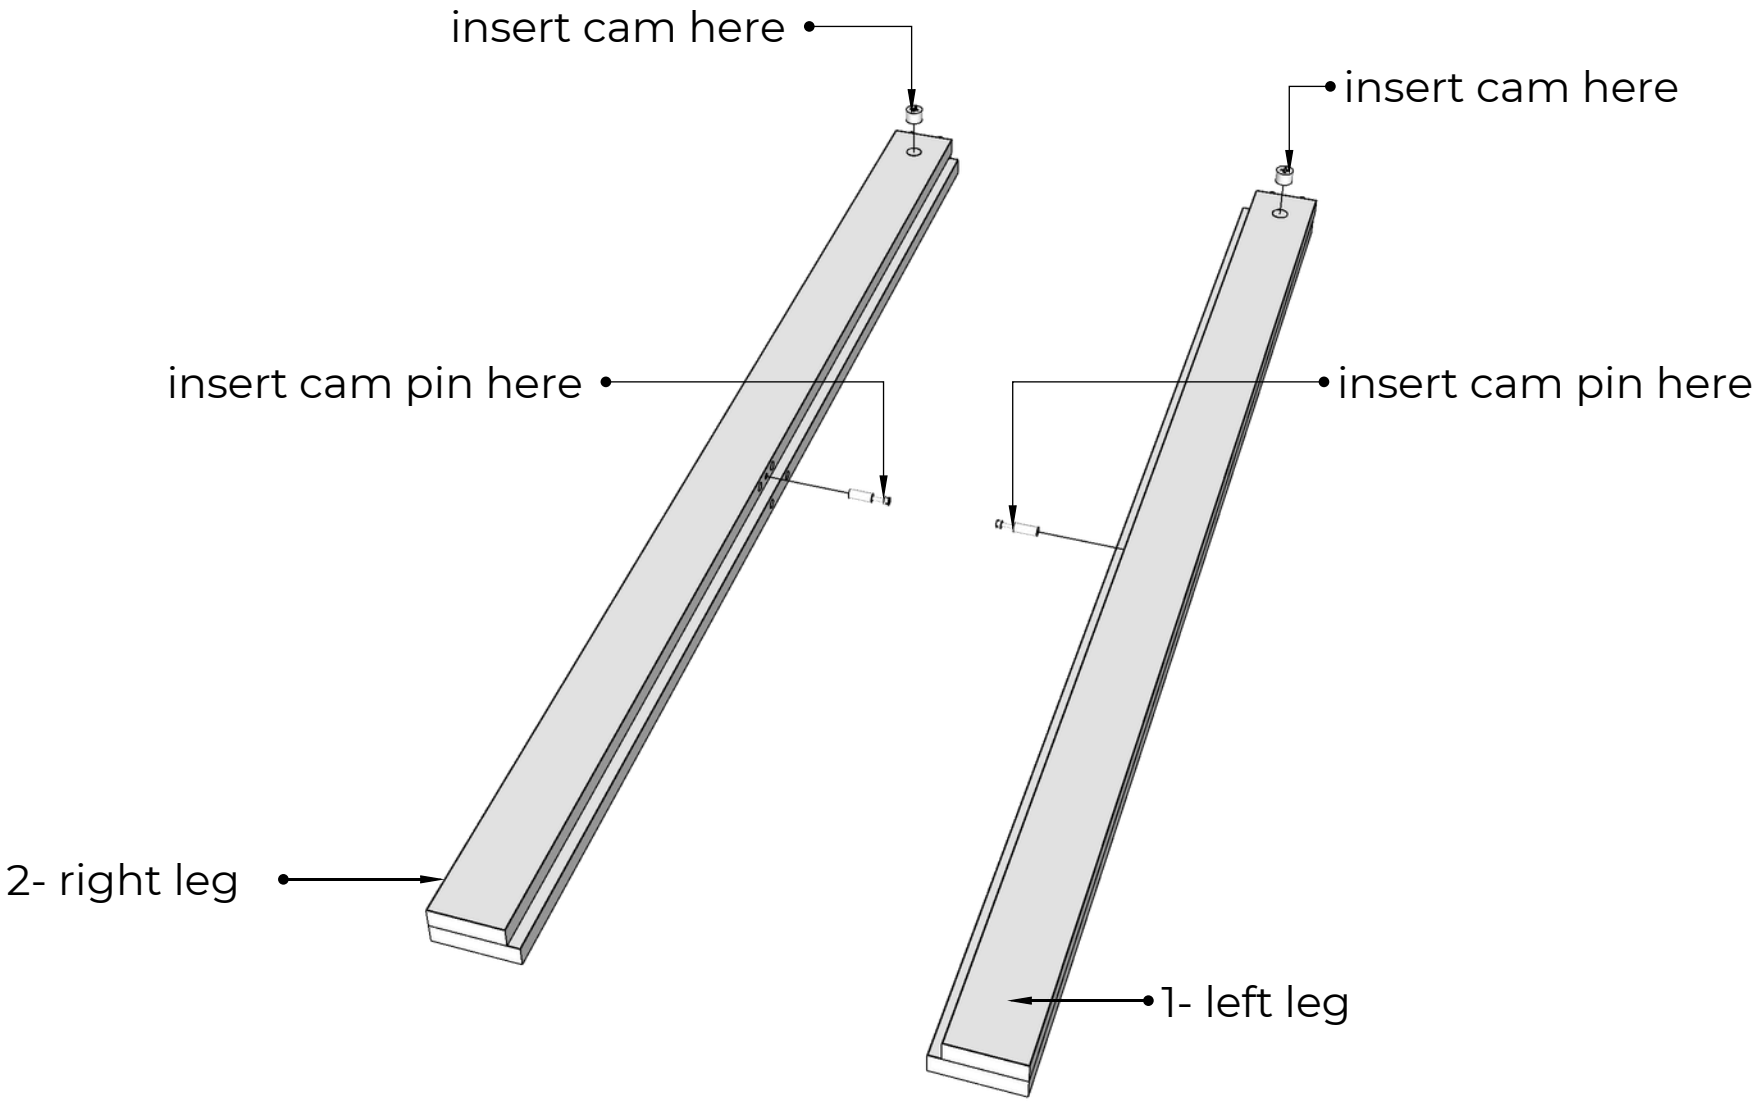


Step 3

Slightly angle the legs**(1,2)** sideways and let the dowels locate into the holes on the top of the legs**(1,2)**. Rotate the legs**(1,2)** at a right angle and let the cam pin**(A)** locate into the holes on the headboard assembly

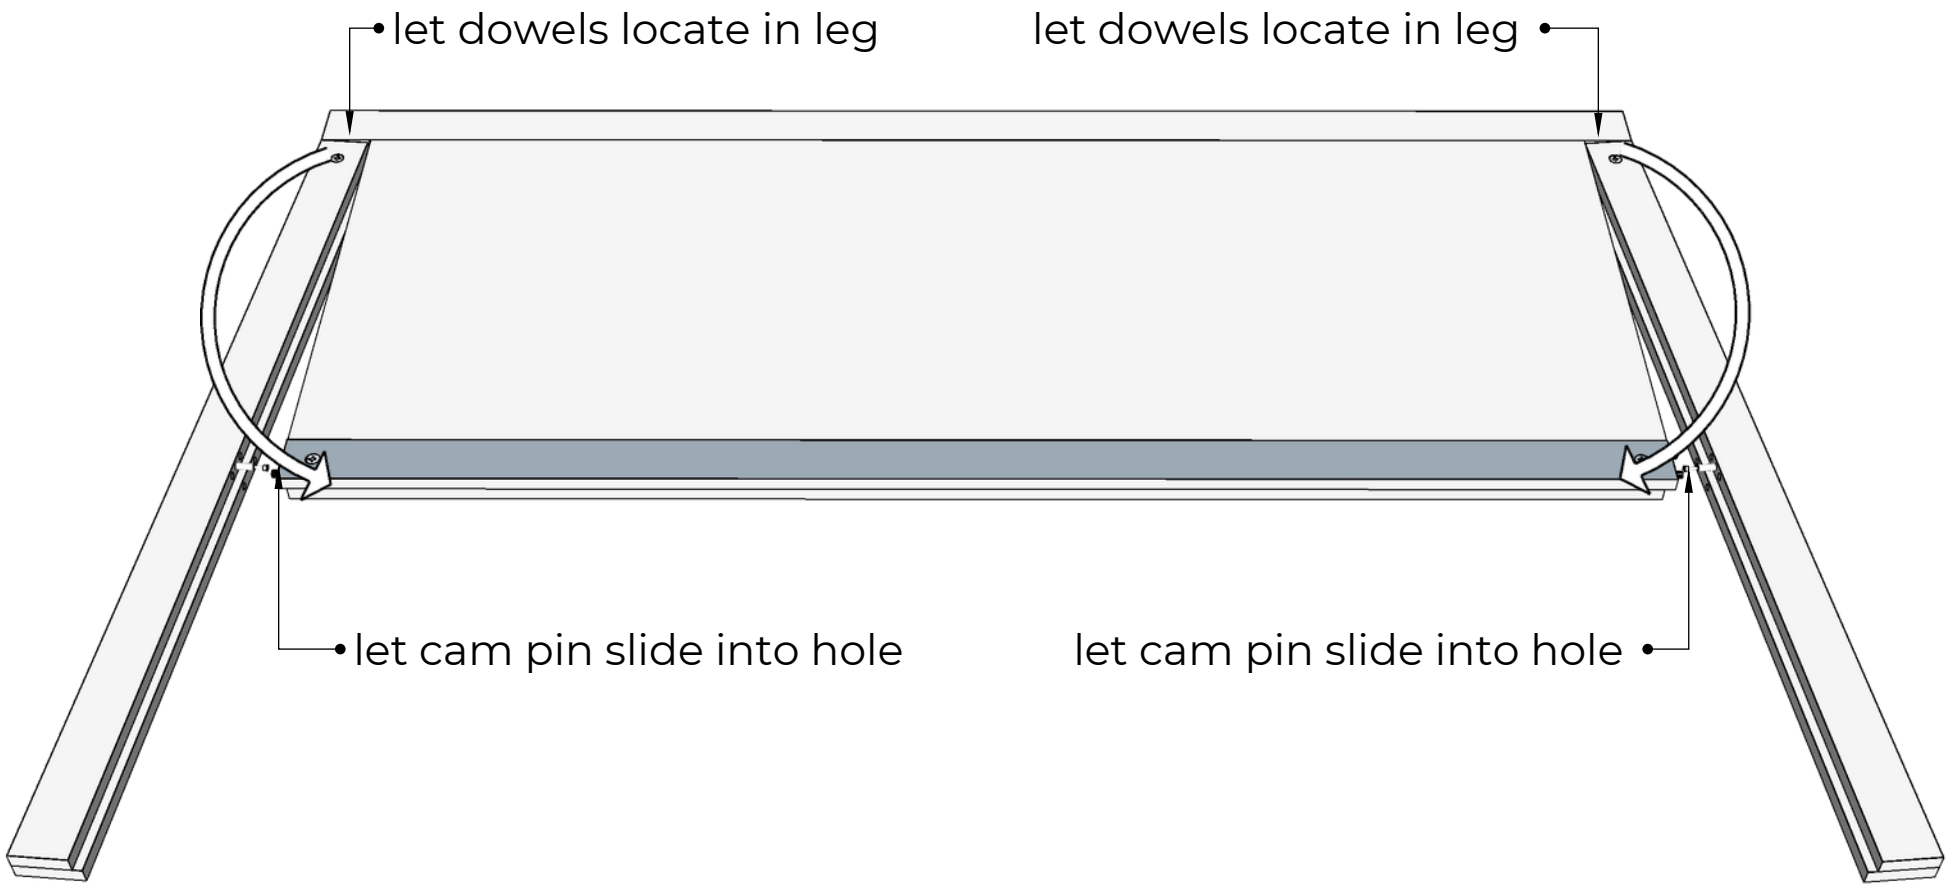

Step 4

After legs**(1,2)** are correctly seated, tighten cams**(B)**

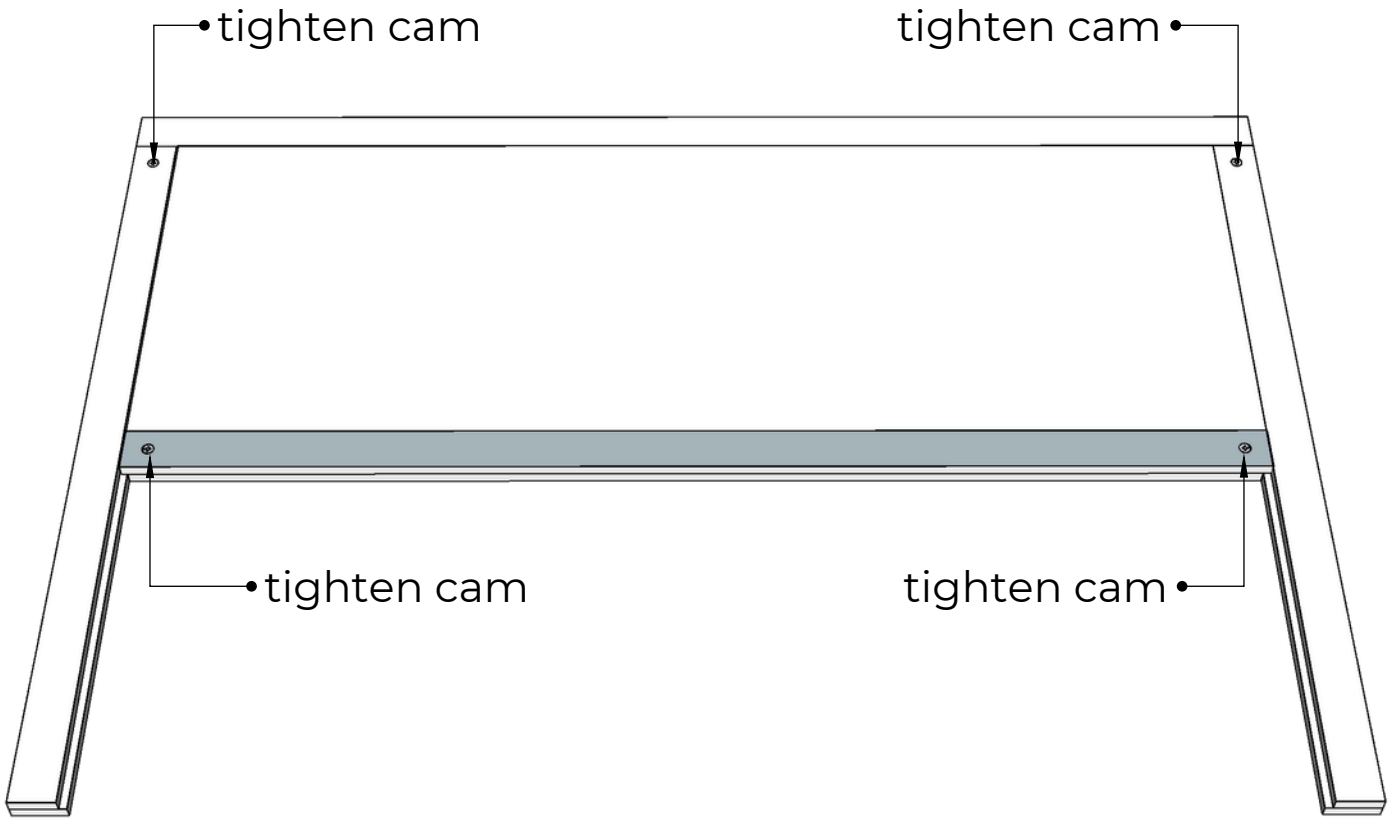

Assembled Product

