










## AURUM WARDROBE


### Parts List (13 parts)

<b>1.</b> Top	x 1	<b>8.</b> Large Door	x 1
<b>2.</b> Bottom	x 1	<b>9.</b> Small Door	x 1
<b>3.</b> Side Right	x 1		
<b>4.</b> Side Left	x 1		
<b>5.</b> Shelves	x 3		
<b>6.</b> Cleat	x 3		
<b>7.</b> Foil Backing	x 1		

Make sure you have all the parts listed and organize them by type and size. You will also need a Phillips or star screwdriver.

### Hardware

<b>A</b>	Confirmat Screws (Use the supplied Allen Key)	x 8	
<b>B</b>	Allen Key	x 1	
<b>C</b>	Cam	x 18	
<b>D</b>	Cam Pin	x 18	
<b>E</b>	Cone Leg H150 Black G-Screws (10 x 16)	x 4 x 16	
<b>F</b>	Ferrari Hinge Ferrari Screws (8 x 16)	x 6 x 36	
<b>G</b>	Knurled Knob Black Screws 4 x 16	x 2 x 2	

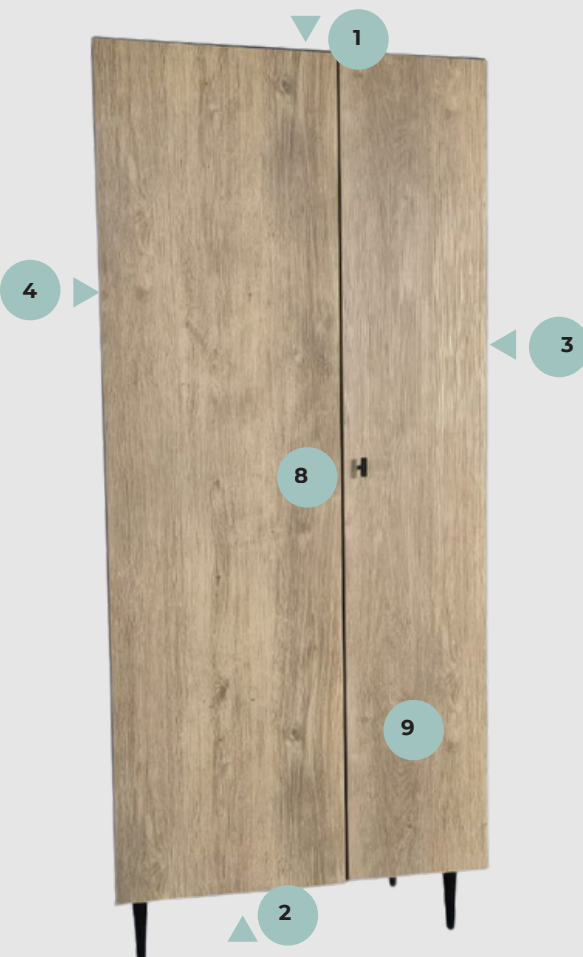

### Cupboard Assembly

- ▶ Place Side Right (3) and Side Left (4) on a soft surface with holes facing up. Screw in the Cam Pin (D) into all small holes on the sides (3,4)
- ▶ Start with the Bottom (2) and Side Left (4) in a "L-Shape" with the groove closest to the surface you are building on. Screw in 2 x Confirmat Screws (A) through the Bottom into the left side.
- ▶ Place Cams (C) into the big holes on the 3 x Shelves (5) and 3 x Cleats (6) with the small arrows facing towards the outside hole.
- ▶ Fit 3 of the Shelves to the Left Side (4) by sliding them onto the Cam Pins and Wooden dowel and tightening the Cams(C) with a screwdriver. Do the same with 3 x Cleats onto the 3 x Cam Pins (D) closest to the groove.
- ▶ Fit Side Right (3) by again fitting its Cam Pins into the shelves and tighten Cams. Using 2 x Confirmat Screws (A), Screw through the bottom into the right side.
- ▶ Attach the 4 x Legs (E) to the bottom using the supplied screws and pre-drilled holes.
- ▶ Slide in the backing (7) between the sides into the groove. Make sure that it is fully seated in the groove on the bottom panel.
- ▶ Place the Top (1) onto the sides, making sure that the Backing fits into the groove. Screw in 4 x Confirmat Screws (A) through the Top into the Sides (3,4). Attach Hinges (F) to Doors (8,9) using supplied screws. Screw the doors to the sides - see special markings (2 Mini holes for each hinge) Use the adjustable holes (larger holes on slide plate) to fix the door to the wardrobe. Once the door is in place and adjusted to the correct height, fix it in place with the remaining 2 x holes on the slide plate. Hinges can be adjusted in 4 directions by using set screws on hinges.
- ▶ Screw Knobs (G) to Doors

### CLEANING INSTRUCTIONS

**NB: Clean with a damp cloth only.**

Excessive water will cause damage, voiding the warranty.



**me&co**  
QUALITY, AFFORDABLE FURNITURE



# AURUM WARDROBE



## Cupboard Assembly

- ▶ Place Side Right (3) and Side Left (4) on a soft surface with holes facing up. Screw in the Cam Pin into all small holes on the sides (3,4)
- ▶ Start with the Bottom (2) and Side Left (4) in a L-Shape with the groove closest too the surface you are building on. Screw in 2 x Confirmat Screws (A) through the Bottom into the left side.
- ▶ Place Cams (B) into the big holes on the 3 x Shelves (5) and 3 x Cleats (6) with the small arrows facing towards the outside hole.
- ▶ Fit 3 of the Shelves to the Left Side (4) by sliding them onto the Cam Pins and Wooden dowel and tightening the Cams with a screwdriver. Do the same with 3 x Cleats onto the 3 x Cam Pins closest to the groove.
- ▶ Fit Side Right (3) by again fitting its Cam Pins into the shelves and tighten Cams. Using 2 x Confirmat Screws, Screw through the bottom into the right side.
- ▶ Attach the 4 x Legs to the bottom using the supplied screws and pre-drilled holes.
- ▶ Slide in the backing between the sides into the groove. Make sure that it is fully seated in the groove on the bottom panel.
- ▶ Place the Top (1) onto the sides, making sure that the Backing fits into the groove. Screw in 4 x Confirmat Screws (A) through the Top into the Sides.  
Attach Hinges (E) to Doors (8,9) using supplied screws. Screw the doors to the sides - see special markings (2 Mini holes for each hinge) Use the adjustable holes (larger holes on slide plate) to fix the door to the wardrobe. Once the door is in place and adjusted to the correct height, fix it in place with the remaining 2 x holes on the slide plate. Hinges can be adjusted in 4 directions by using set screws on hinges.
- ▶ Screw Knobs (C) to Doors



There we go! You are all done. Congratulations!

made in sov