AVERY BEDSIDE ASSEMBLY INSTRUCTIONS

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to saftey testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create a beautifully space to feel comfortable in.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carfully read through the instructions- you are already on your way to create a beautifully functional space!



Set The Mood

Put on your favourite playlist, order a pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You Did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging.

Creating your home

Time to assemble 30 min - People needed 1 - Difficulty level 6/10 - Tools needed - Phillips scredriver - allen key (supplied)

AVERY BEDSIDE ASSEMBLY INSTRUCTIONS

Parts List

1.	Left Side	X 1	**6.**	Drawer Front	x 2
2.	Right Side	X 1	**7.**	Drawer Side	x 4
3.	Bottom	X 1	**8.**	Drawer Rear	x 2
4.	Top	X 1	**9.**	Cleat	x 1
5.	Drawer Bottom	x 2	**10.**	Backing 3mm	x 1

Hardware

A

Confirmat Screws
(use supplied Allen Key)



x 4

B

Drawer Runners
12 x Runner Screws



x 2

C

Cam



x 14

D

Cam Pins



x 14

E

Handle & Screws



x 2

F

Cone Leg H150 Black
G-Screws (x16)



x 4

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall.




Phillips screwdrivers required. For quicker assembly, we recommend the use of a power drill on a low-speed setting.

CABINET ASSEMBLY

Step 1


Insert and tighten cam pins**(D)** into small holes in top panel**(4)**

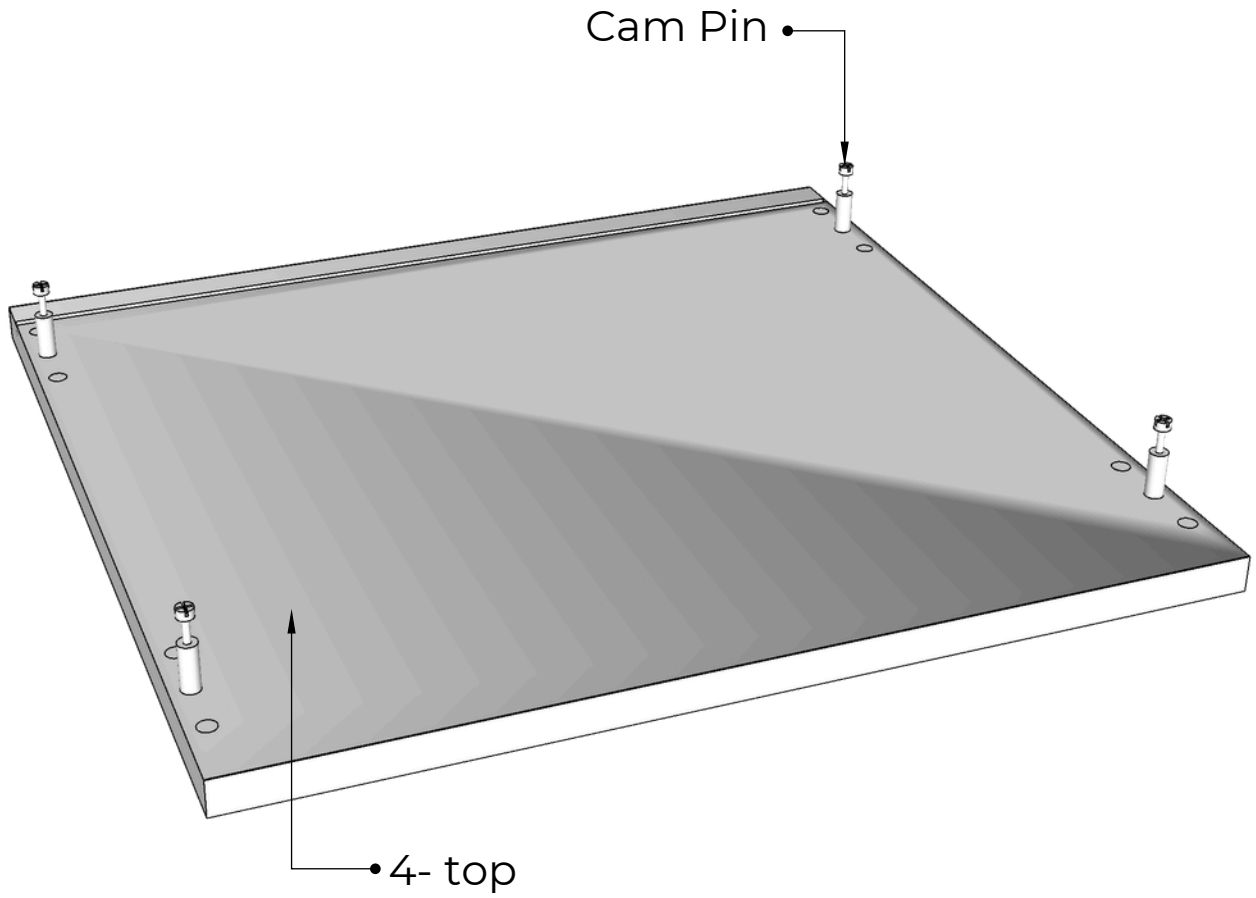

CABINET ASSEMBLY

Step 2


Attach drawer runners**(B)** to sides left**(1)** and side right**(2)** taking note of marked area
Insert cams**(C)** into big holes in left side**(1)**and right side**(2)** also cleat**(9)** with arrow on cam facing nearest edge.
Insert and tighten cam pins**(D)** into small holes on left side**(1)** and right side**(2)**

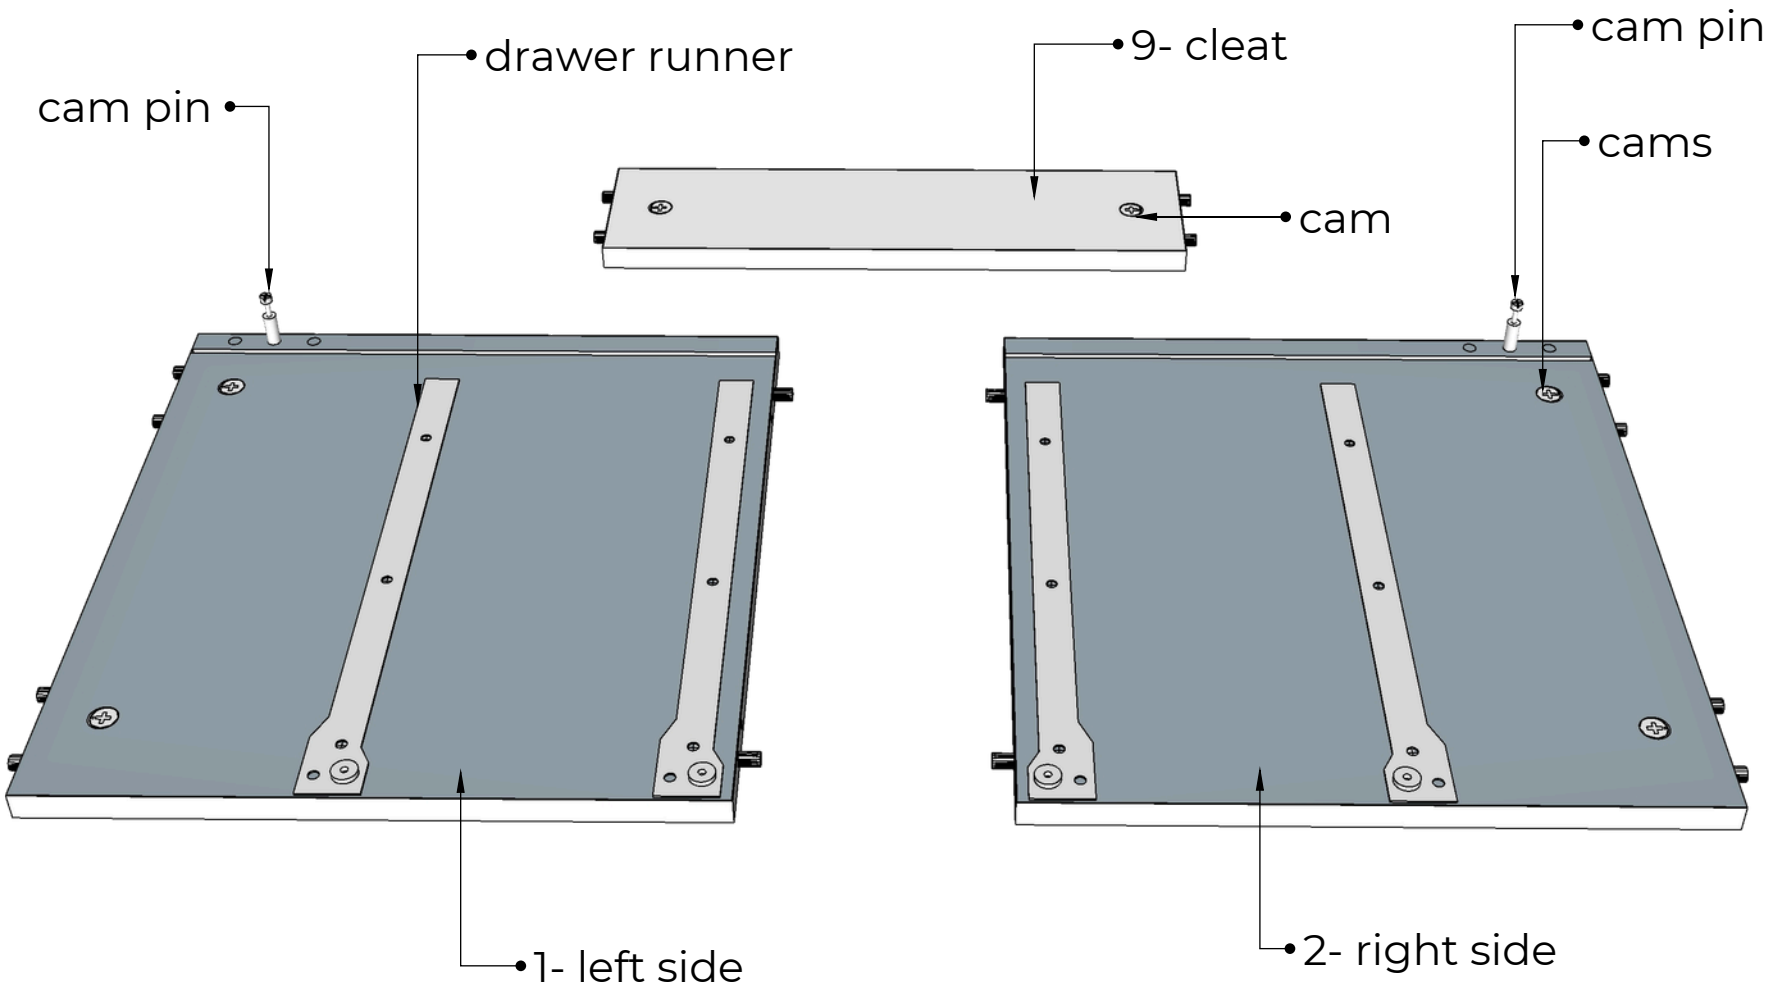

CABINET ASSEMBLY

Step 3


Attach cleat**(9)** to left side**(1)** and right side**(2)** and fasten cams**(C)** in cleat**(9)**

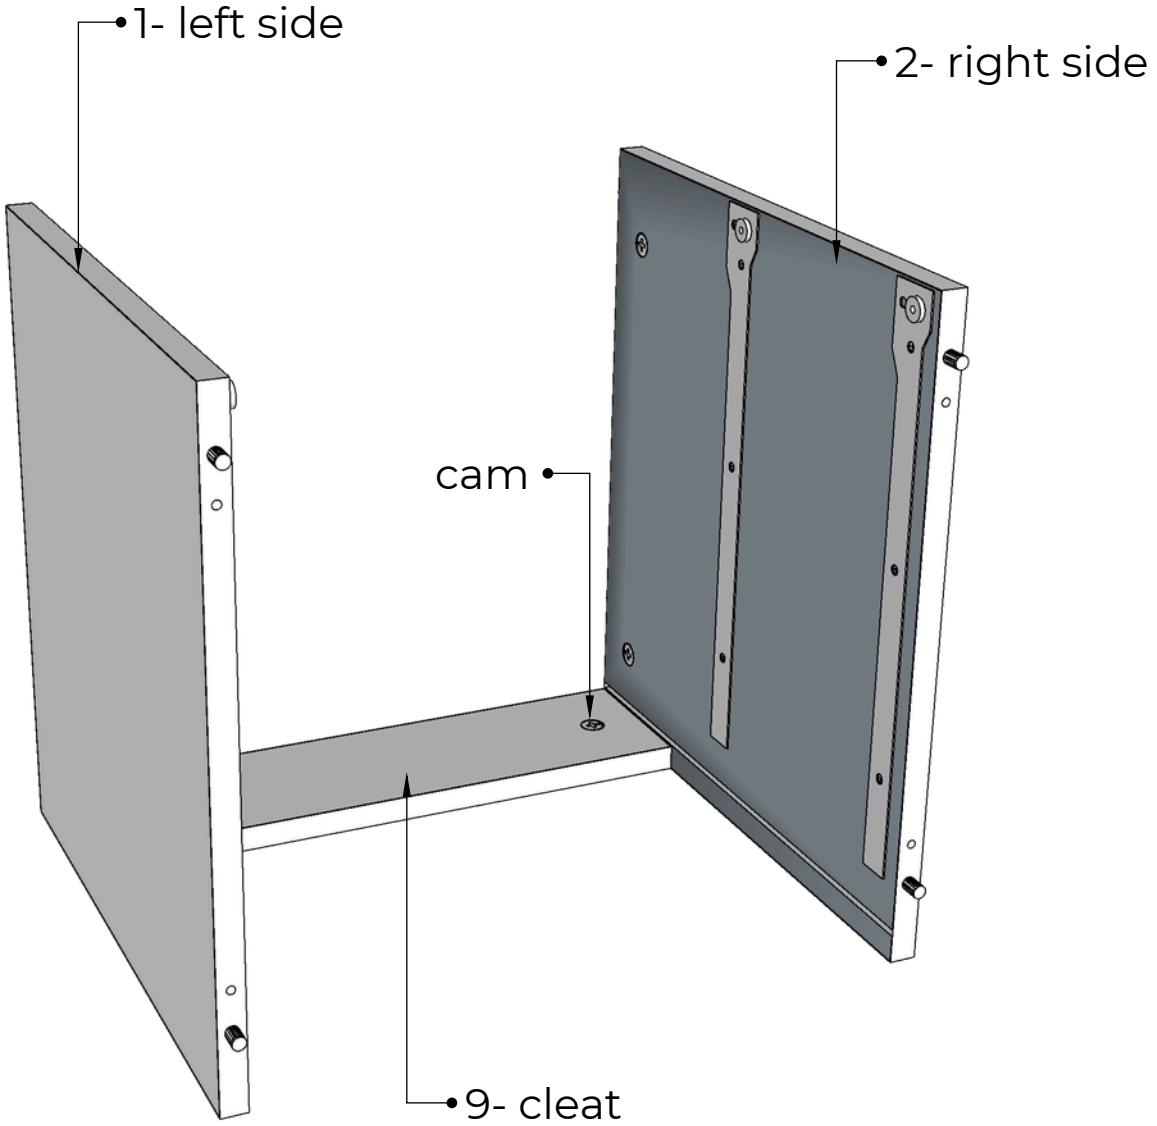

CABINET ASSEMBLY

Step 4


Align the cam pins**(D)** in the top**(4)** with the holes in the edges of the left side**(1)** and right side**(2)** and insert the cam pins**(D)** through the cams**(C)**.
Tighten cams**(C)** in left side**(1)** and right side**(2)**

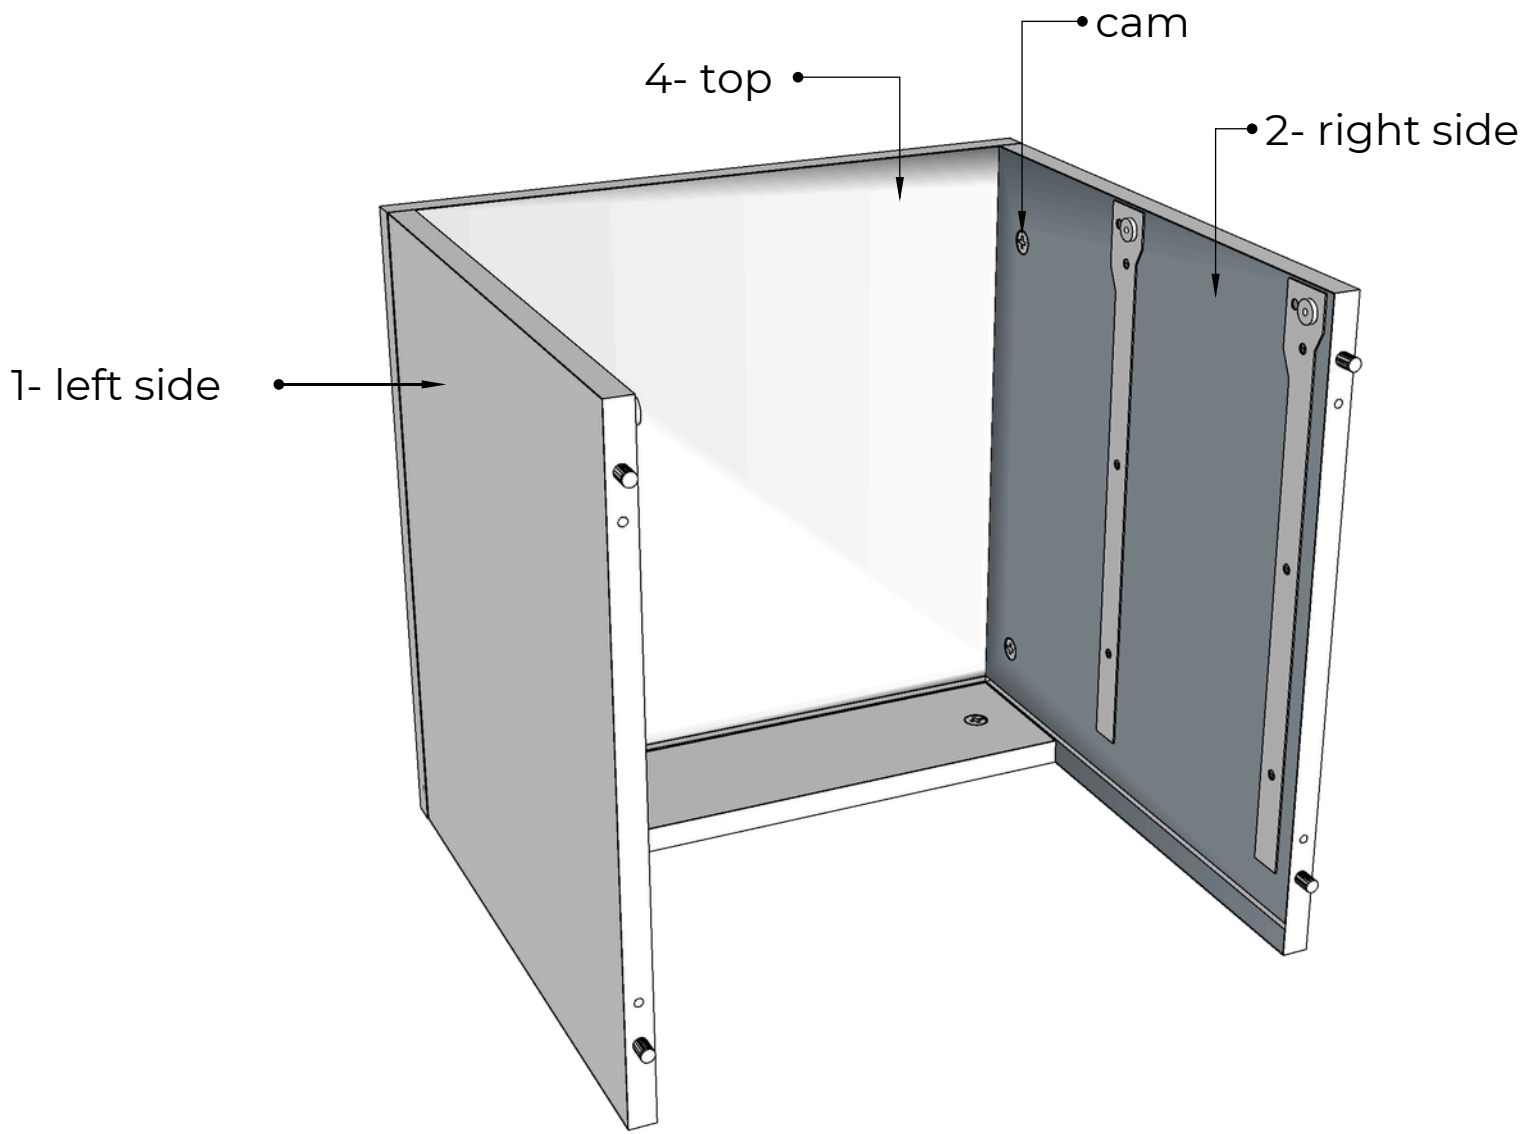

CABINET ASSEMBLY

Step 5


Slide backing**(10)** panel into groove on left side(1) and right side**(2)** while also ensuring that the backing**(10)** panel fits into the groove in the top panel**(4)**

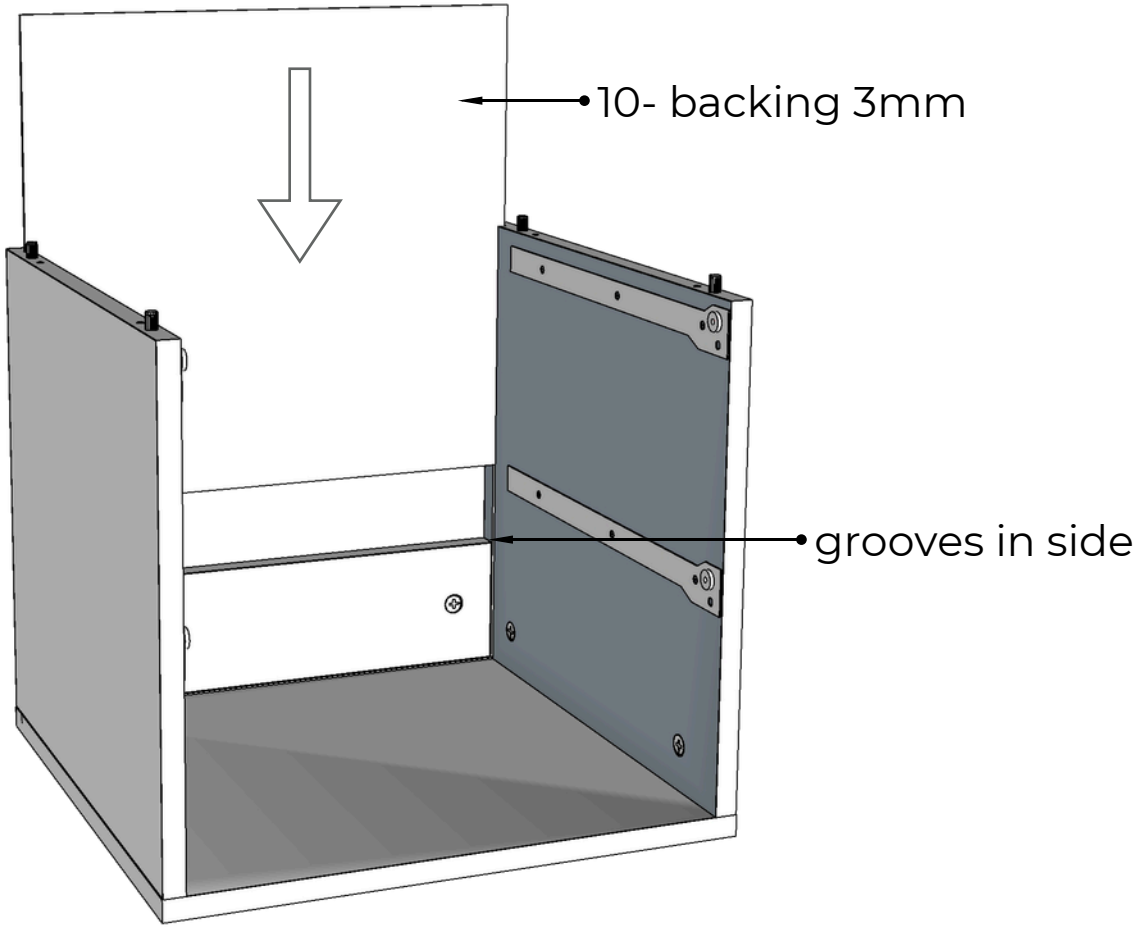

CABINET ASSEMBLY

Step 6


Align bottom panel**(3)** over assembly and secure in place with confirmat screws**(A)**

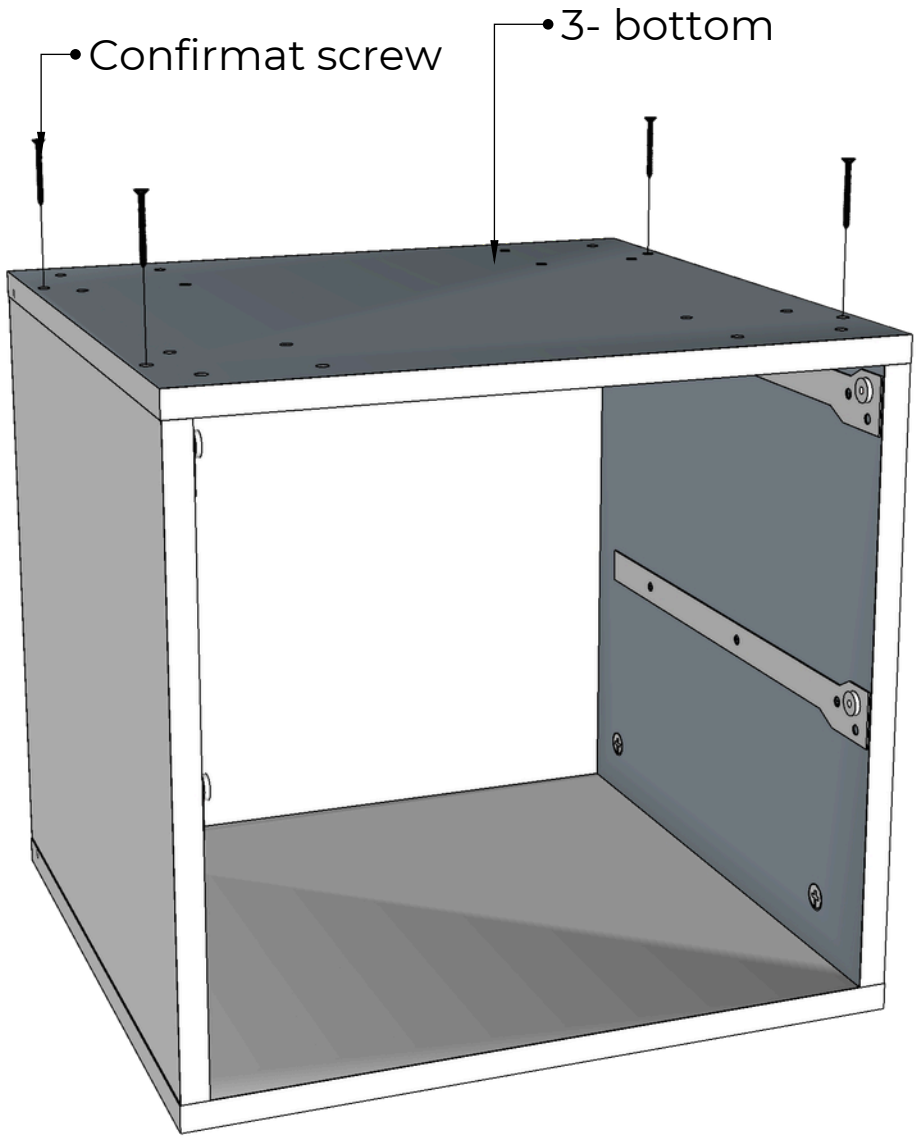

CABINET ASSEMBLY

Step 7


Attach legs**(F)** to bottom**(3)** with supplied screws in pre-drilled holes

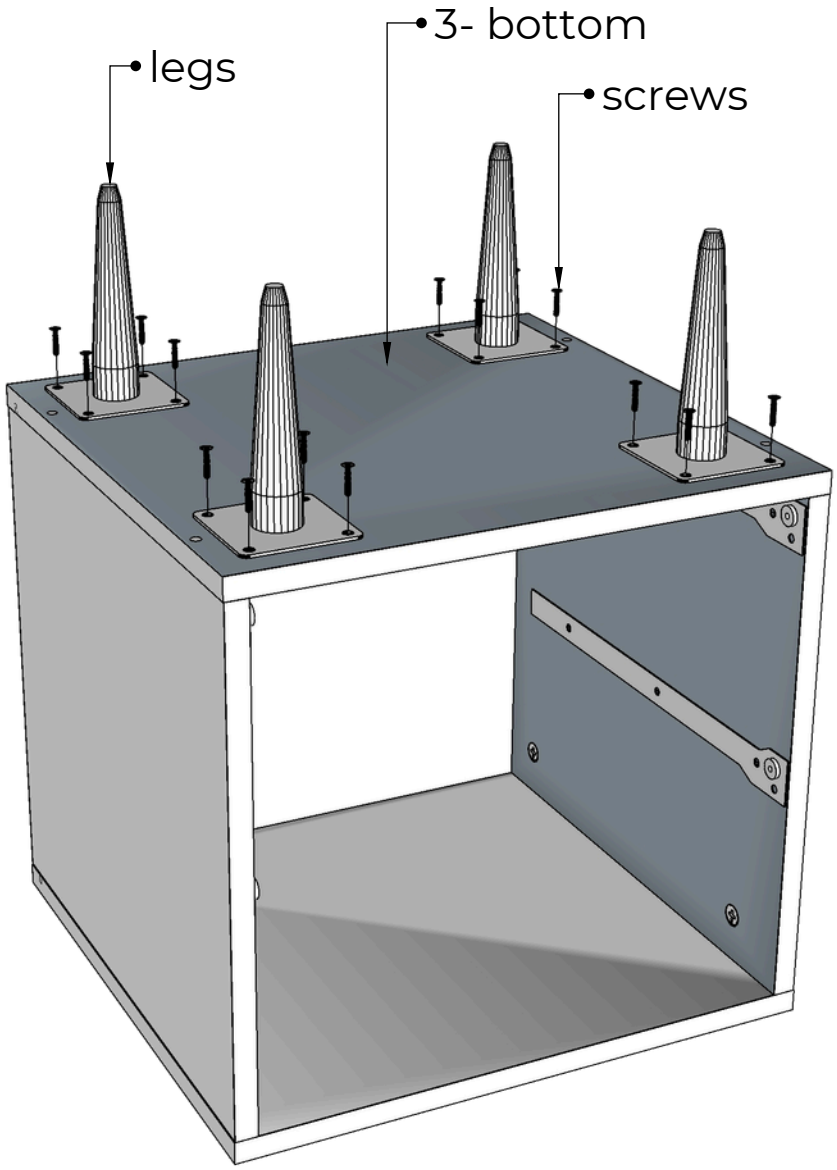

CABINET ASSEMBLY

Step 8

After drawer assembly is done, insert drawers into cabinet assembly by slightly tilting the drawer assembly downward and pressing forward. Make sure the wheels are running inside the guides.

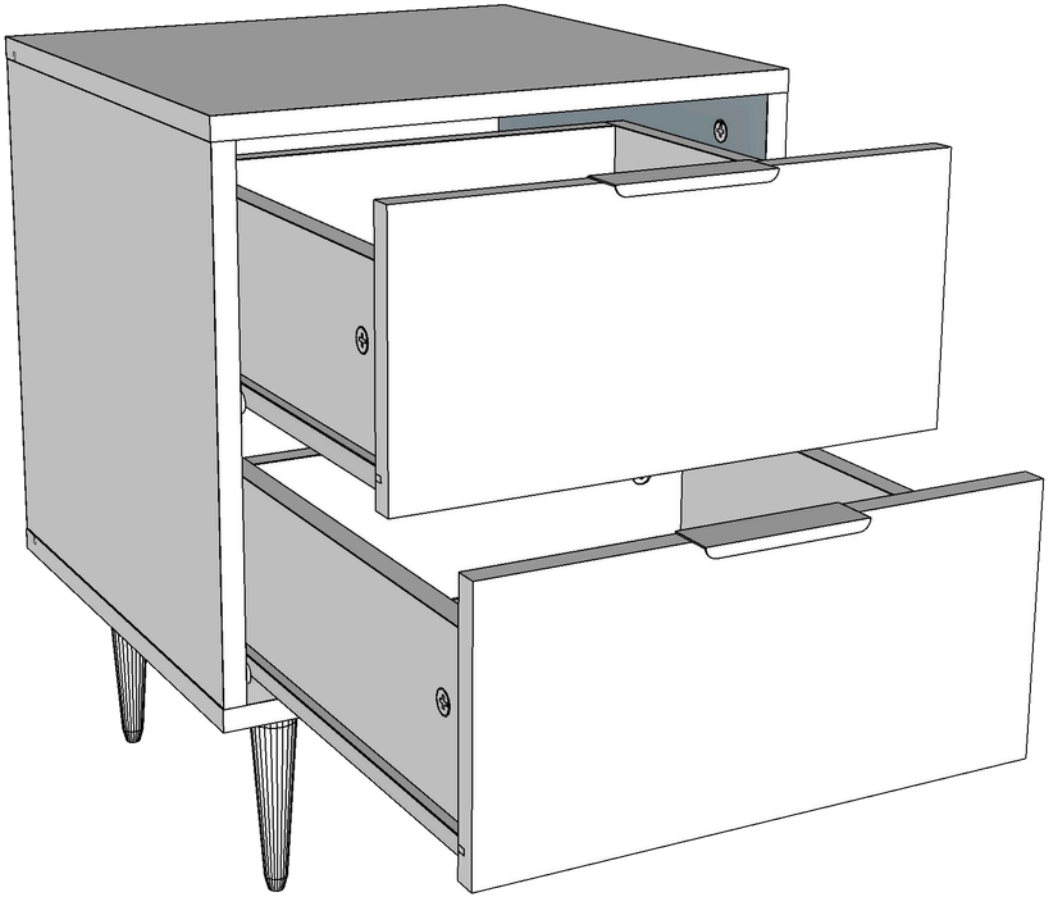

CABINET ASSEMBLY

Step 9


Completed unit



DRAWER ASSEMBLY

Step 1


Insert cam pins**(D)** into drawer front**(6)** and drawer sides**(7)**

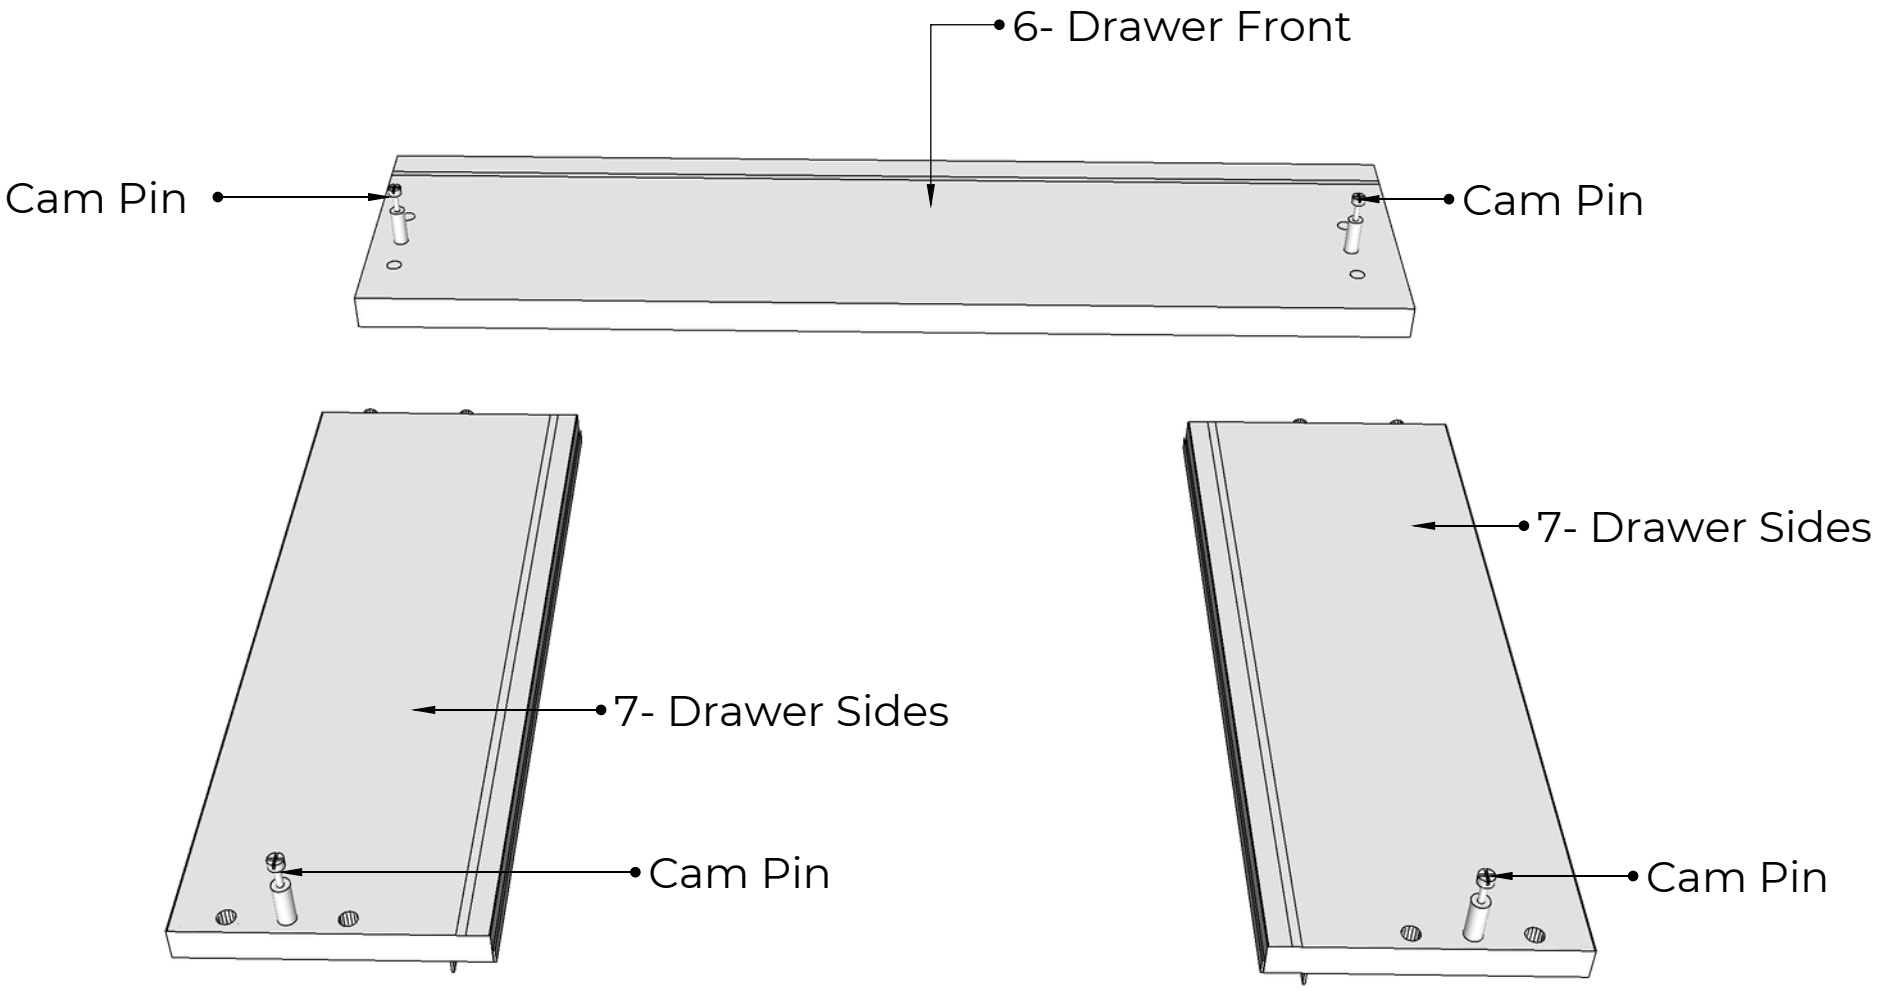

DRAWER ASSEMBLY

Step 2


Insert cams**(C)** into large holes in drawer sides**(7)** and drawer rear**(8)**, ensuring the arrow on the cam faces nearest edge

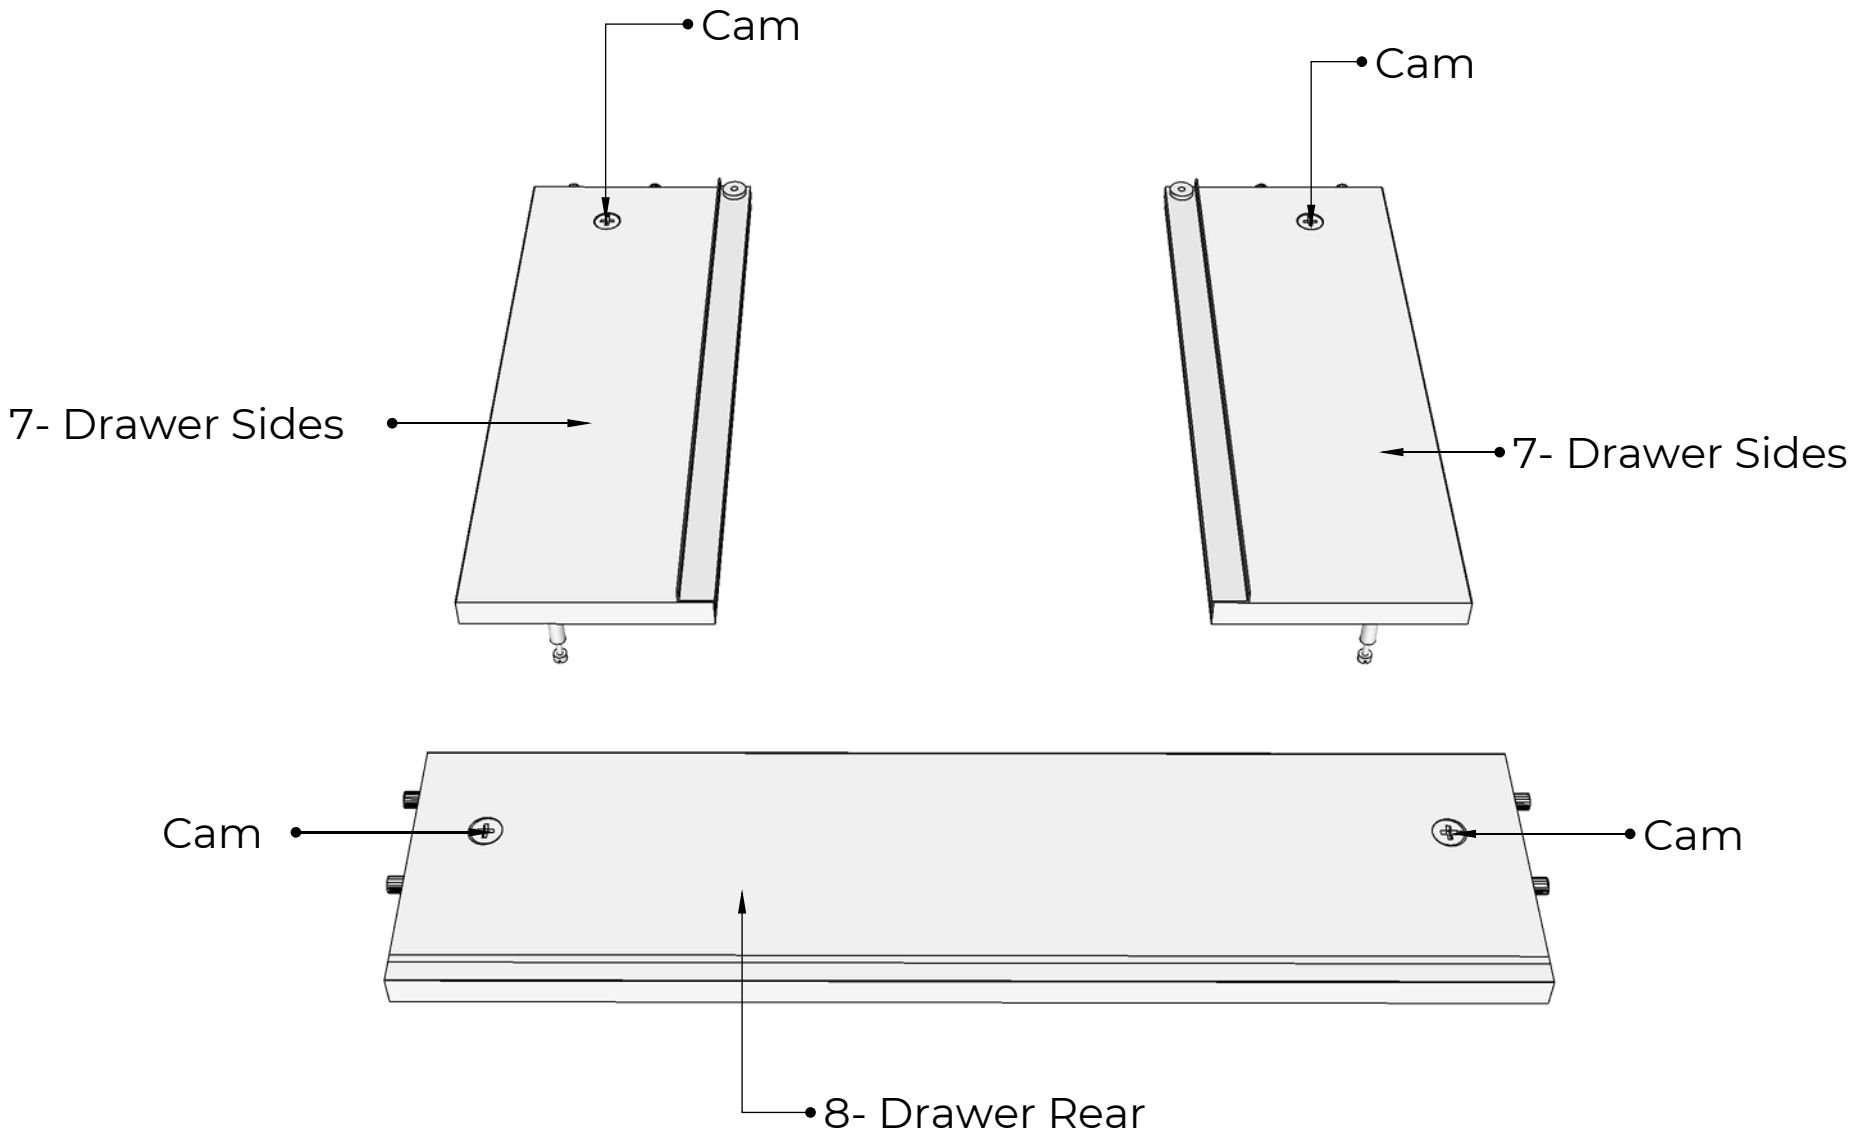

DRAWER ASSEMBLY

Step 3


Attach drawer sides**(7)** to drawer rear**(8)** and tighten cams**(C)**

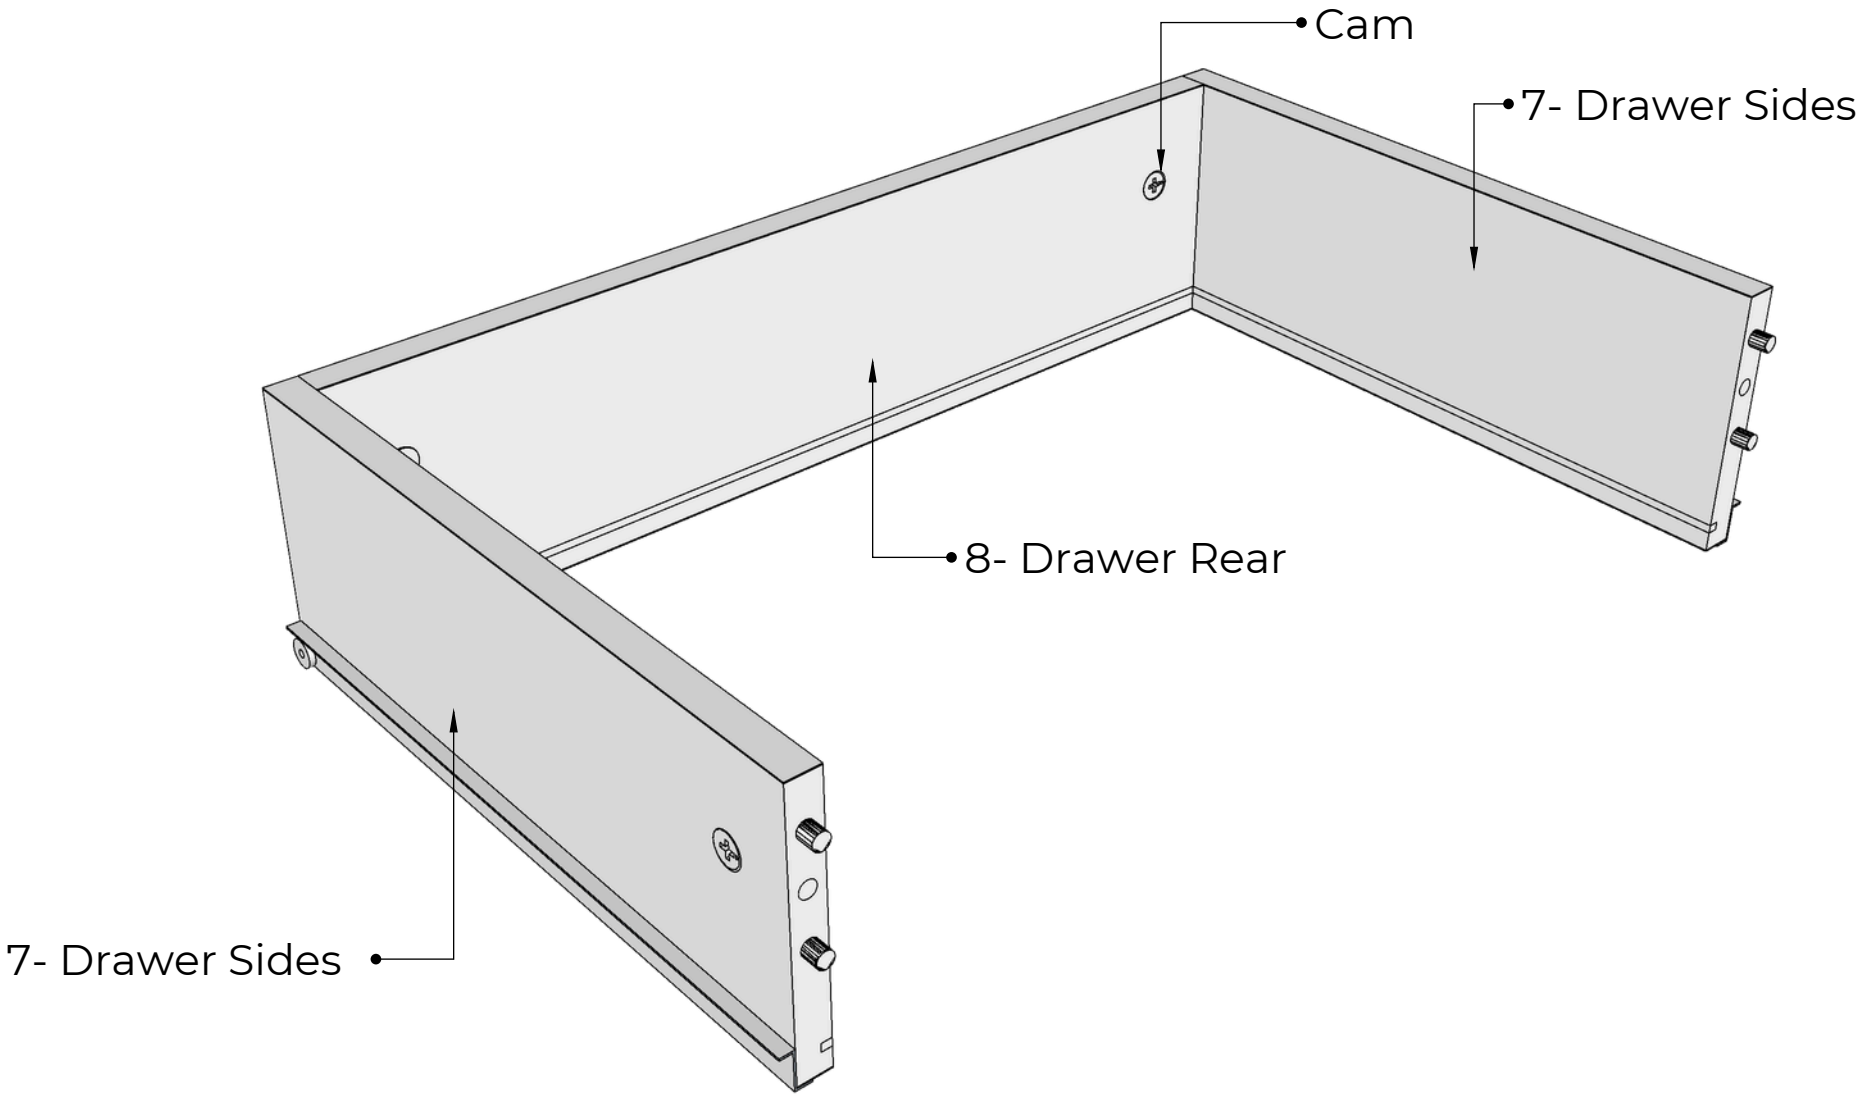

DRAWER ASSEMBLY

Step 4

Slide drawer bottom**(5)** into the grooves on the drawer sides**(7)** and drawer rear**(8)**

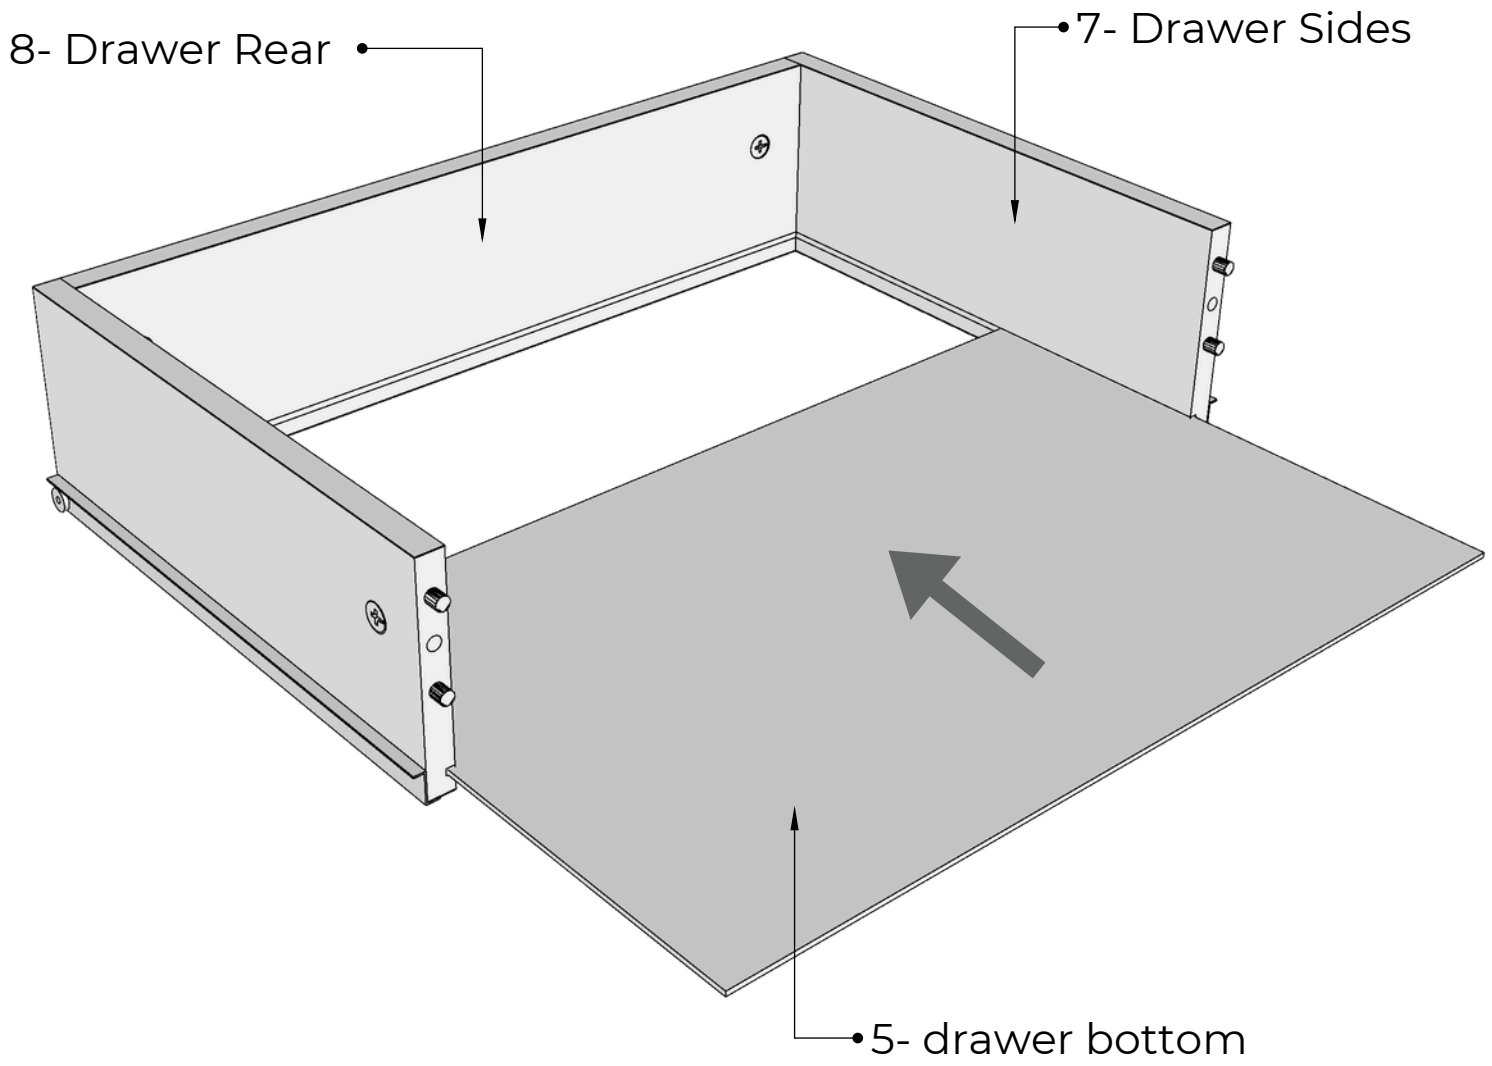

DRAWER ASSEMBLY

Step 5

Attach drawer front**(6)** to drawer assembly by sliding the cam pins**(D)** into the holes on the drawer sides**(7)** and tightening the cams**(C)**
Ensure that the drawer bottom**(5)** fits into the groove in the drawer front**(6)**
attach the handle**(E)** to the back of the drawer front**(6)** with supplied screws

