



AVERY SHOE CABINET

Parts List (18 parts)

1. Left Side	x 1	6. Back panel 145mm	x 2
2. Right Side	x 1	7. Shelf panel 150mm	x 4
3. Bottom Panel	x 1	8. Cleat	x 2
4. Top Panel	x 1	9. Cabinet backing	x 2
5. Back panel 95mm	x 2	10. Flap fronts	x 2







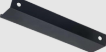

Before you begin make sure you have all the parts listed and organise them by type and size



Unit Assembly

- ▶ Place the **top panel(4)** on soft surface so that the small hole face upward. Screw Cam Pins (D) into the Top Panel (4) small holes.
- ▶ Place **side left(1), side right(2)** and **cleat(8)** onto a soft surface and place cams(C) into pre-drilled big holes, so that the small arrow faces to the nearest side.
- ▶ Turn **side left(1)** into its edge so that the backing groove downward
- ▶ Turn **Cleats(8)** so that the cams(C) face upward
- ▶ Attached **cleats(8)** to **side left(1)** by sliding the cam pins(D) through the small holes on the cleats(8). Fasten Cams on top and bottom cleat(8).
- ▶ Keep assembly in the same position and orientate **side right(2)** so that the backing groove face the bottom(3), Attach side right(2) to the cleats(8) using the same method above and fasten the cams(C).
- ▶ Turn **Top panel(4)** so that the backing groove faces to the bottom(3) and attach it to the assembly onto the sides by sliding the cam pins(D) through the holes on the sides. Fasten the cams(C)
- ▶ Keeping the assembly on a soft surface- turn it onto the top panel(4)
- ▶ Slide in the **backing 3mm (9)** so that the finished side face the inside of the cabinet, making sure it fits into the groove in the top panel(4).
- ▶ Place the **bottom panel(3)** over the side panels so that the dowel holes line up and ensuring the cabinet backing(9) fits into the groove in the bottom panel(3).
- ▶ Tighten the **bottom panel(3)** with supplied Confirmat screws(A) and Allen key(B).
- ▶ Place **legs(F)** over pre-drill holes in bottom panel(3) and fasten with supplied screws and turn unit upright.

Hardware

A	Confirmat Screws (Use the supplied Allen Key)	x 4	
B	Allen Key	x 1	
C	Cams	x 8	
D	Cam Pins	x 8	
E	Shoe rack mechanisms Sets & Screws (4 x 16) Metal Stoppers & Screws (6 x 16)	x 2 x 20 x 4 x 12	
F	Cone Leg H150 Black G-Screws	x 4 x 16	
G	Pull Handle Black Screws (4 x 16)	x 2 x 4	
H	Cover Stickers	x 2	



CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.



AVERY SHOE CABINET



Shoe Rack Assembly

It is advice that someone assist you with the following steps:

- ▶ Pack out the shoe rack mechanisms (E) so that there are a left and a right side, there must also be 2x cup-shaped washers and 2x machine screws for each set.
- ▶ Place **flap front(10)** onto a soft surface with the white side facing up and the handle(G) holes facing towards you.
- ▶ Attach the left side of the mechanism to the flap front(10) by aligning the pre-drill holes with the 3x holes in the mechanism (E) and securing them with supplied screws. (See Stickers)
- ▶ Attach the **145mm panel(6)** to the back of the mechanism(E) with supplied screws.
- ▶ Attach the **95mm panel(5)** to the top of the mechanism (E) with supplied screws.
- ▶ The outer **2x 150mm panels(7)** will be added as soon as the flap system is in the cabinet.
- ▶ Attach the right side of the mechanism(E) to the flap front(10) and the 2 panels that were assembled before. The flap assembly is now ready to be fitted to the cabinet.
- ▶ With someone assisting you, align the big hole in the mechanism(E) to the silver insert on the sides of the cabinet.
- ▶ Insert the cup-shaped washer into the big hole and use the mechanism screw to attached the cup-shaped washer to the silver insert on the side of the cabinet.
- ▶ Repeat on the opposite side.
- ▶ Repeat the above steps for the other flap assembly.
- ▶ Slightly close the flap assembly so that the small pre-drill holes in the cabinet sides are visible and attached the flap stops with supplied screws.
- ▶ Repeat this on both sides and on both flap assemblies.




Shoe Rack Assembly

- ▶ With the flap assembly resting on the stops, slide in the **150mm panel (7)** into each assembly until it touched the back tab. There will be 2x 150mm panel(7) for each assembly.
- ▶ Fasten them from the sides of the mechanism(E) with supplied screws. Each panel will use only 1x screw to secure it.
- ▶ Repeat with the other flap assembly.
- ▶ Position the handles(G) over the pre-drilled holes on the back of the flap front(10) and attached them with supplied screws.
- ▶ The flap mechanisms(E) should operate freely.
- ▶ This assembly is now complete.

There we go! You are all done. Congratulations !

Safety Tip:

To ensure your children's safety, please use L-Shape brackets and Hilti anchors to secure the unit and prevent it from tipping over.

L- Shape Bracket	x 2	
Hilti 70 mm	x 4	
Screws (8 x 16)	x 4	

CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.