



me&co
QUALITY, AFFORDABLE FURNITURE

ASSEMBLY INSTRUCTIONS



AVERY TV STAND


Parts List (12 parts)

- | | | | |
|-----------------|-----|----------------|-----|
| 1. Left Side | x 1 | 5. Backing 3mm | x 1 |
| 2. Right Side | x 1 | 6. Partition | x 2 |
| 3. Bottom Panel | x 1 | 7. Fixed Shelf | x 2 |
| 4. Top Panel | x 1 | 8. Doors | x 3 |

Before you begin make sure you have all the parts listed and organise them by type and size

Hardware

A	Confirmat Screws (Use the supplied Allen Key)	x 8	
B	Allen Key	x 1	
C	Cams	x 16	
D	Cam Pins	x 16	
E	Mini Overlay Hinge Ferrari Screws	x 6 x 36	
F	Cone Leg H200 Black G- Screw 9 x 16	x 4 x 16	
G	Pull Handle Black Screws (4 x 16)	x 3 x 6	

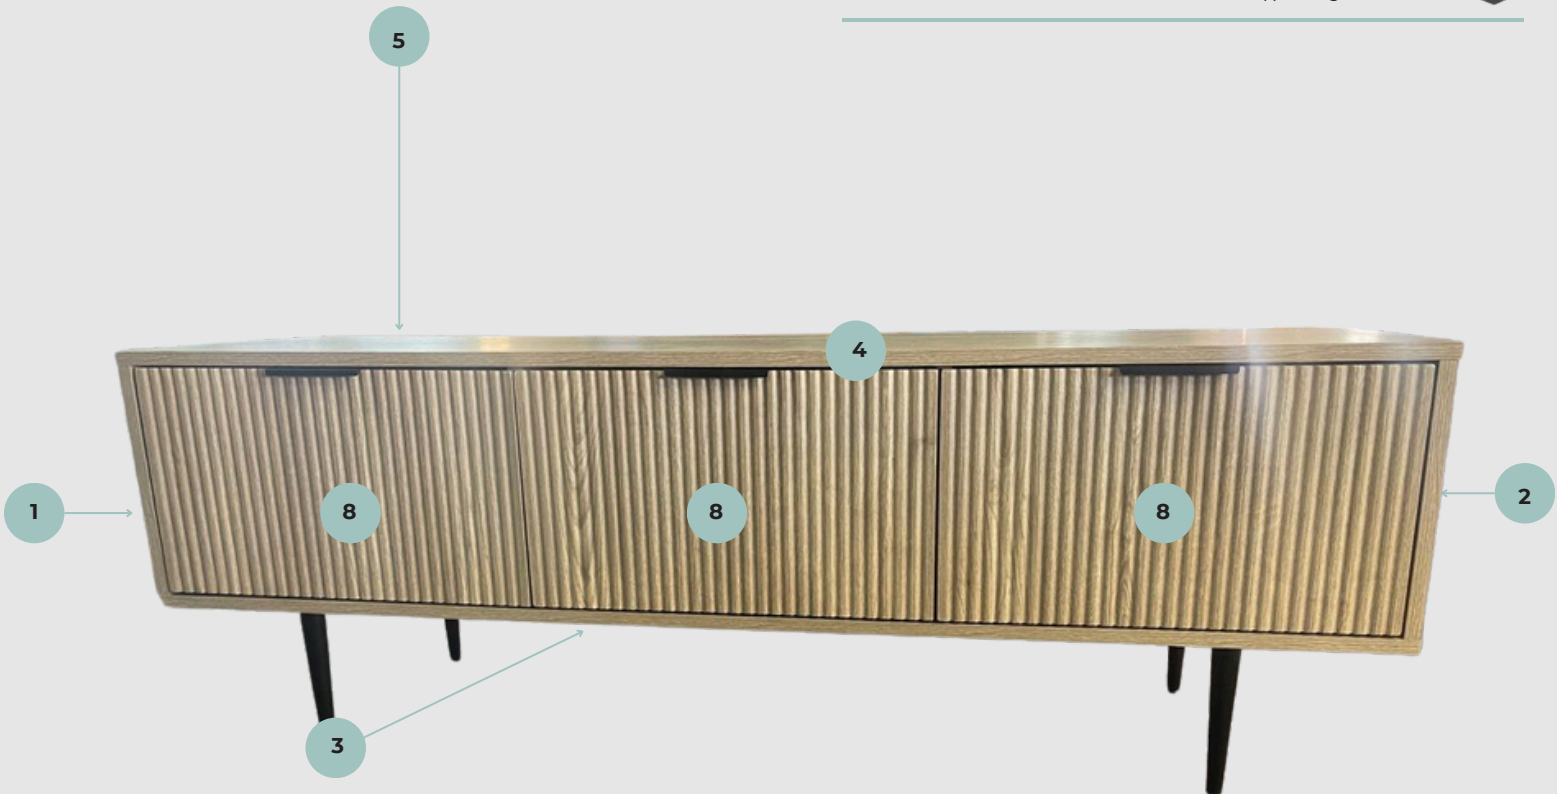

CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.



AVERY TV STAND



Unit Assembly

- ▶ Place **Top Panel (4)** upside down on a soft surface. Screw Cam Pins (D) into small holes on the backside of Top Panel
- ▶ Place **Sides (1,2)** upside down. Screw Cam Pins (D) into small holes. Insert Cams (C) into larger holes.
- ▶ Lay **Both Partitions (6)** upside down so small holes face upward. Screw Cam Pins (D) into small holes. Insert Cams (C) into big holes.
- ▶ Put **Side Left (1)** on a soft surface with Cam Pins facing upward. Put one of the **Fixed Shelf (7)** over Cam Pins on Side Left (1). Tighten Cams (C) with Phillips Screwdriver.
- ▶ Place one **Partition (6)** over previously assembled Side Left (1) and tighten Cams (C)
- ▶ Take assembly and fix it to the Cam Pins as you see it on the Left Side of the Top, tighten Cams.
- ▶ *Repeat this process for the right hand side.*
- ▶ Slide **Backing (5)** into the grooves on the Sides and Top Panel, backing must fit neatly into the grooves.
- ▶ Take **Bottom Panel (3)** with groove facing downward and put it over the Build with Backing Grooves aligning snugly.
- ▶ Secure the Bottom panel (3) to the Sides (1,2) using Confirmat screws (A) from outside using Allen Key.
- ▶ Secure the **Legs (F)** to the Bottom panel using provided screws and pre-drilled holes.
- ▶ Carefully turn the build over onto the legs.
- ▶ Screw 1 x Handle (G) onto each **Door (8)** in provided holes with supplied screws.



Unit Assembly

- ▶ Attach 2 x Hinges with supplied screws (E) (2 on each door)
- ▶ First screw 6 x Hinge Plate (E) into Bottom using provided screws
- ▶ Slide all Hinges over Hinge plate and fasten the Back Screw to tighten the Hinges

(Hinges can be adjusted with screw on top of the Hinges)

**There we go! You are all
done. Congratulations !**

CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.