

ASSEMBLY INSTRUCTIONS DESTINY



Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to safety testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create a beautifully space to feel comfortable in.

**Here are a few assembly
tips before you get
started:**



Make Time

The first step to all seamless assembly is taking a moment to carefully read through the instructions- you are already on your way to create a beautifully functional space!



Set The Mood

Put on your favourite playlist, order a pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You Did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging.

Creating your home

ASSEMBLY INSTRUCTIONS

DESTINY



Part List

1. Left Side	x 1	4. Top Panel	x 1	7. Drawer Sides	x 4
2. Right Side	x 1	5. Drawer Bottom	x 2	8. Drawer Rear	x 2
3. Bottom	x 1	6. Drawer Front	x 2	9. Cleat	x 1
				10. Backing 3mm	x 1

Hardware

A

Confirmat Screws
Allen Key



x 10 x 1

B

350mm Drawer Runner
Screws (6 x 16) x 2



x 12

C

Cam Screws



x 8

D


Cam Pins



x 8

E

Pull Handle
Screws (4 x 16) x 4



x 2

F

T - Legs
G-Screws (9 x 16) x 16



x 4

G

Cover Stickers



x 8

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall.

Phillips screwdrivers required. For quicker assembly, we recommend the use of a power drill on a low-speed setting.


ASSEMBLY INSTRUCTIONS DESTINY



CABINET ASSEMBLY


Step 1:

Screw cam pins into small holes in top

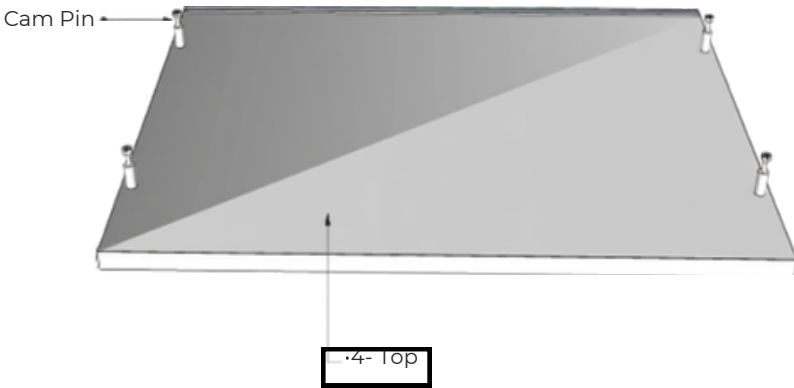


Step 4:

Turn assembly upside down and position assembly over the top. Line up the cam pins on the top panel with the holes in the sides and fasten the cams

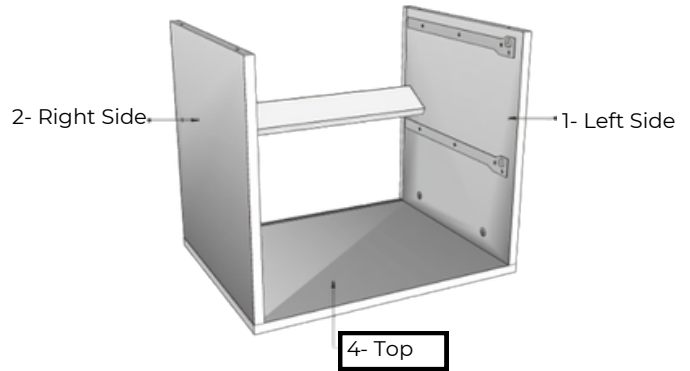


Step 2:

Insert Cams into big holes on sides with arrow on cam facing nearest edge. Attach Drawer Runners to sides with supplied screws

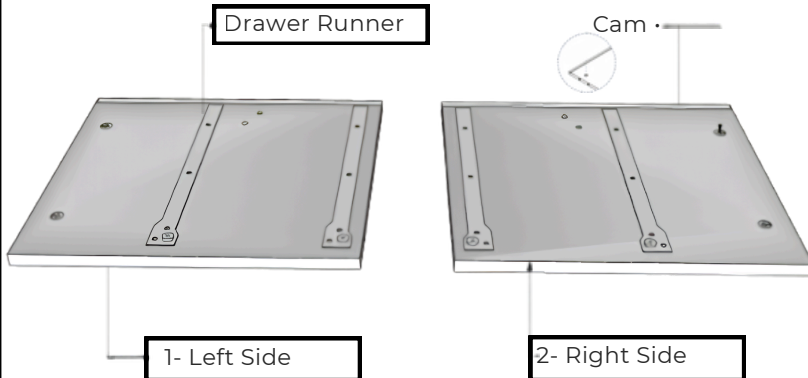


Step 5:

Slide backing into grooves on sides and top

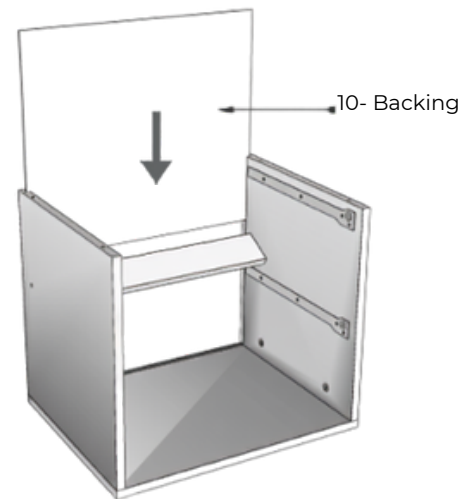


Step 3:

Attach sides to cleat by lining up the dowel holes and fastening with confirmat screws

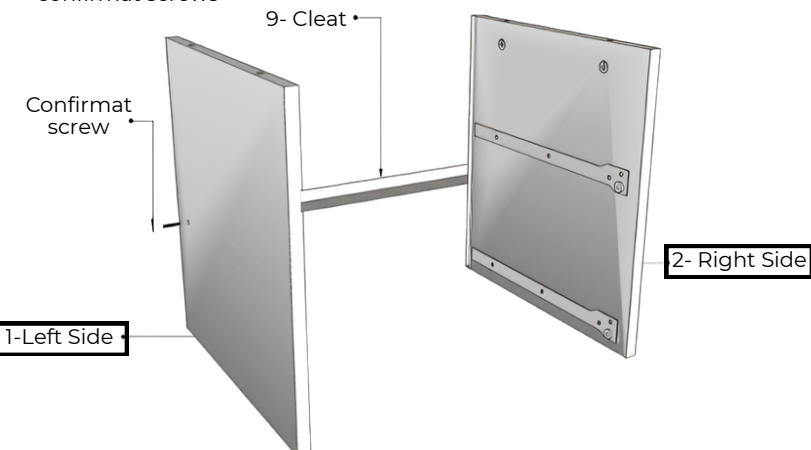

Step 6:

Attach Bottom to assembly with Confirmat screws

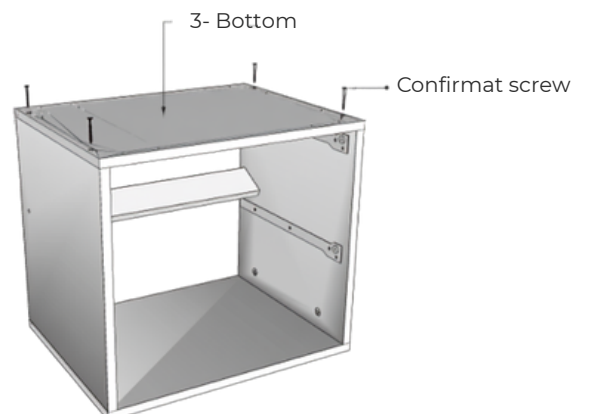

ASSEMBLY INSTRUCTIONS


DESTINY



CABINET ASSEMBLY

Step 7:

Attach legs to assembly using pre-drilled holes in bottom and supplied screws

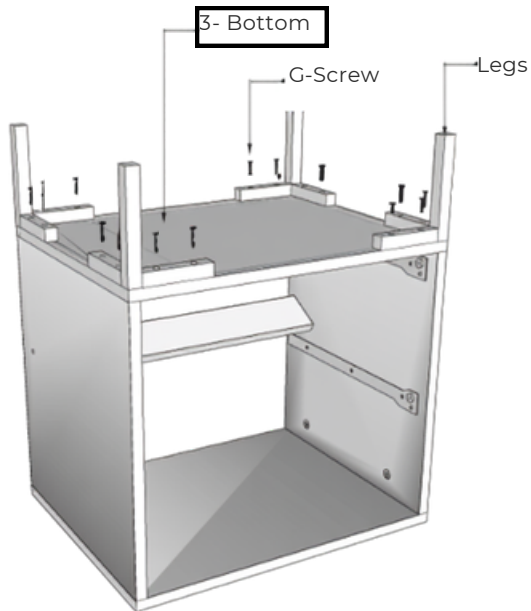


Assembled Product



Step 8:

After drawer assembly is done, insert drawers into cabinet assembly by slightly tilting the drawer assembly downward and pressing forward. Make sure the wheels are running inside the guides.

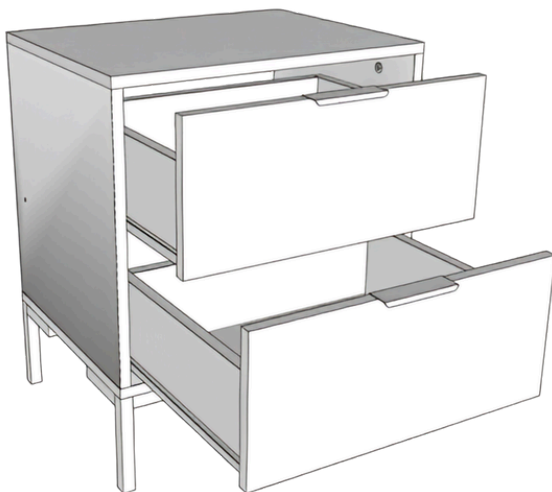

CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.




ASSEMBLY INSTRUCTIONS DESTINY



DRAWER ASSEMBLY


Step 1:

Insert and tighten cam pins in drawer front
Attach handle to drawer front with supplied screws in pre-drilled holes
Insert Cams in big holes in drawer sides ensuring arrow on cam faces nearest edge

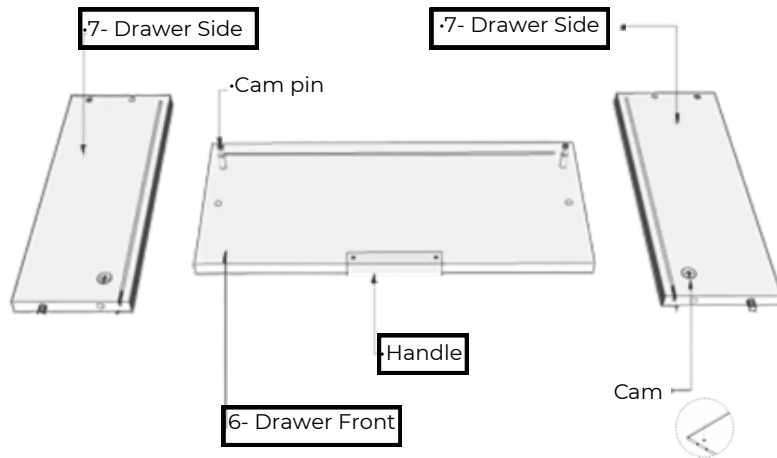


Step 3:

Slide drawer bottom into the grooves on the drawer sides and drawer rear

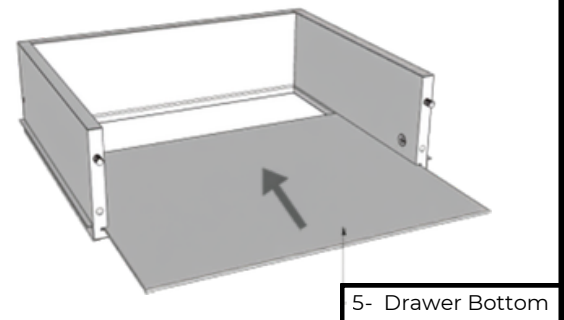

Step 2:

Attach Drawer sides to drawer rear using confirmat screws

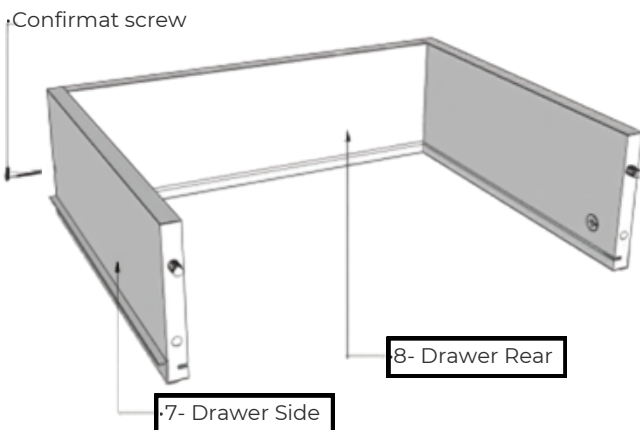

Step 4:

Attach drawer front to drawer assembly by sliding the cam pins into the holes on the drawer sides and tightening the cams
Ensure that the drawer bottom fits into the groove in the drawer front

