KINDER CUBE BEDSIDE ASSEMBLY INSTRUCTIONS

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to saftey testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create a beautifully space to feel comfortable in.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carfully read through the instructions- you are already on your way to create a beautifully functional space!



Set The Mood

Put on your favourite playlist, order a pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You Did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging.

Creating your home

Time to assemble 30 min - People needed 1 - Difficulty level 6/10 - Tools needed - Phillips scredriver - allen key (supplied)

KINDER CUBE BEDSIDE ASSEMBLY INSTRUCTIONS

Parts List

1.	Left Side	x 1	**4.**	Top	x 1
2.	Right Side	x 1	**5.**	Solid Back Panel	x 1
3.	Bottom	x 1	**6.**	Shelf	x 1

Hardware

A

Confirmat Screws
(use supplied Allen Key)



x 6

B

Cam



x 10

C

Cam Pins



x 10

D

70mm Round Ball
Pine Feet
4x Pan Head Screws



x 4

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall.




Phillips screwdrivers required. For quicker assembly, we recommend the use of a power drill on a low-speed setting.

KINDER CUBE BEDSIDE ASSEMBLY INSTRUCTIONS


Step 1

Insert and tighten cam pins**(C)** into small holes in top**(4)** and sides**(1,2)** insert cams**(B)** into big holes in sides**(1,2)**, back panel**(5)** and shelf**(6)** ensuring arrow on cam**(B)** faces nearest edge

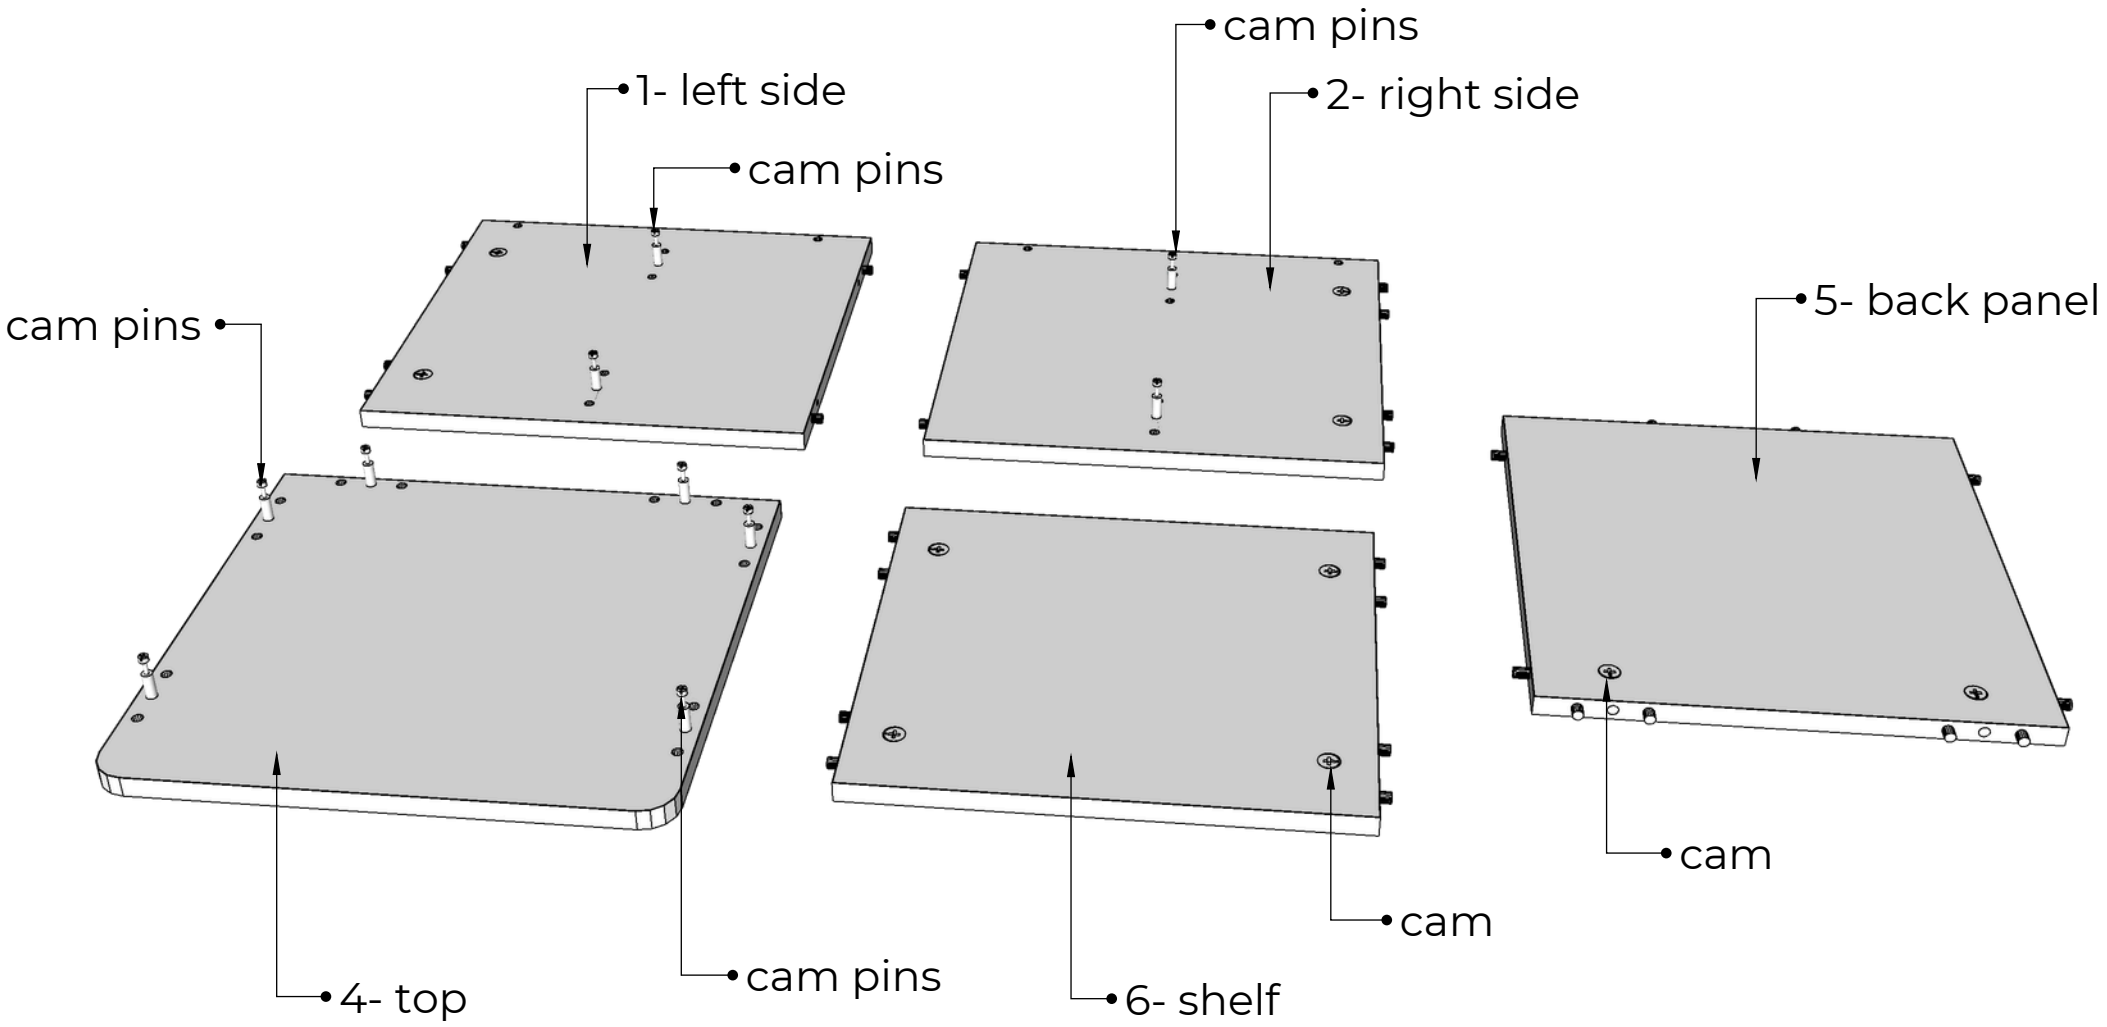


Step 2

Align the back panel**(5)** dowels with the holes in the left side**(1)** and firmly press it in place

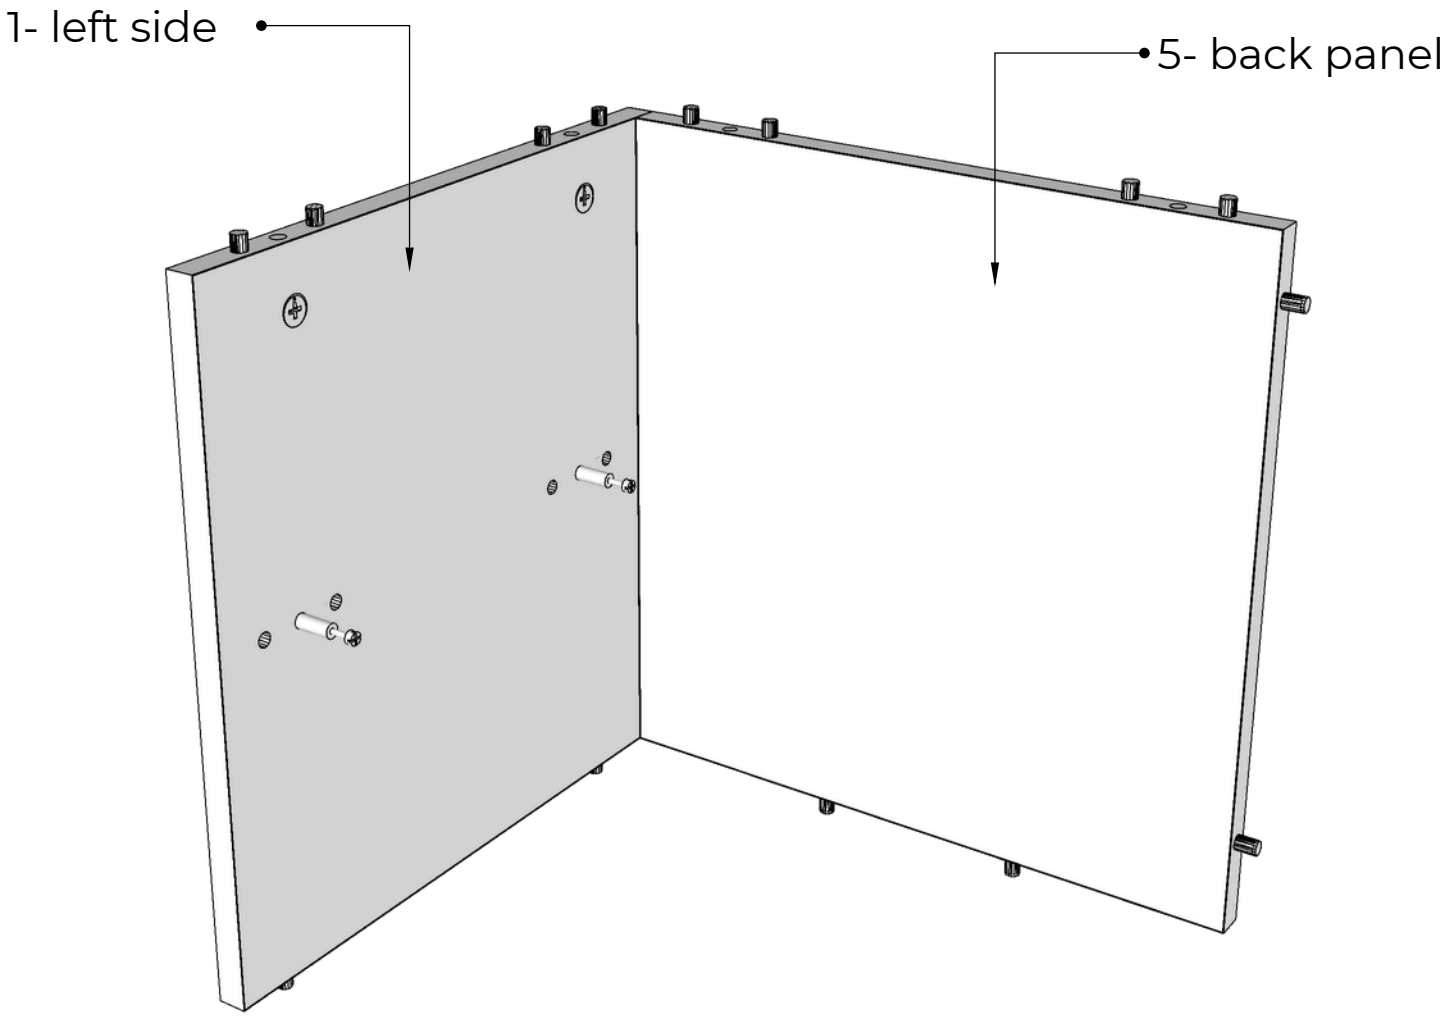


Step 3

Attach shelf**(6)** to left side**(1)** and tighten cams**(B)** in shelf**(6)**

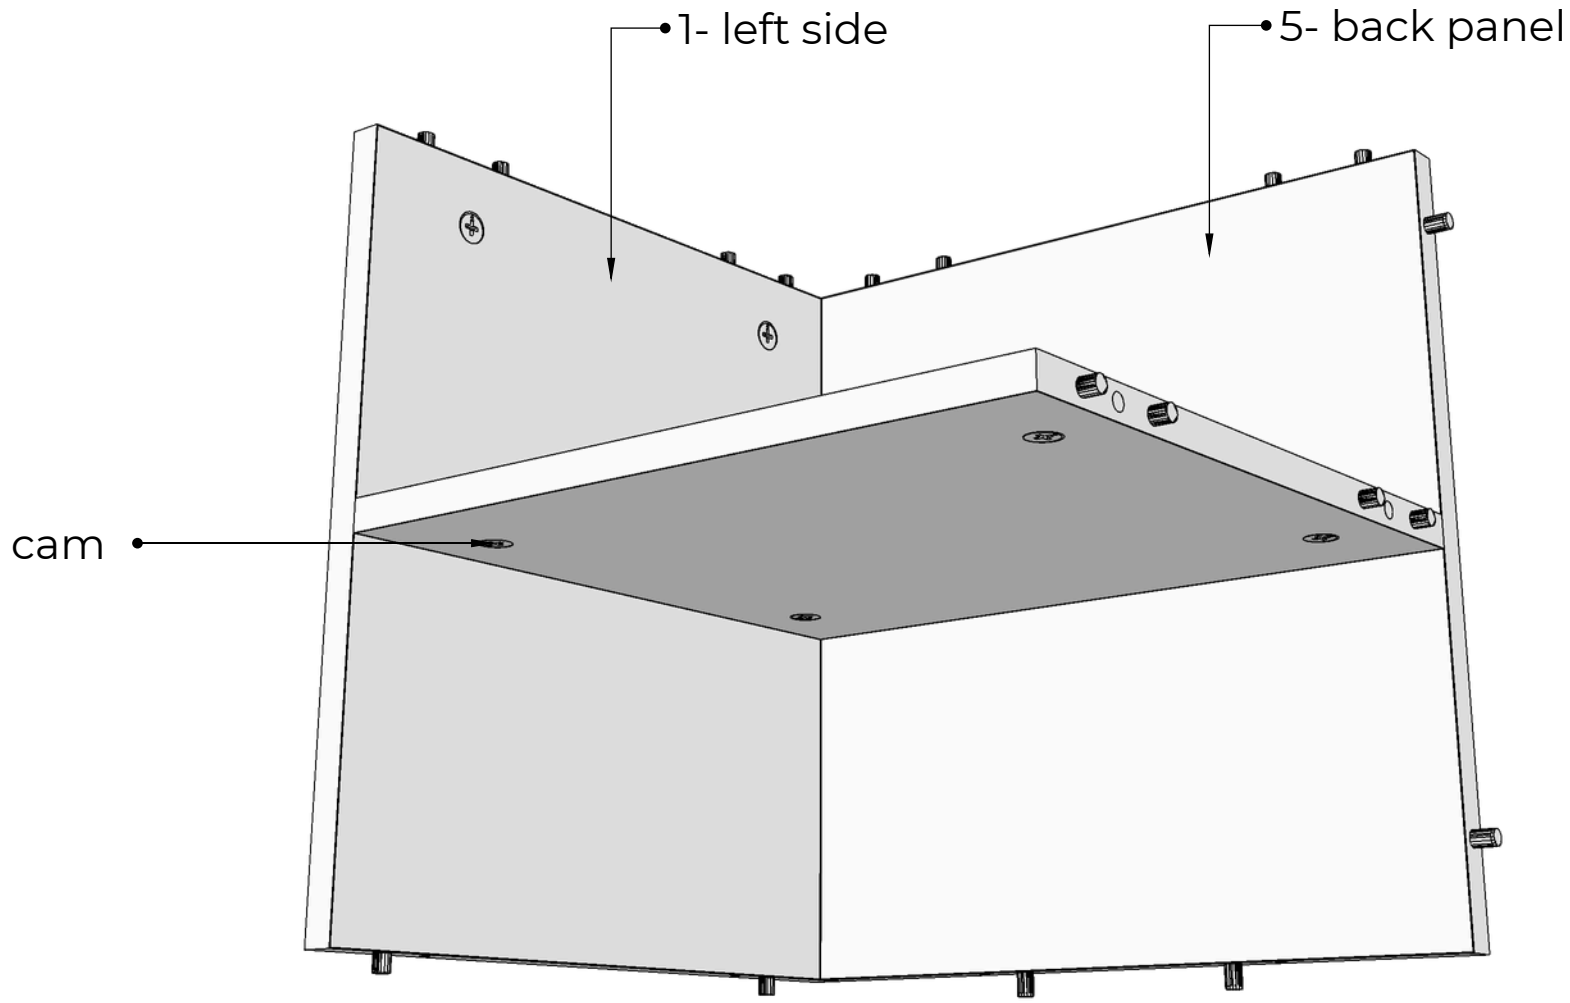


Step 4


Attach right side**(2)** to shelf**(6)** and tighten cams**(B)** in shelf**(6)**

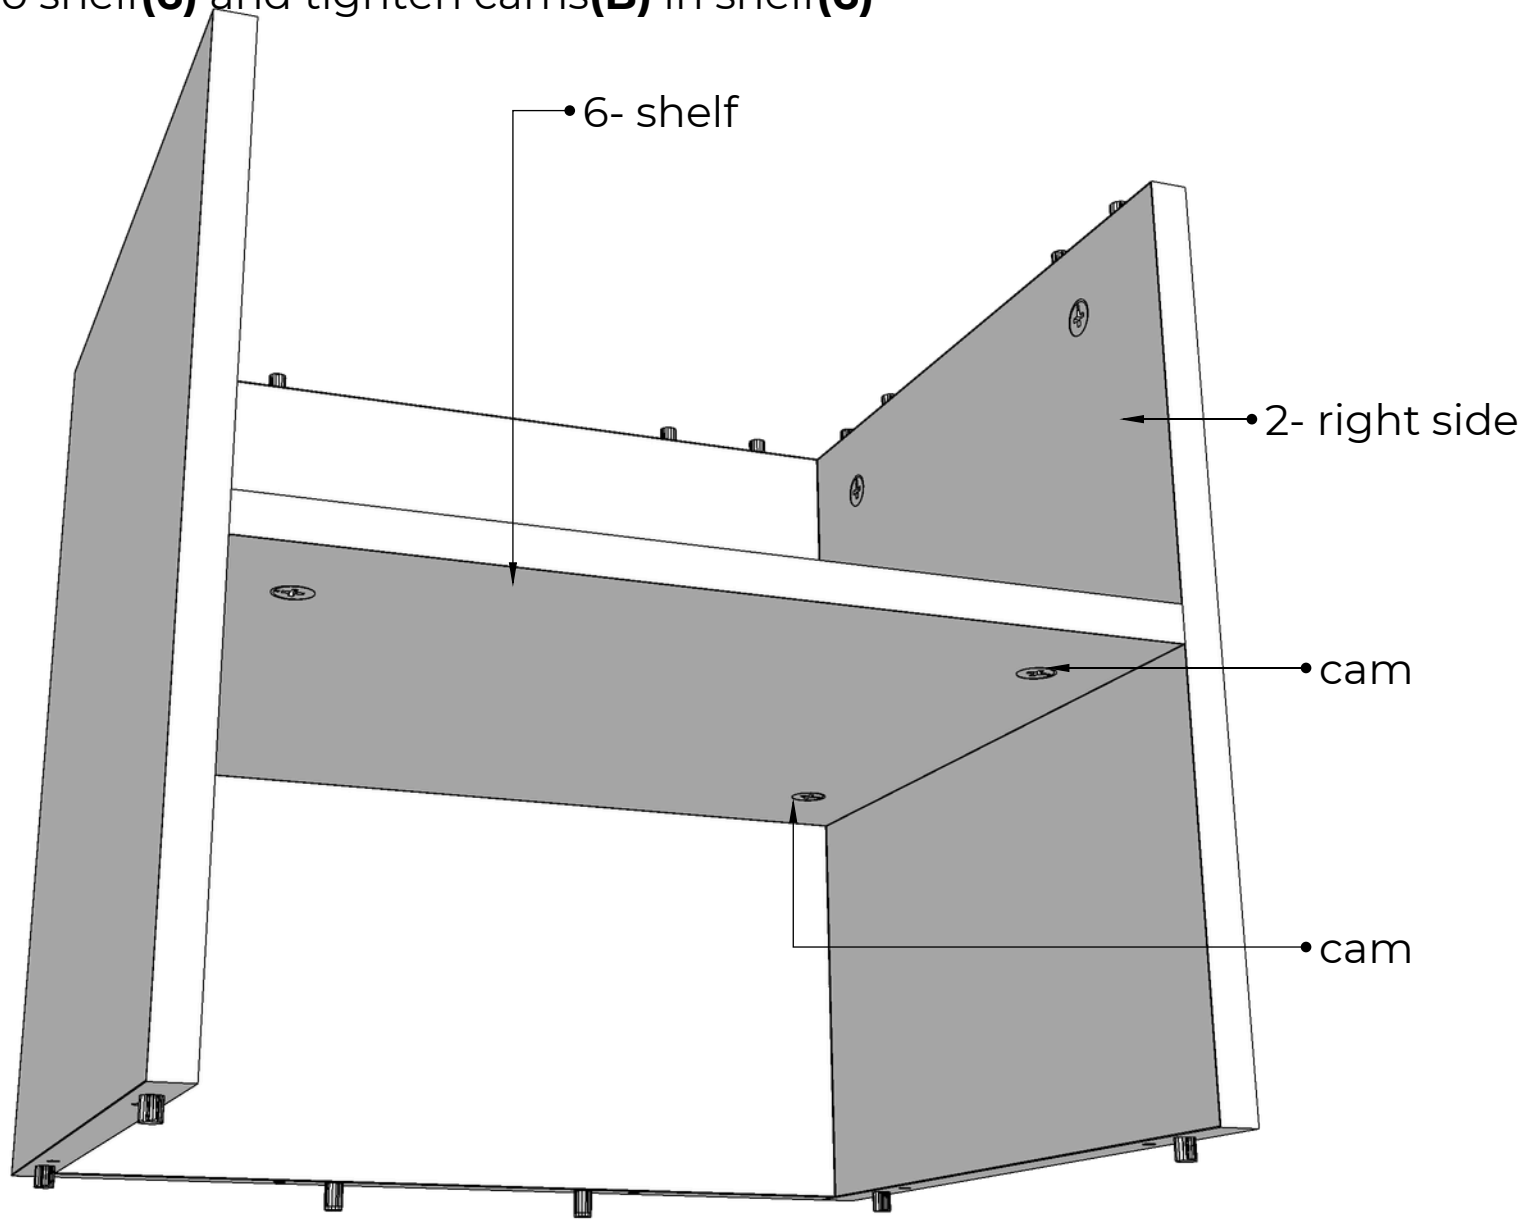

Step 5


Align the cam pins**(C)** in the top panel**(4)** with the holes in the sides**(1,2)** and back panel**(5)** and tighten the cams**(B)** on the sides**(1,2)** and back panel**(5)**

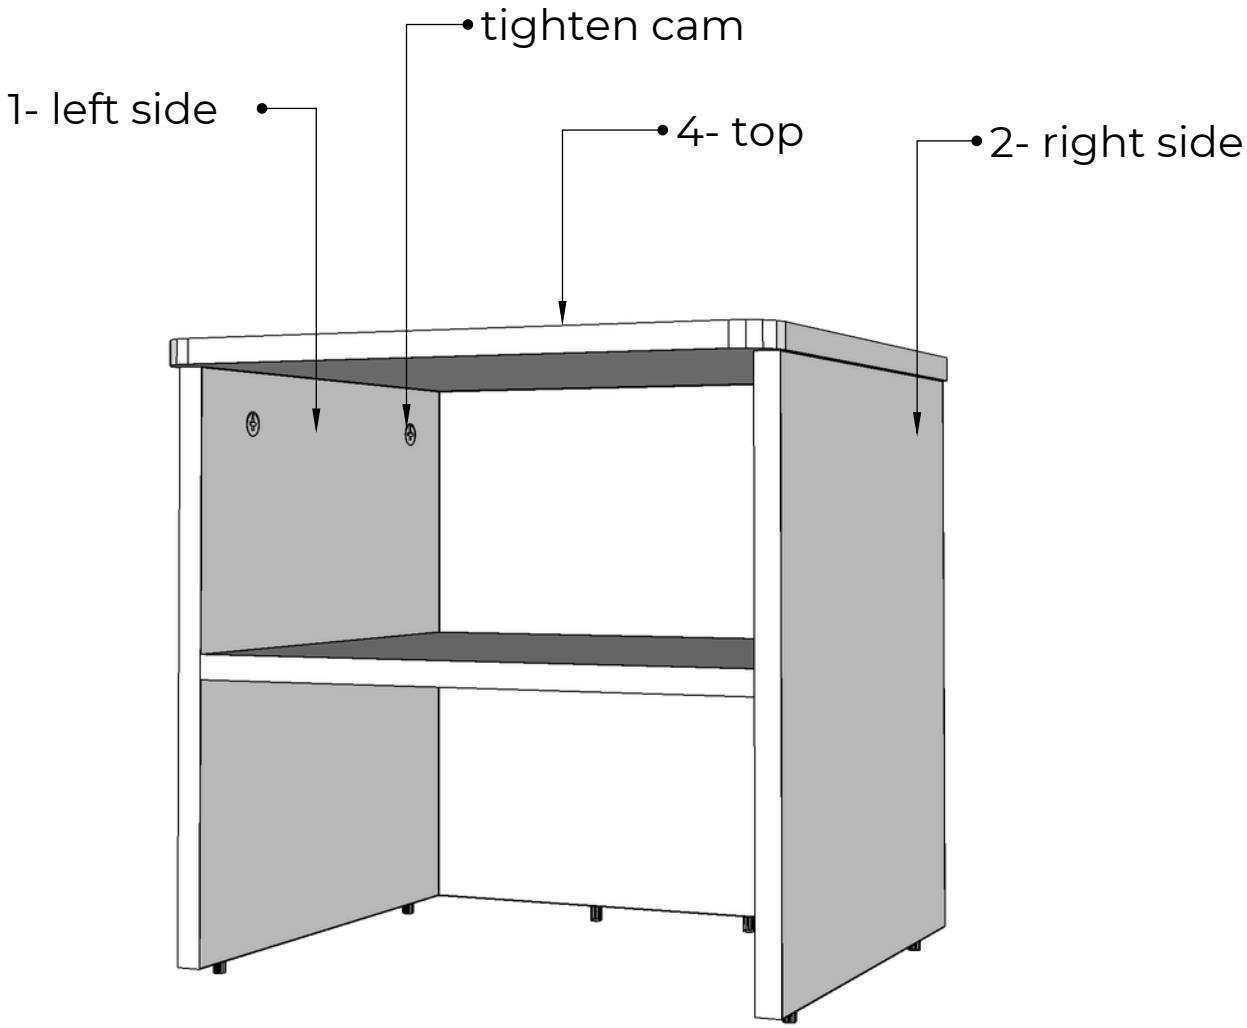

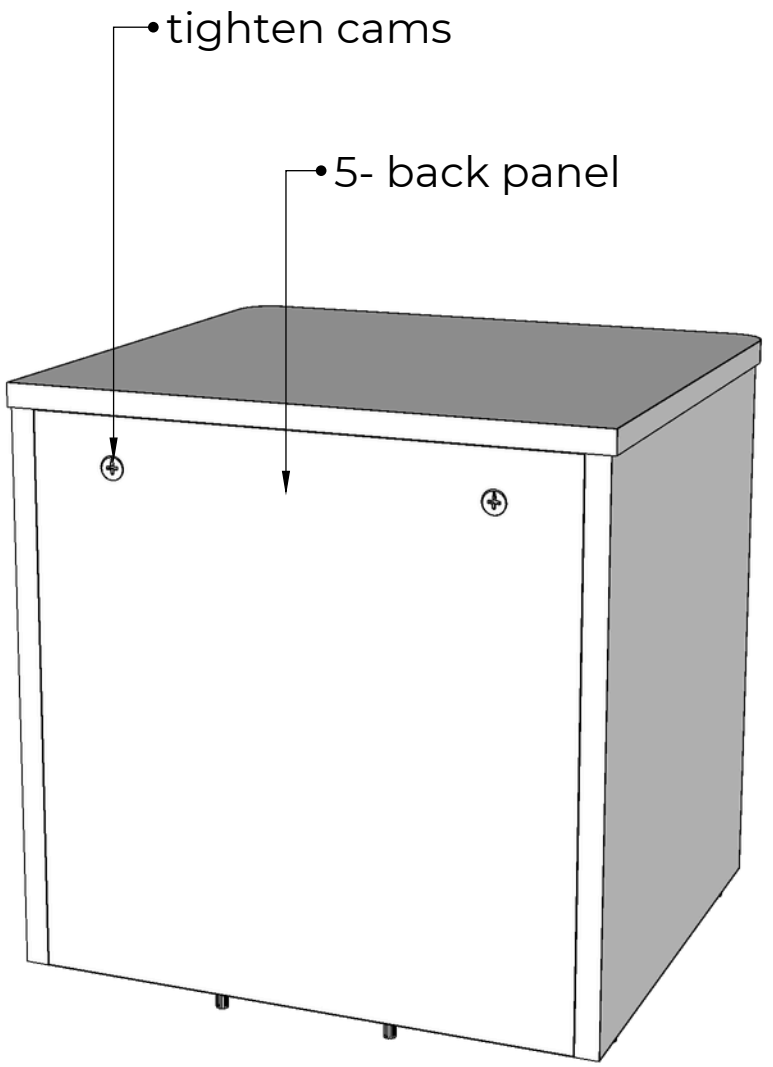


Step 6

Turn unit upside down onto its top and attach the bottom panel**(3)** to main assembly with confirmat screws **(A)**

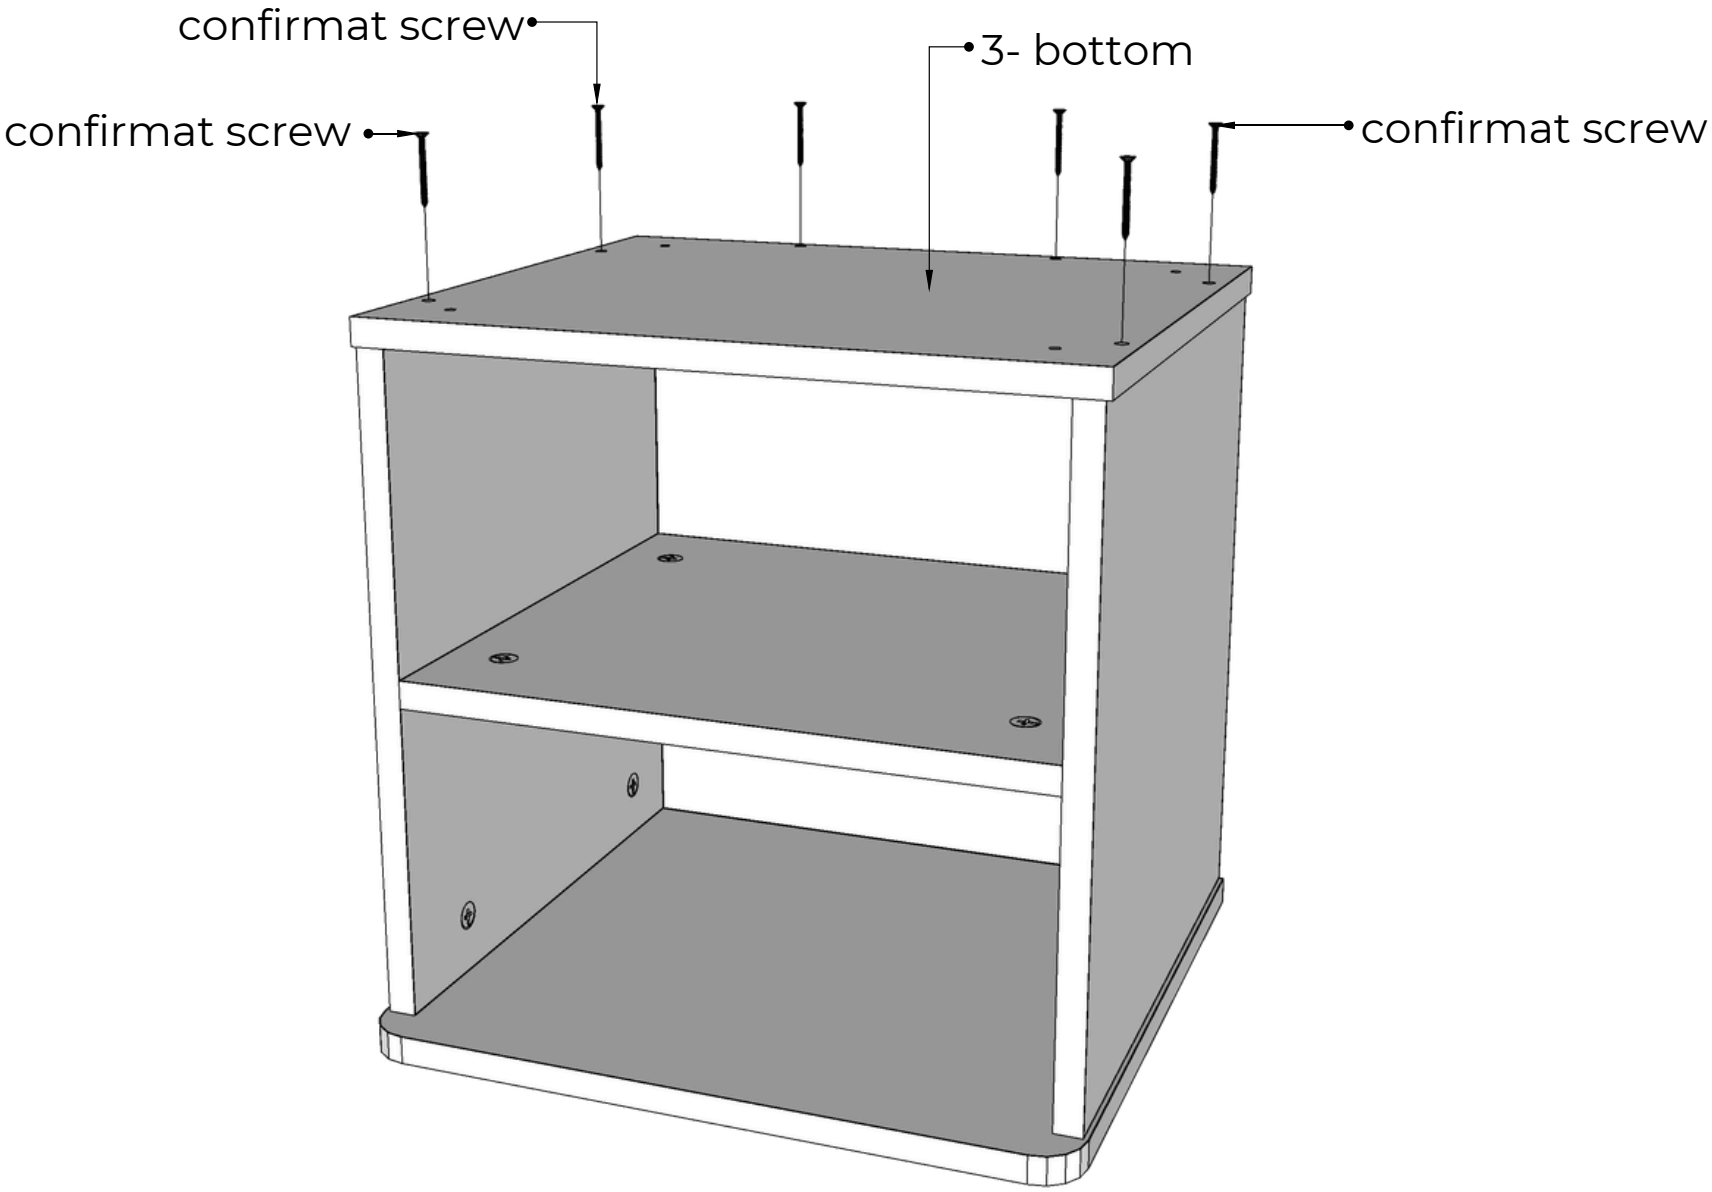

Step 7

Attach legs**(D)** to assembly using pre-drilled holes in bottom**(3)** and supplied screws Fasten screws through the bottom panel**(3)** into the legs**(D)**

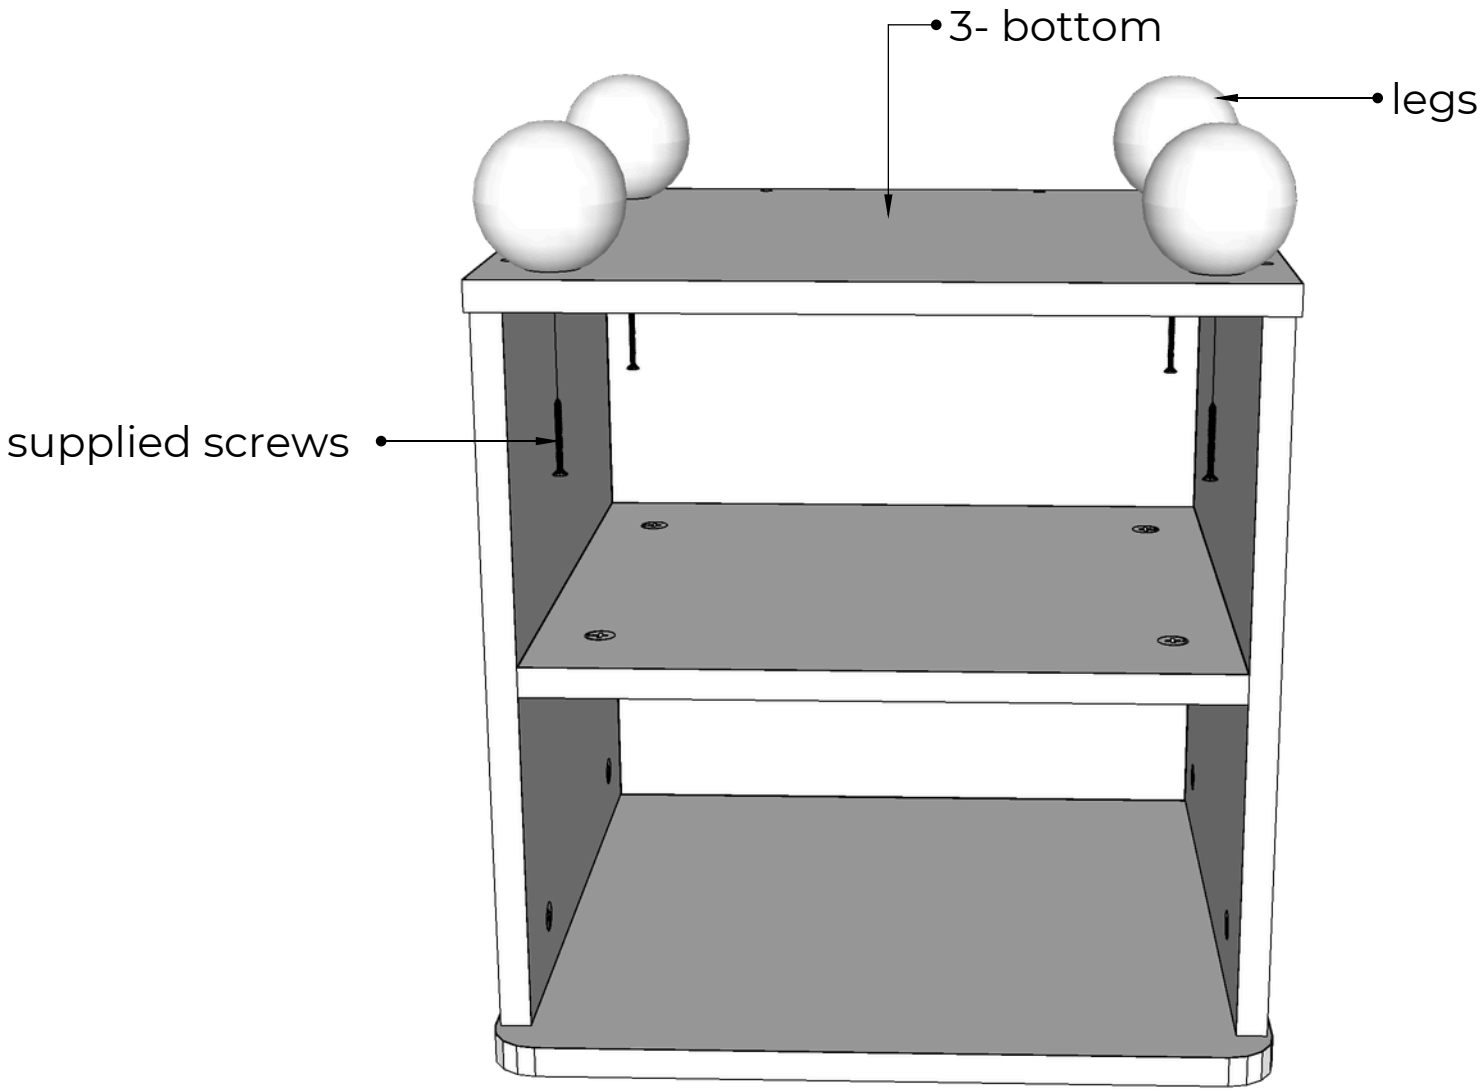

Assembled Unit

