KIDS ROBE ASSEMBLY INSTRUCTIONS

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to saftey testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create a beautifully space to feel comfortable in.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carfully read through the instructions- you are already on your way to create a beautifully functional space!



Set The Mood

Put on your favourite playlist, order a pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You Did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging.

Creating your home

Time to assemble 2 hours - People needed 1 - Difficulty level 8/10 - Tools needed - Phillips screwdriver - allen key (supplied)

KIDS ROBE ASSEMBLY INSTRUCTIONS

Parts List

1.	Left Side	X 1	**6.**	Top Shelf	x 1	**11.**	Drawer Front	x 4
2.	Right Side	X 1	**7.**	Nailers	x 3	**12.**	Drawer Side Left	x 4
3.	Divider	X 1	**8.**	Backing 3mm	x 1	**13.**	Drawer Side Right	x 4
4.	Bottom Panel	X 1	**9.**	Solid Trianular Panel	x 1	**14.**	Drawer Rear	x 4
5.	Mid Shelf	x 1	**10.**	Roof	x 2	**15.**	Drawer Bottom	x 4

Hardware

A

Confirmat Screws
(use supplied Allen Key)



x 12

B

Drywall Screws (6 x 28)



x 6

C

Cam



x 32

D

Cam Pins



x 32

E

Cone Pine Leg 100mm



x 4

F

Pan Head Screws



x 4

G

Oval Rail



x 1

H

Metal Brackets (For Oval Rail)
Screws (6 x 16) X4



x 2

I


Cover Stickers



x 12


J

Saftey Bracket

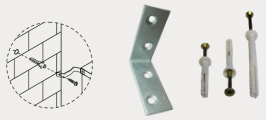

x 2

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall.

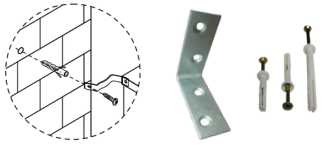

Saftey Bracket




Phillips screwdrivers required. For quicker assembly, we recommend the use of a power drill on a low-speed setting.

Step 1

CABINET ASSEMBLY


Insert cam pins**(D)** into small holes in left side**(1)** and right side**(2)**
insert cams into big holes in divider ensuring arrow on cam faces nearest edge

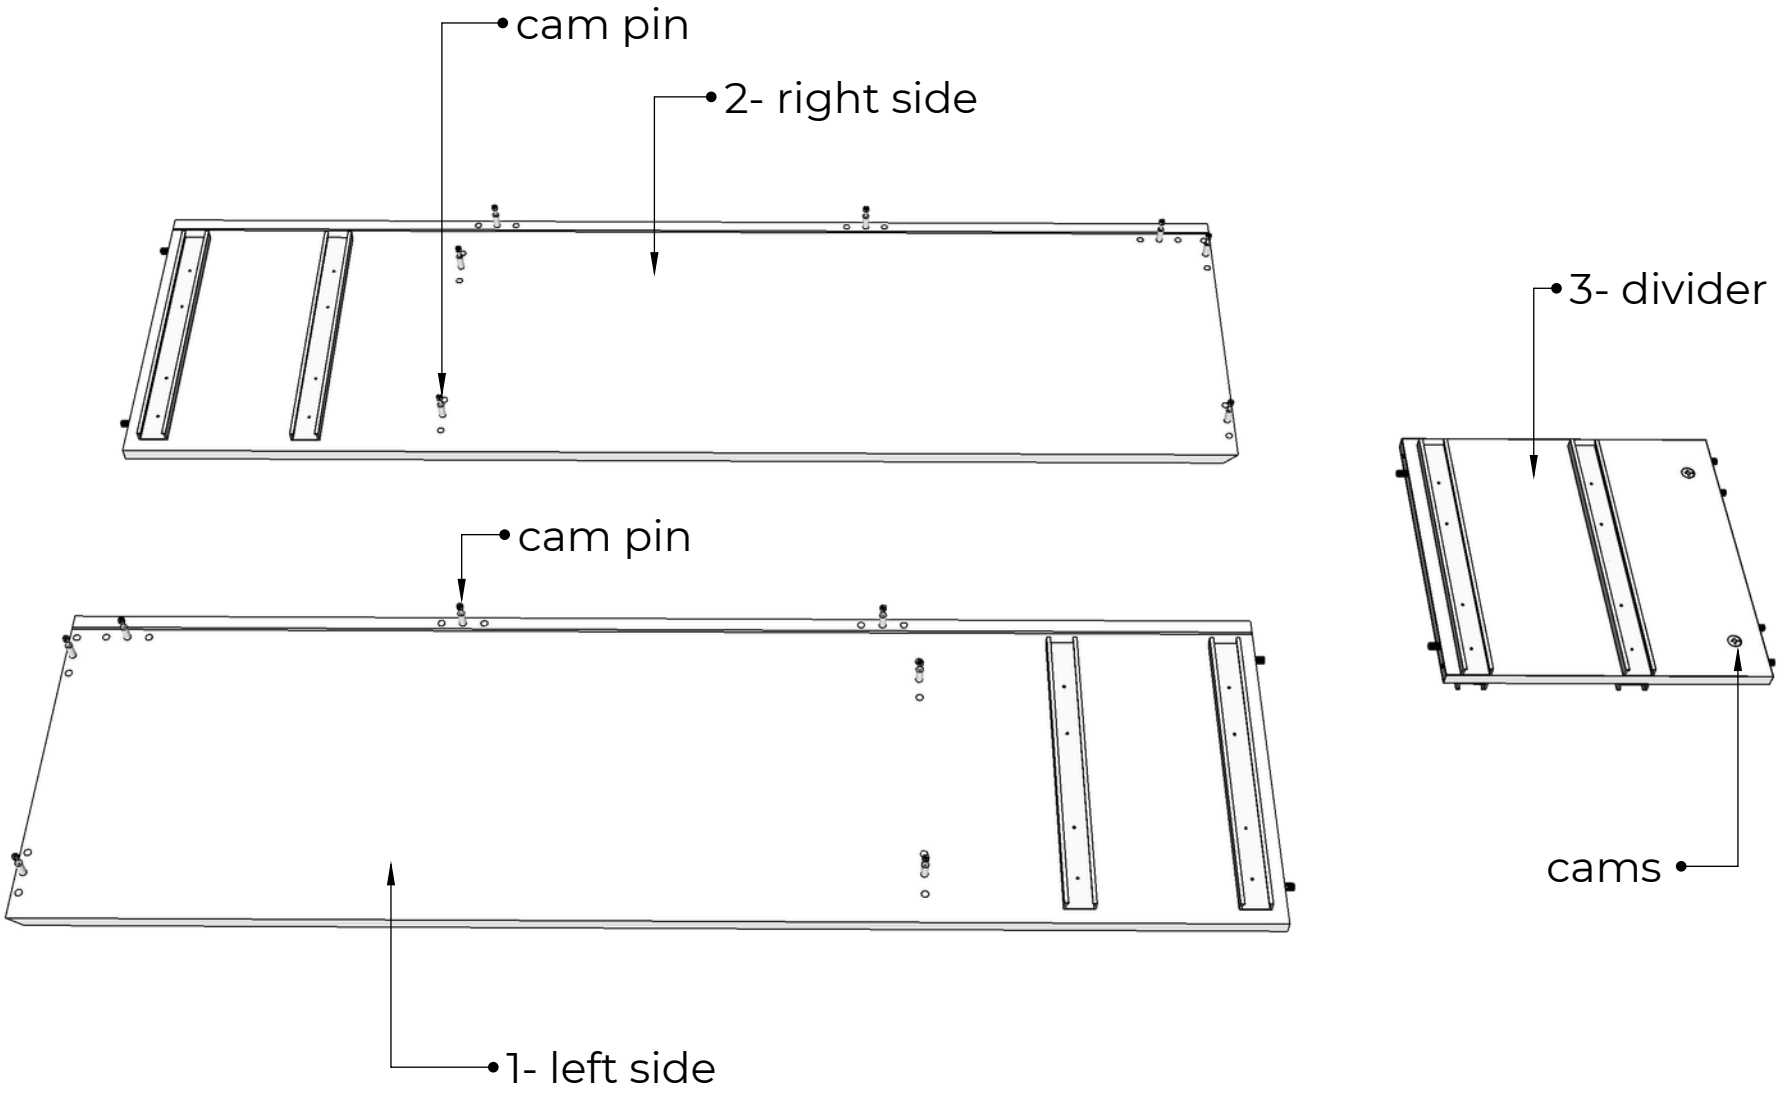

Step 2

CABINET ASSEMBLY


Insert cam pins**(D)** into small holes in mid shelf**(5)**
Insert cams**(C)** into big holes in nailer and top shelf**(6)** ensuring arrow on cam faces nearest edge

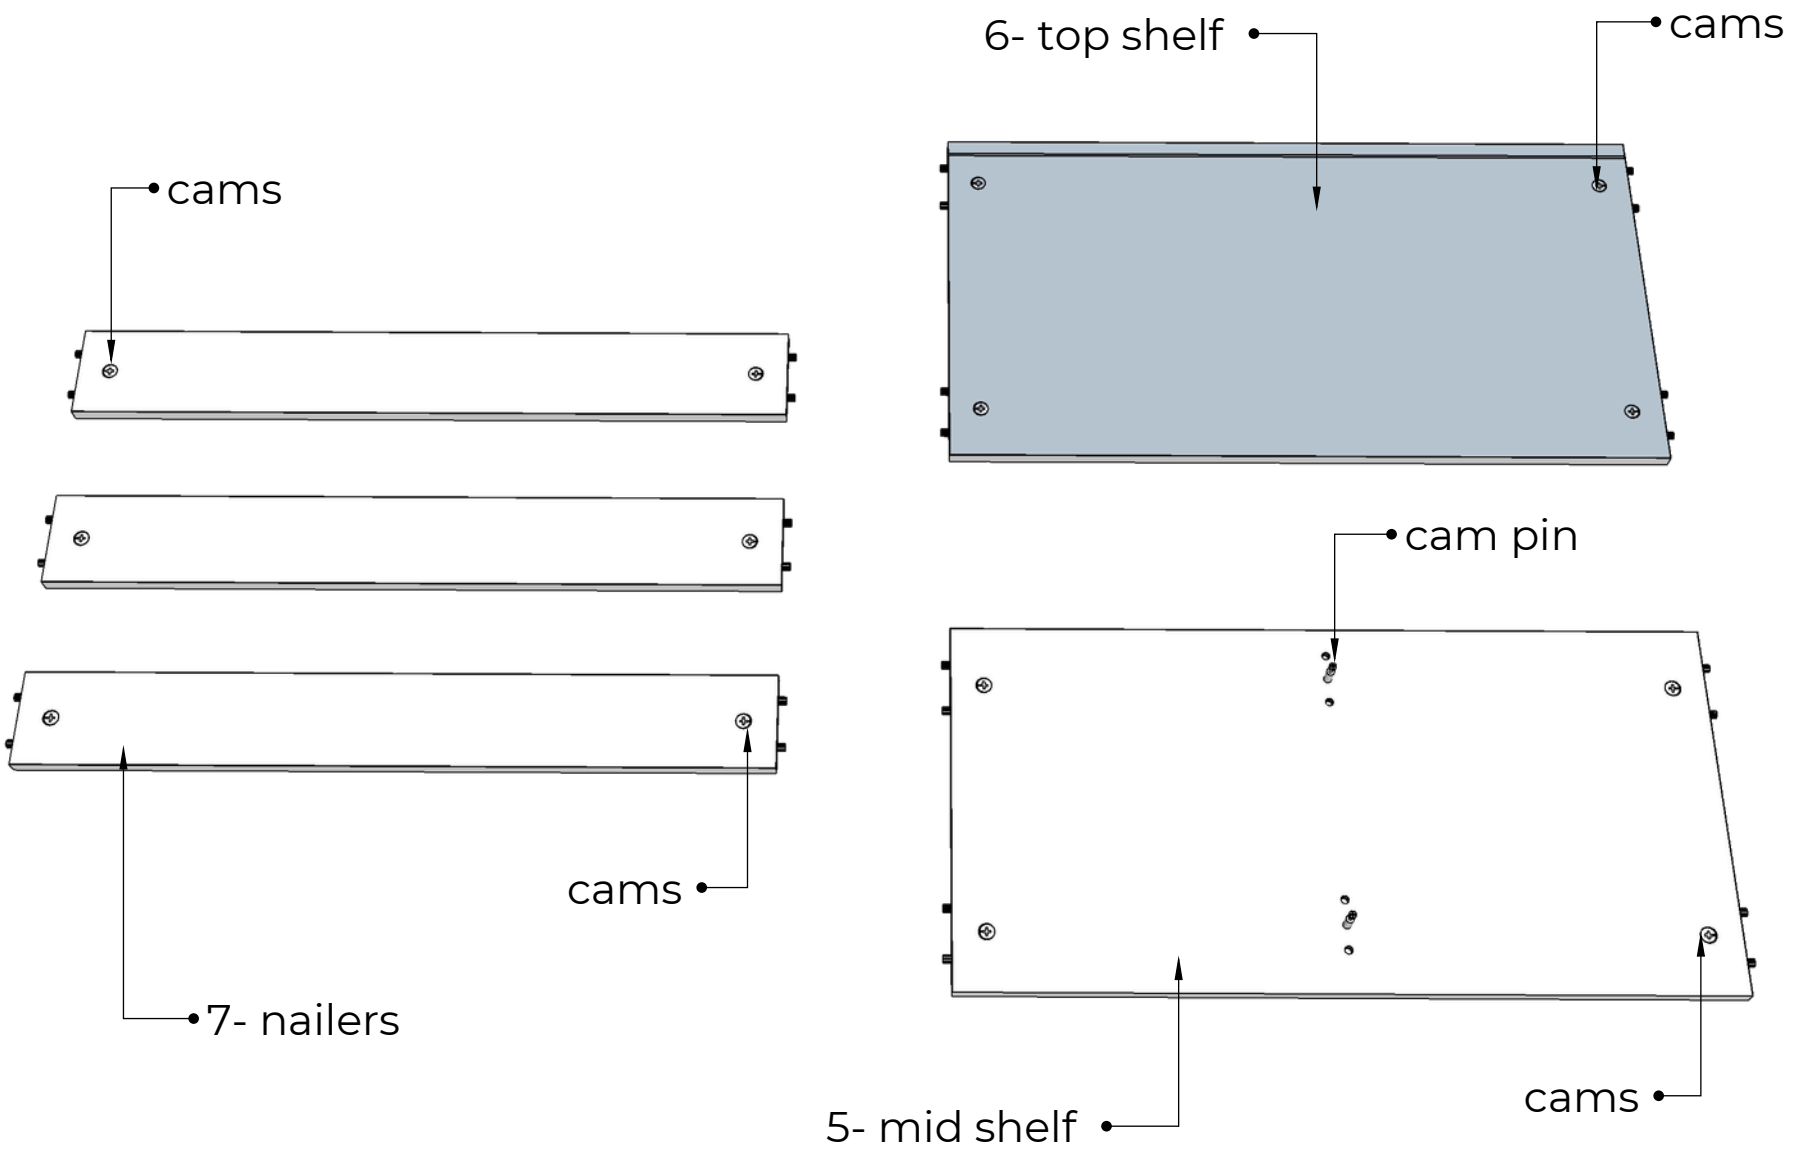

Step 3

CABINET ASSEMBLY


Attach nailers**(7)**, top shelf**(6)** and mid shelf**(5)** to left side**(1)** by sliding the cam pins**(D)** into the pre-drilled holes on respective parts, ensuring the dowel holes line up with dowels fasten cams**(C)** on top shelf**(6)**, mid shelf**(5)** and the back of the nailers

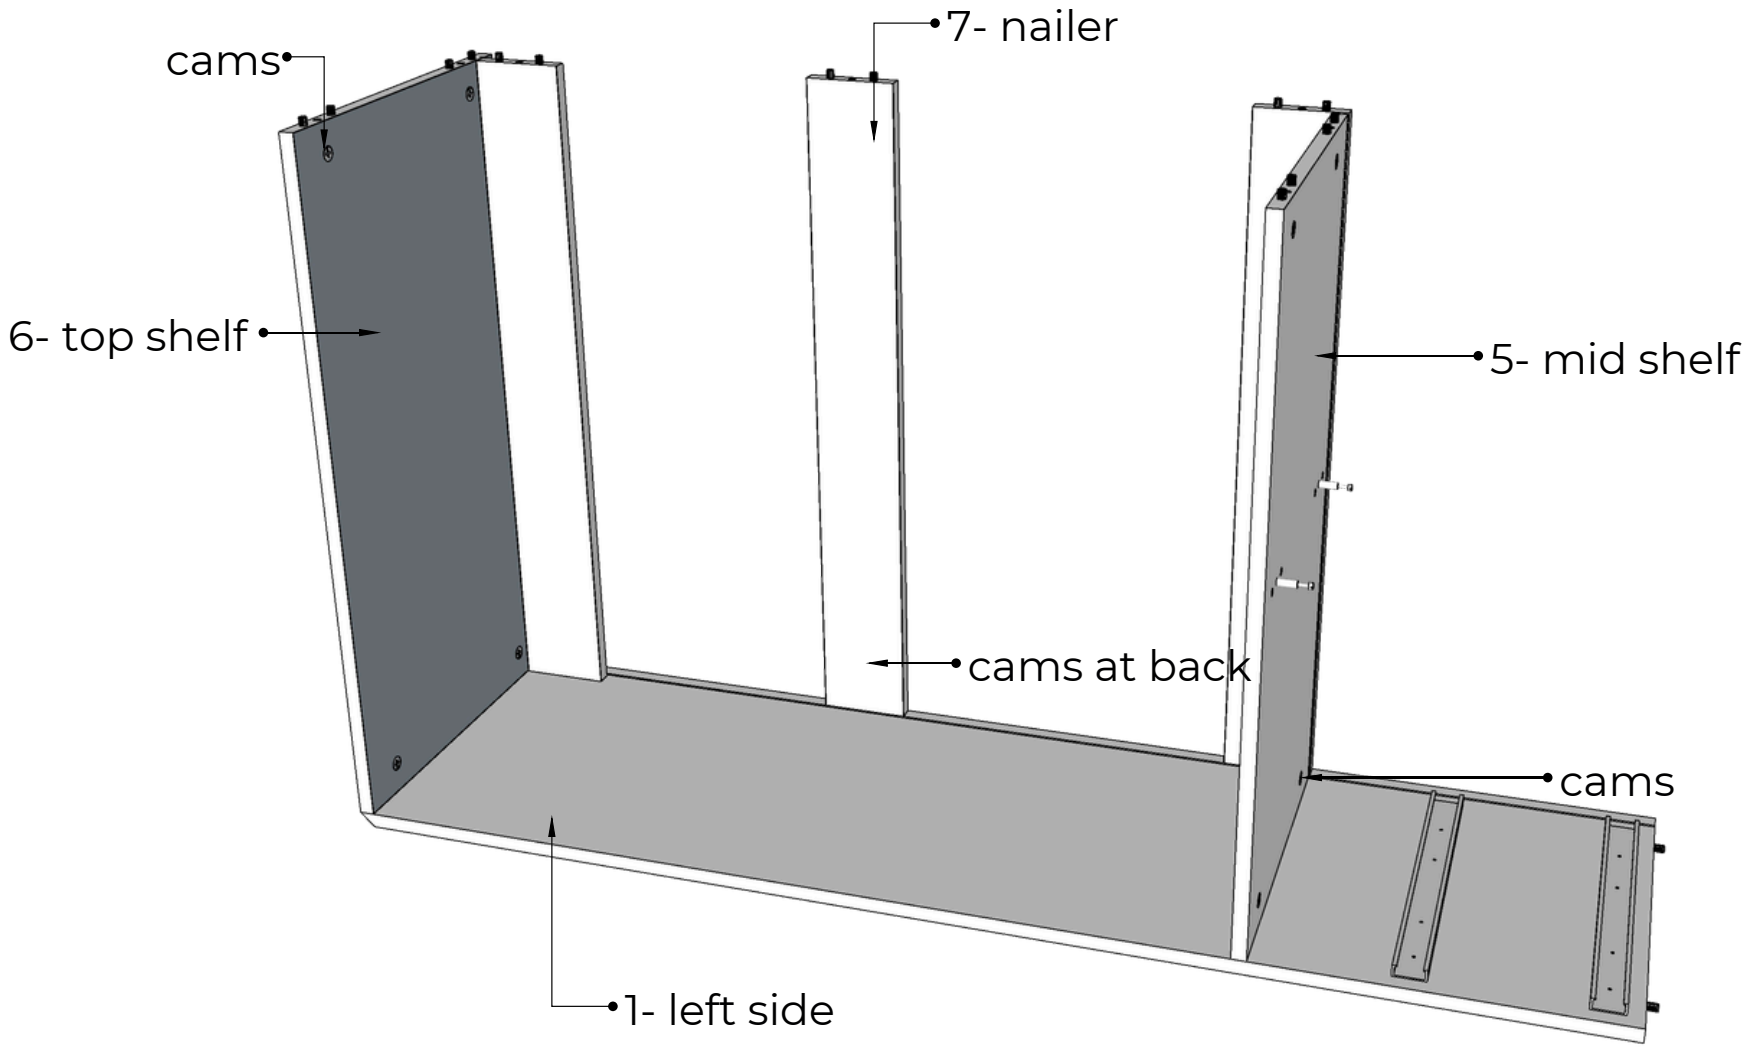

CABINET ASSEMBLY

Step 4


Attach right side**(2)** to assembly by sliding the cam pins**(D)** into the pre-drilled holes on respective parts, ensuring the dowel holes line up with dowels fasten cams**(C)** on top shelf**(6)**, mid shelf**(5)** and the back of the nailers**(7)**

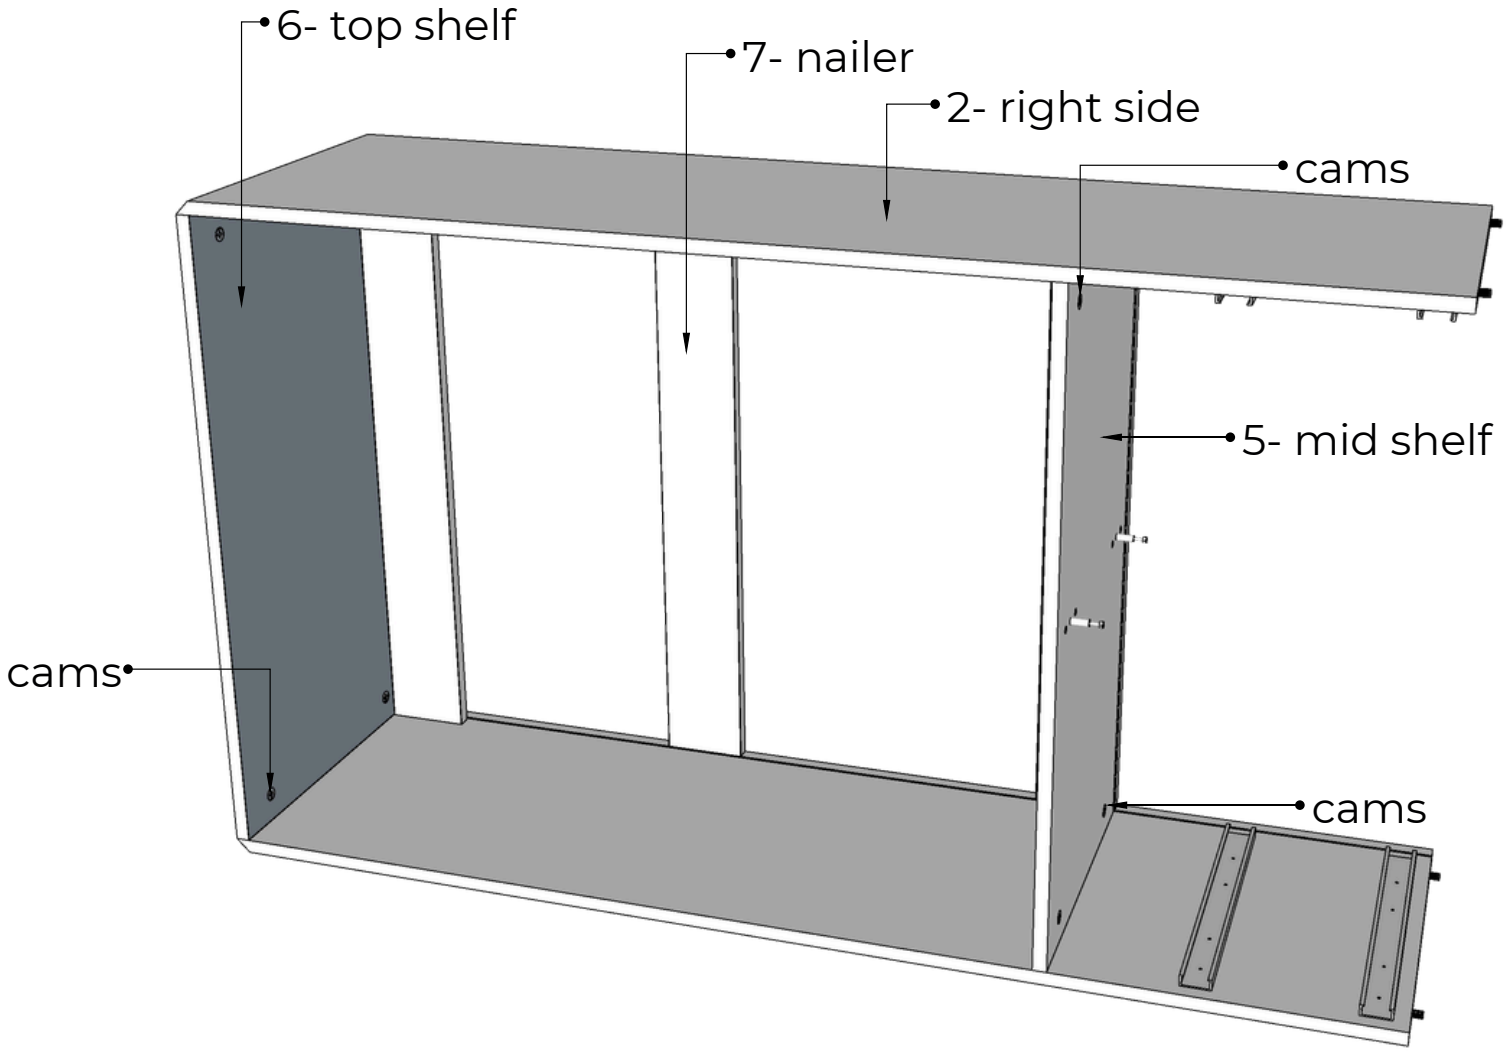

CABINET ASSEMBLY

Step 5


Slide backing**(8)** into assembly ensuring it fits into the grooves in the sides and also the top panel

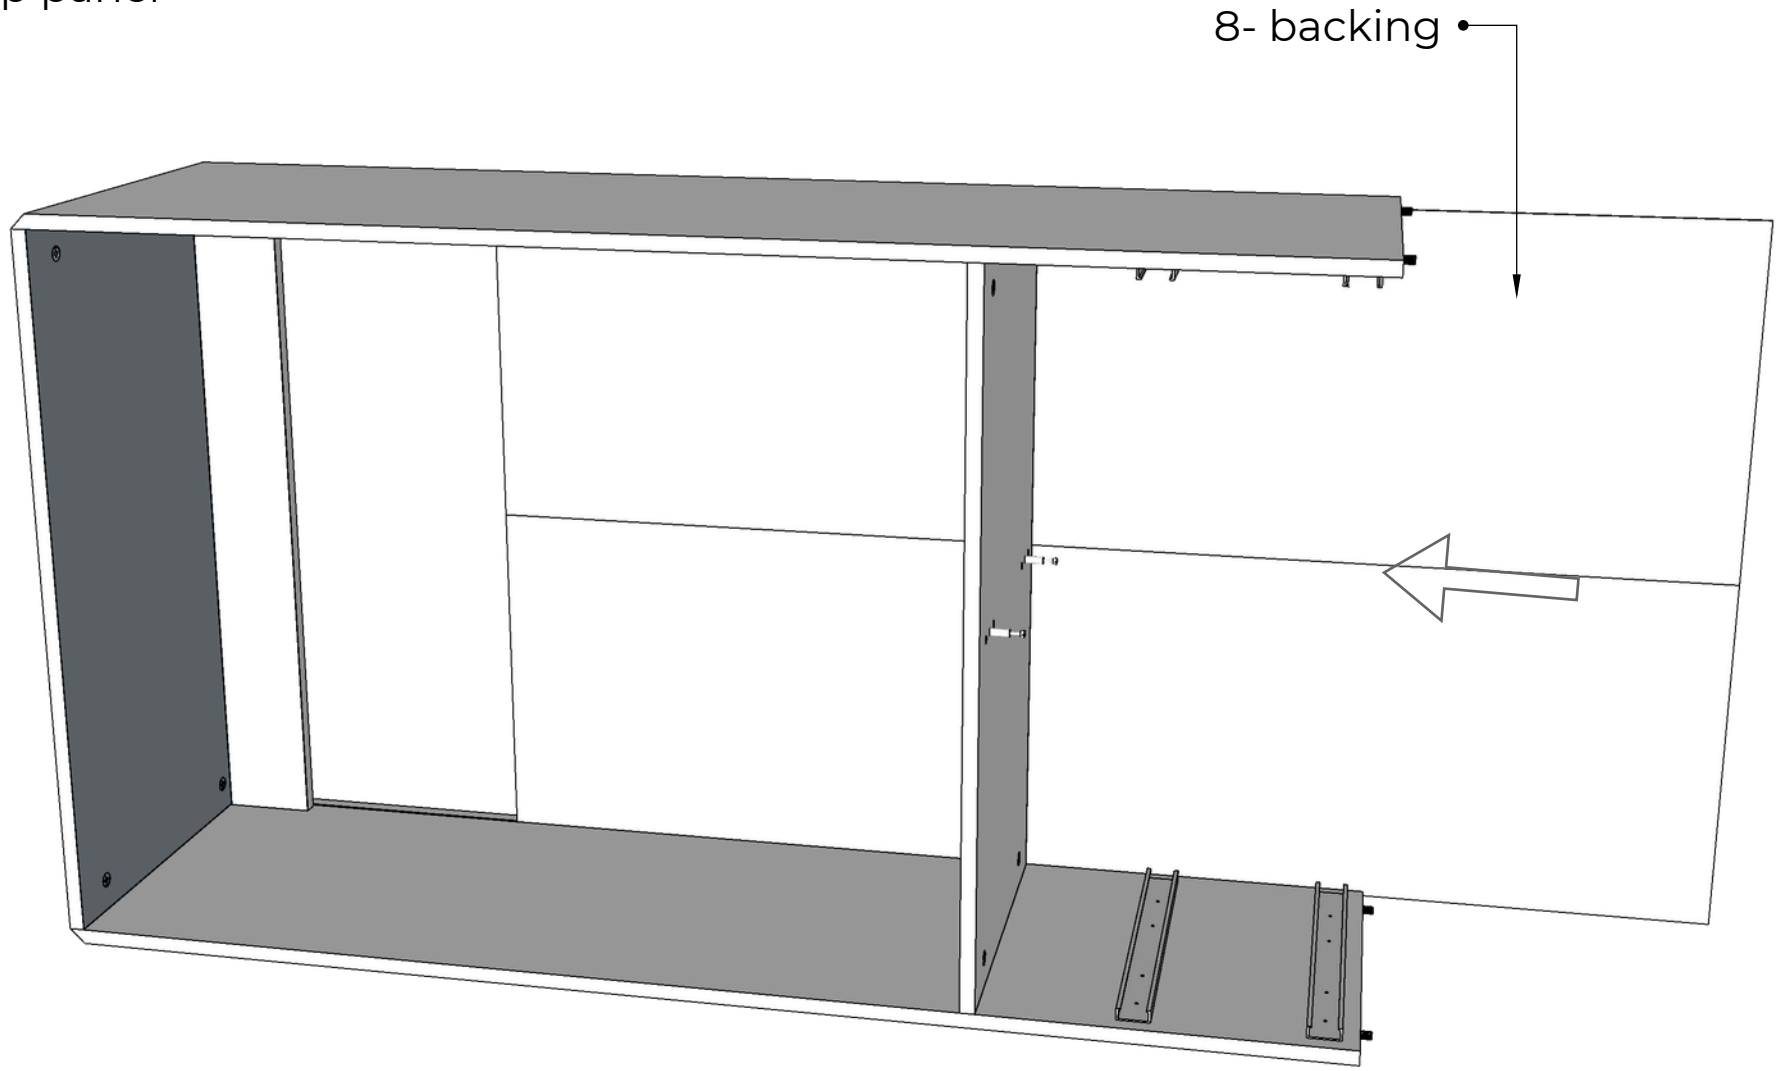

CABINET ASSEMBLY

Step 6


Attach divider**(3)** to mid shelf**(5)** by sliding the cam pins**(D)** into the pre-drilled holes on respective parts, ensuring the dowel holes line up with dowels fasten cams**(C)** on divider**(3)**

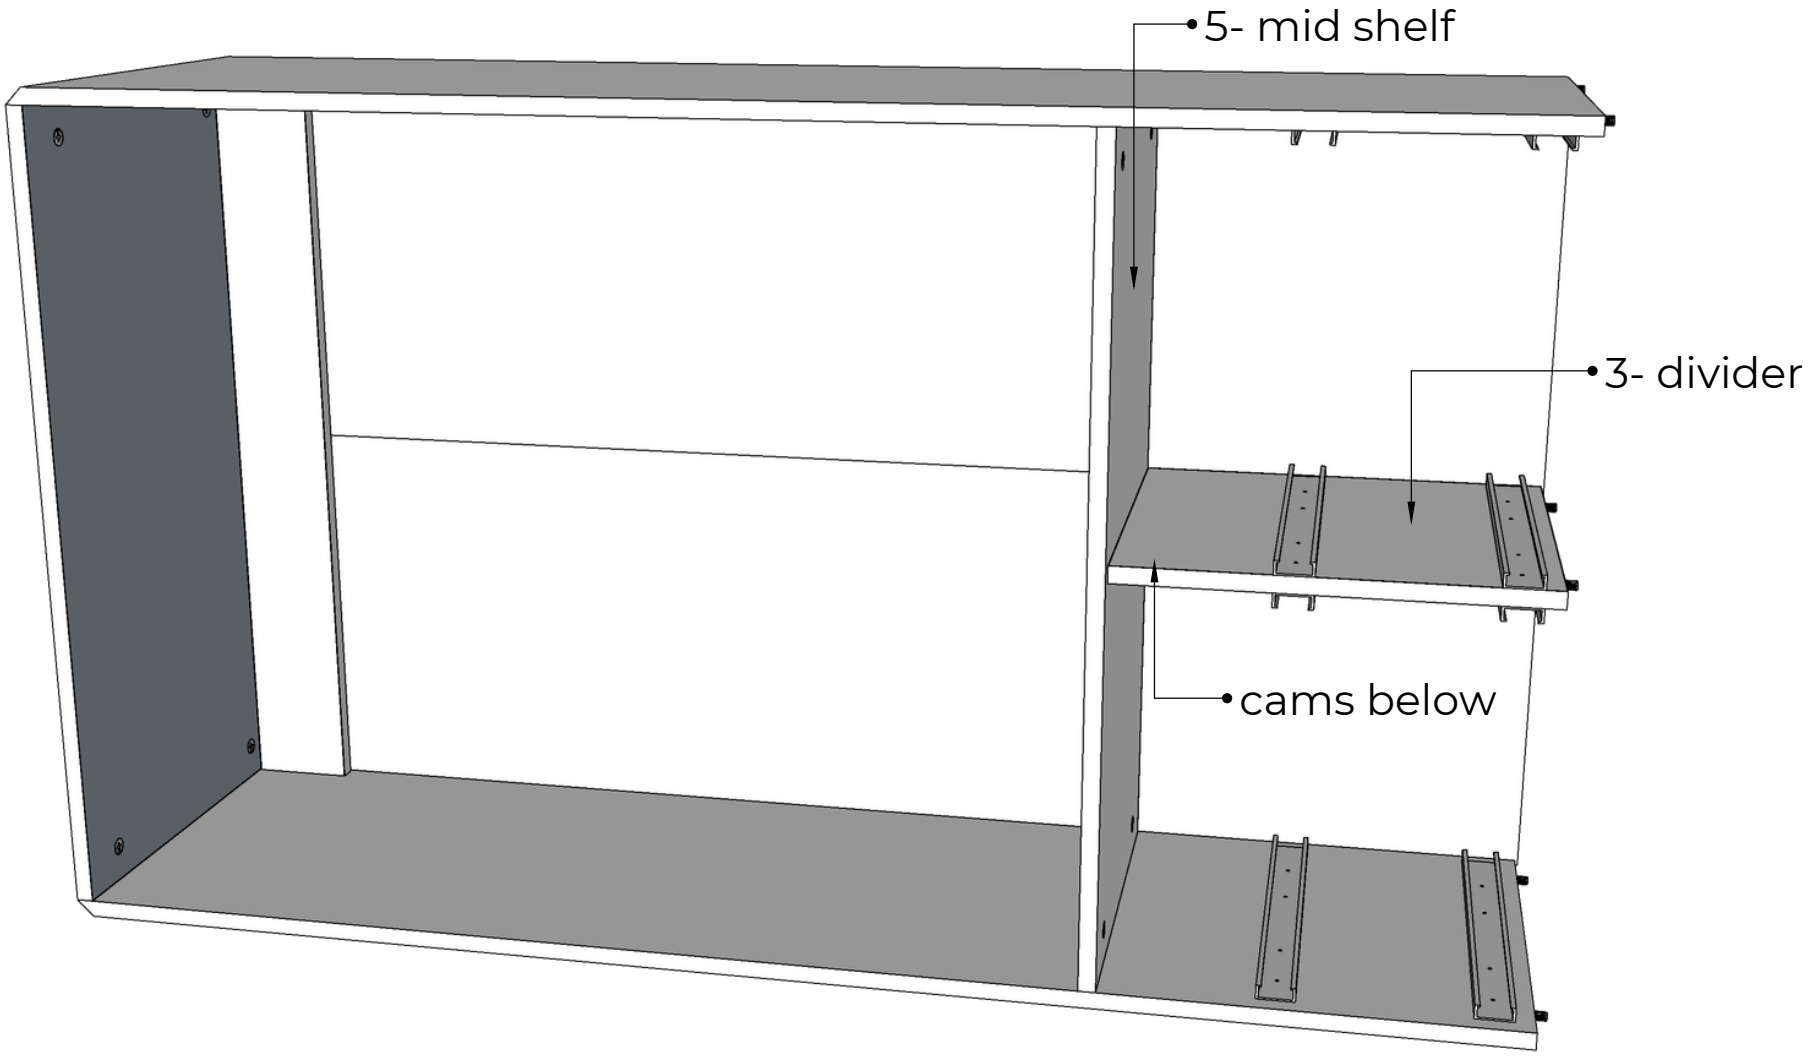

CABINET ASSEMBLY

Step 7


attach bottom panel**(4)** to assembly by sliding the dowels into the pre-drilled holes on bottom panel**(4)** ensuring backing**(8)** fits into groove in bottom panel**(4)** fasten with Confirmat screws**(A)**

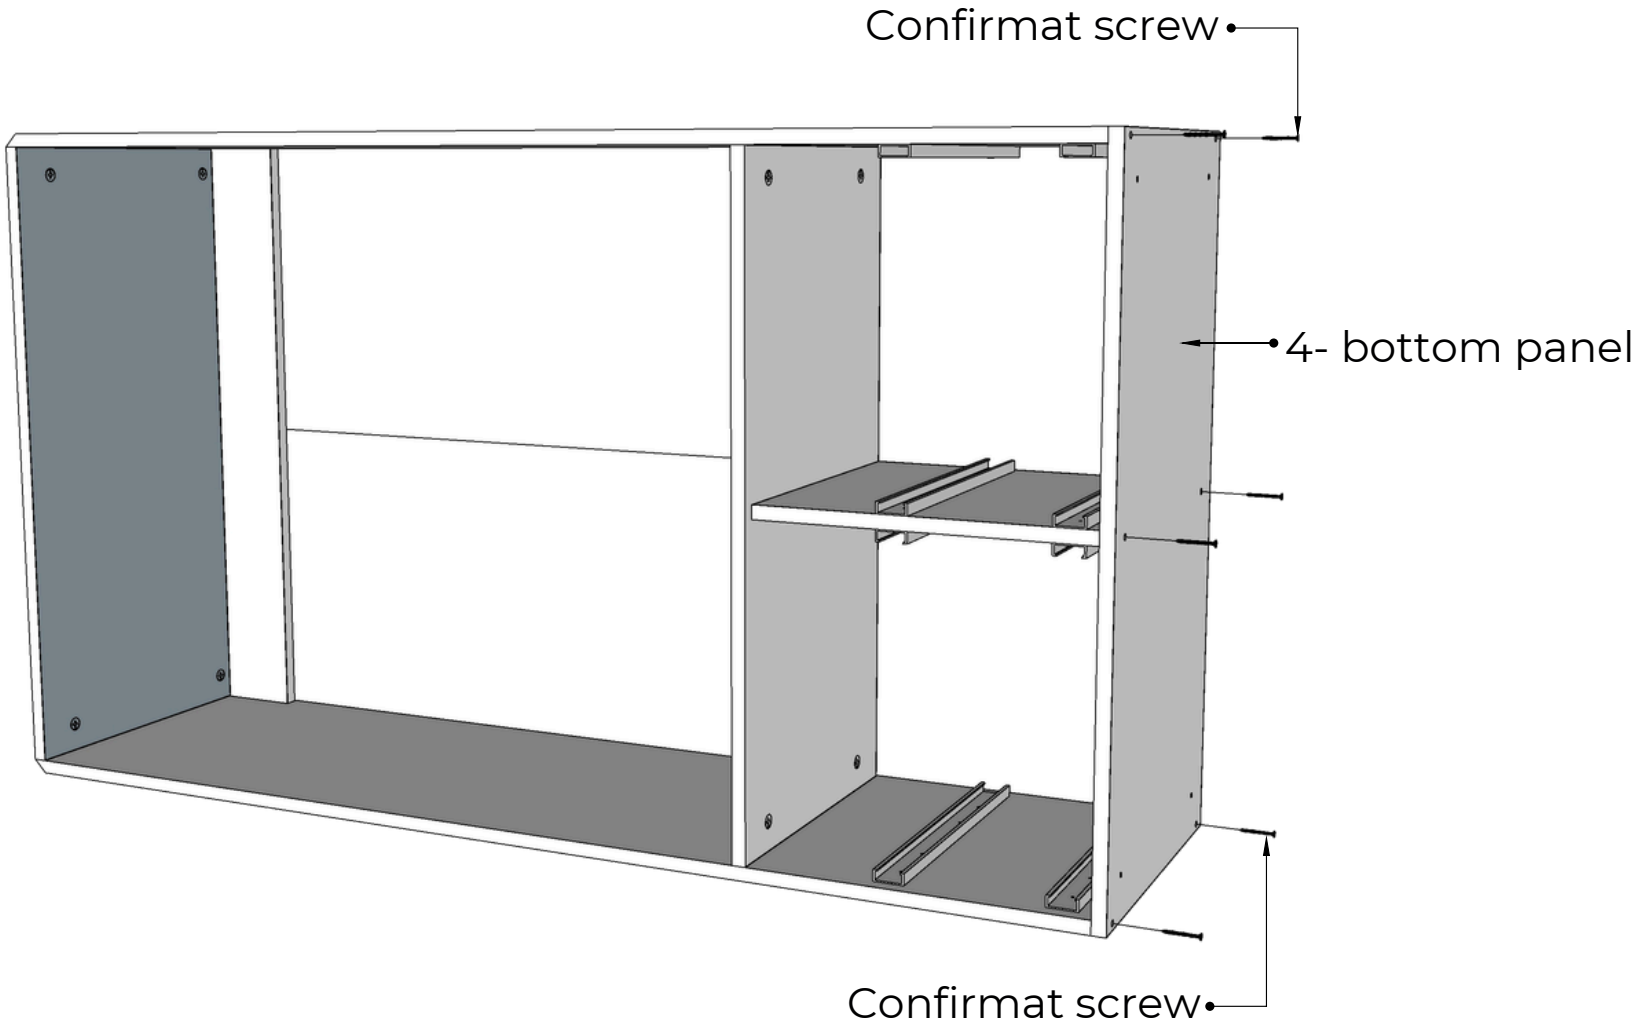

CABINET ASSEMBLY

Step 8


Align the holes in the bottom**(4)** with the holes in the legs**(E)** and attach the legs to the bottom panel**(4)** by fastening the pan head screws**(F)** through the bottom panel**(4)** into the legs**(E)**

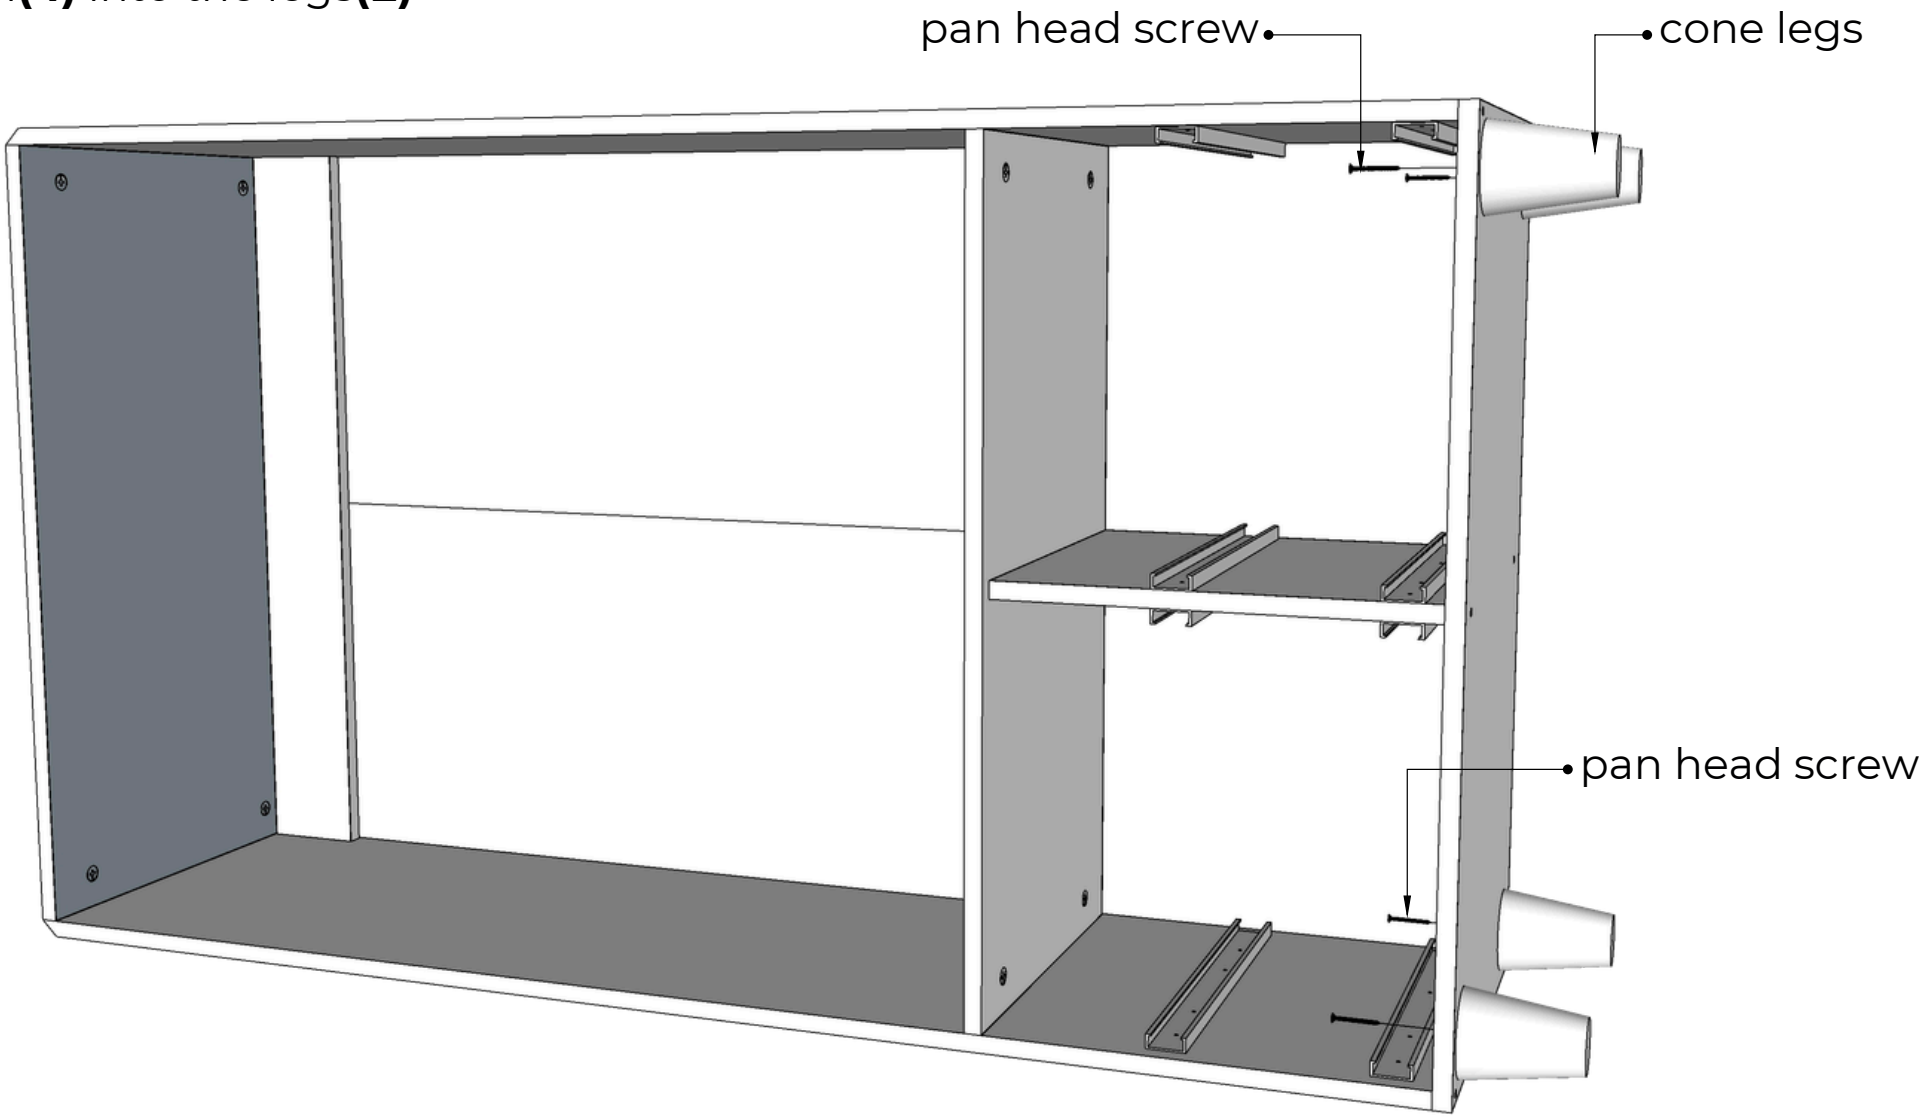

CABINET ASSEMBLY

Step 9


Attach roof**(10)** right hand panel to triangular panel**(9)** with Confirmat Screw**(A)**

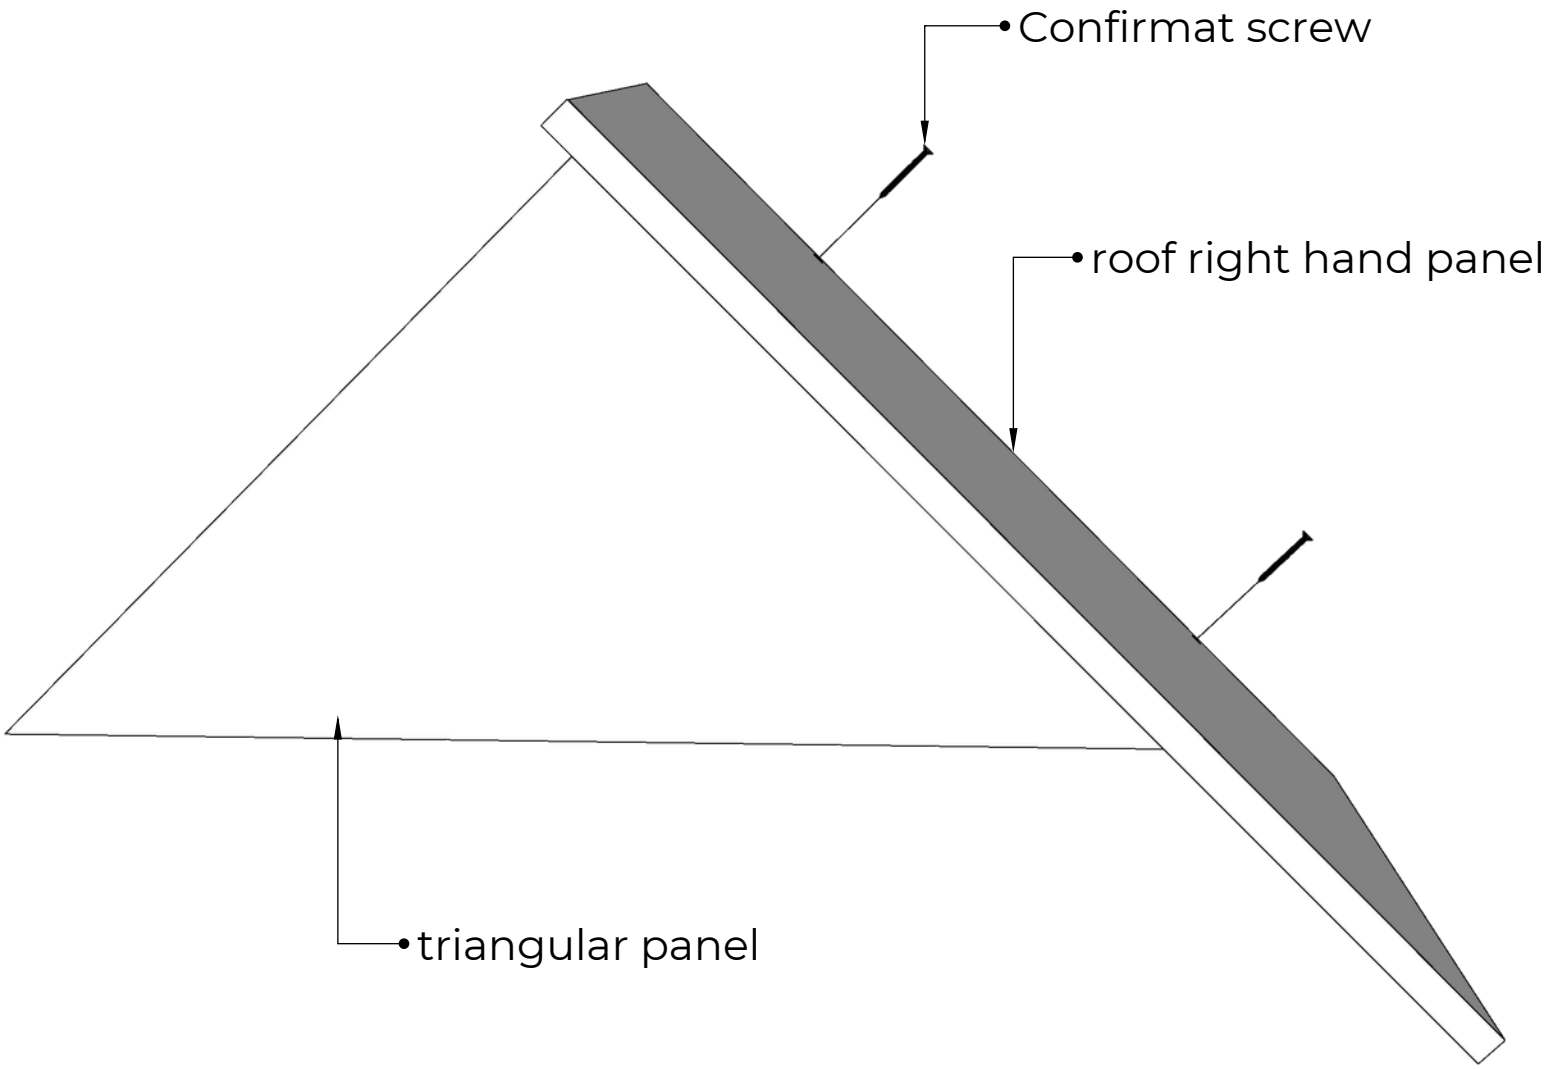

CABINET ASSEMBLY

Step 10


Attach left roof(**10)** panel to previous assembly and fasten with Confirmat screws**(A)** also ensure to fasten the Confirmat screws**(A)** that joins the two roof panels

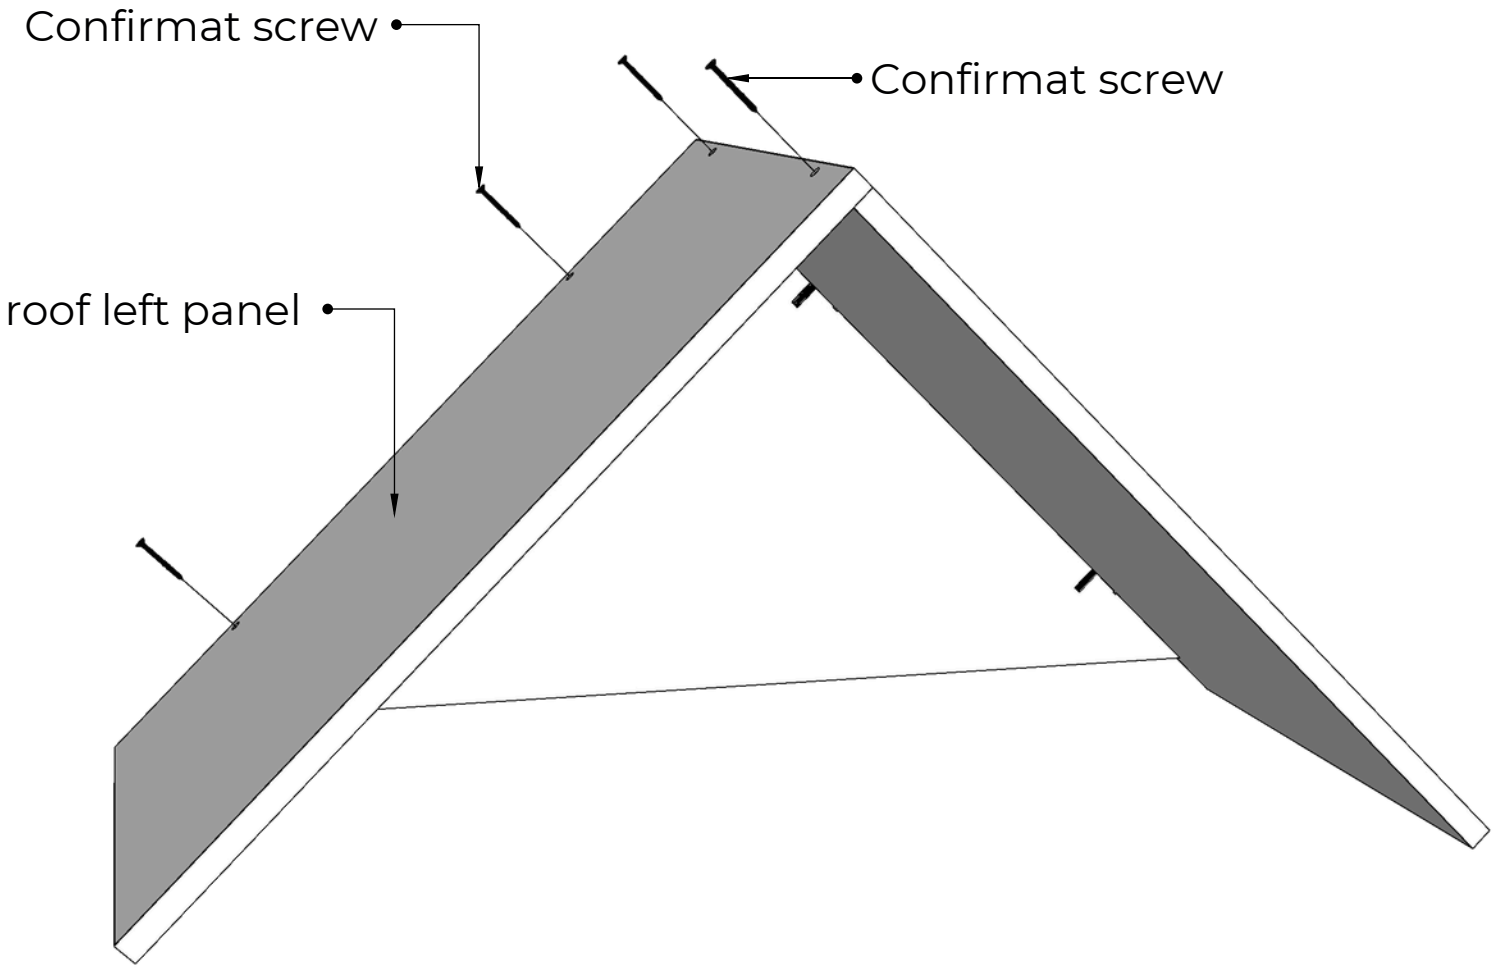

CABINET ASSEMBLY

Step 11


Align roof**(10)** structure over main assembly and fasten with supplied drywall screws**(B)**

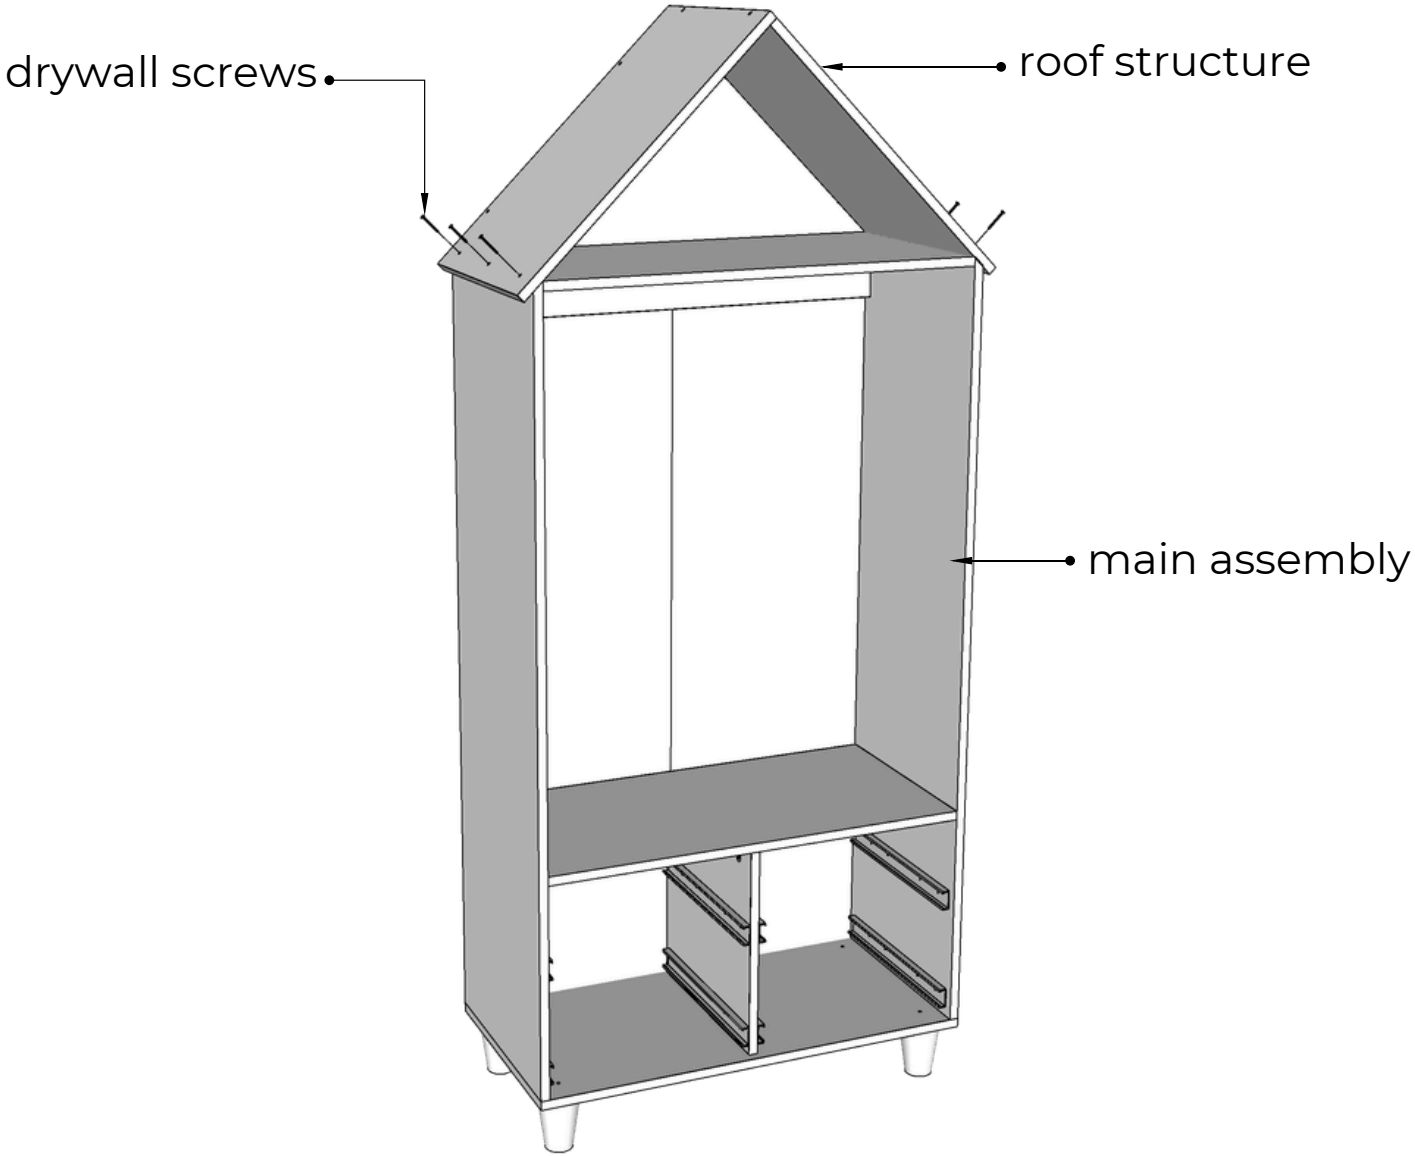

CABINET ASSEMBLY

Step 12


Attach oval Rail Metal Brackets**(H)** to sides with supplied screws and lower in the hanging rail**(G)** into the brackets

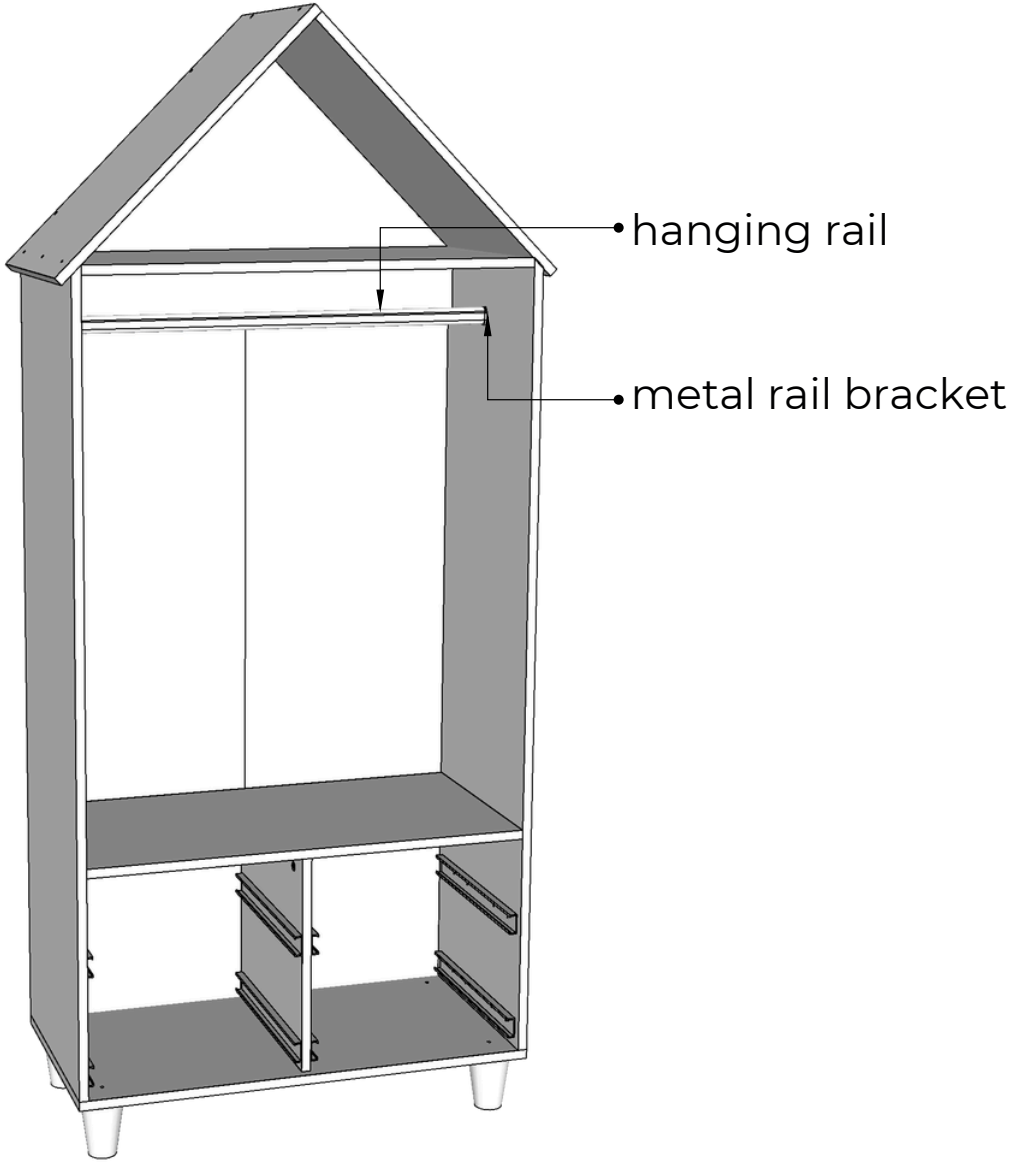

CABINET ASSEMBLY

Step 13


Slide Drawers into main body by aligning the metal runner mountings and pressing it in slowly. It may seem tight while you press it in. After it is fully inserted it will move freely.

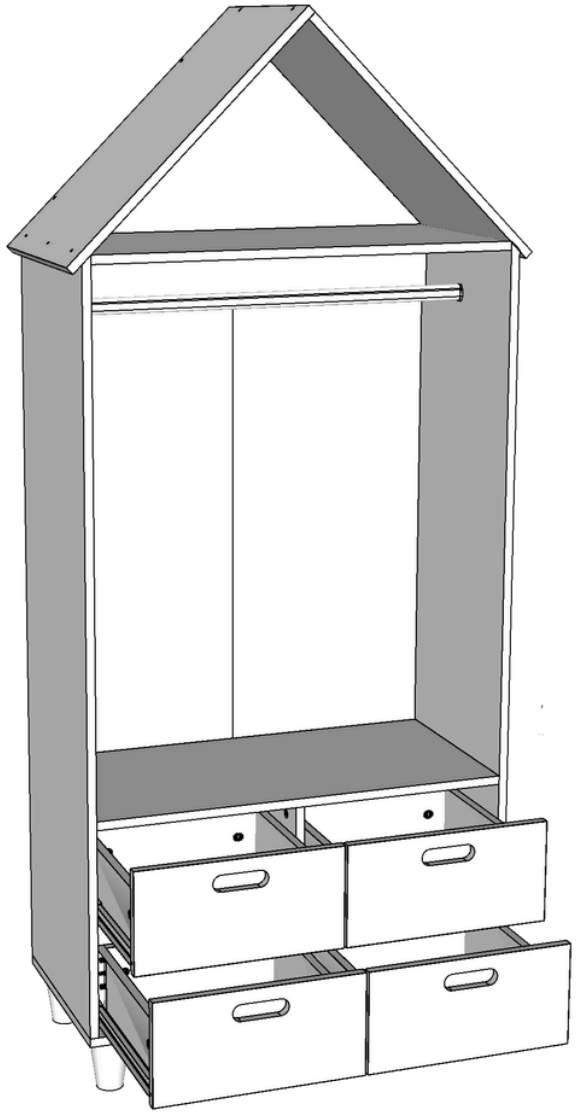

CABINET ASSEMBLY

Step 14


Completed unit

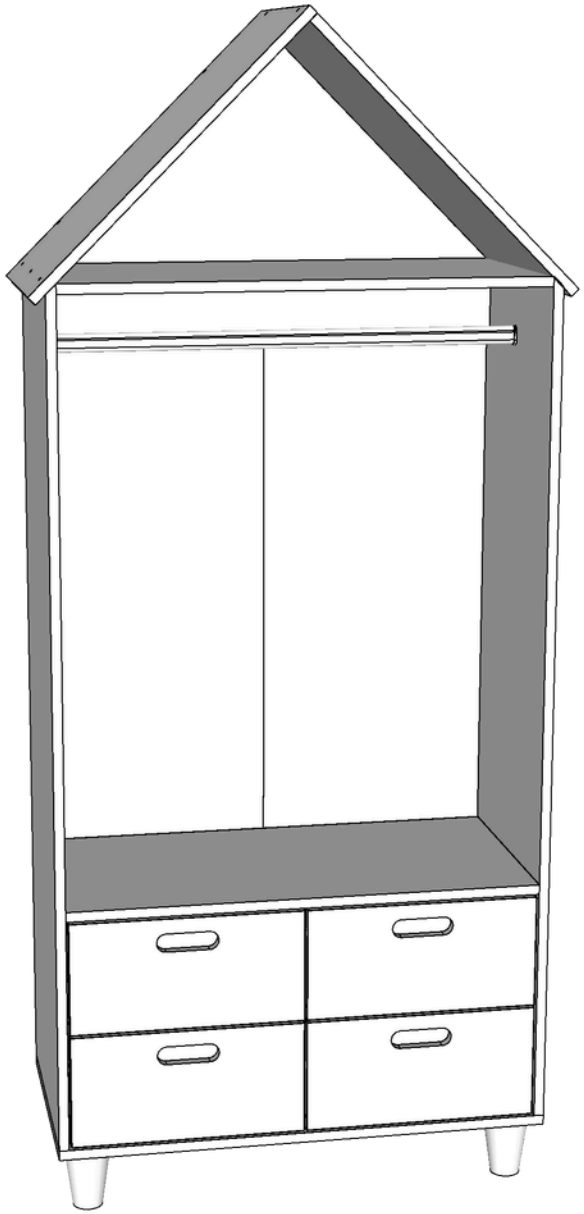

DRAWER ASSEMBLY

Step 1


Insert cam pins**(D)** into drawer front**(11)** and drawer sides**(12,13)**

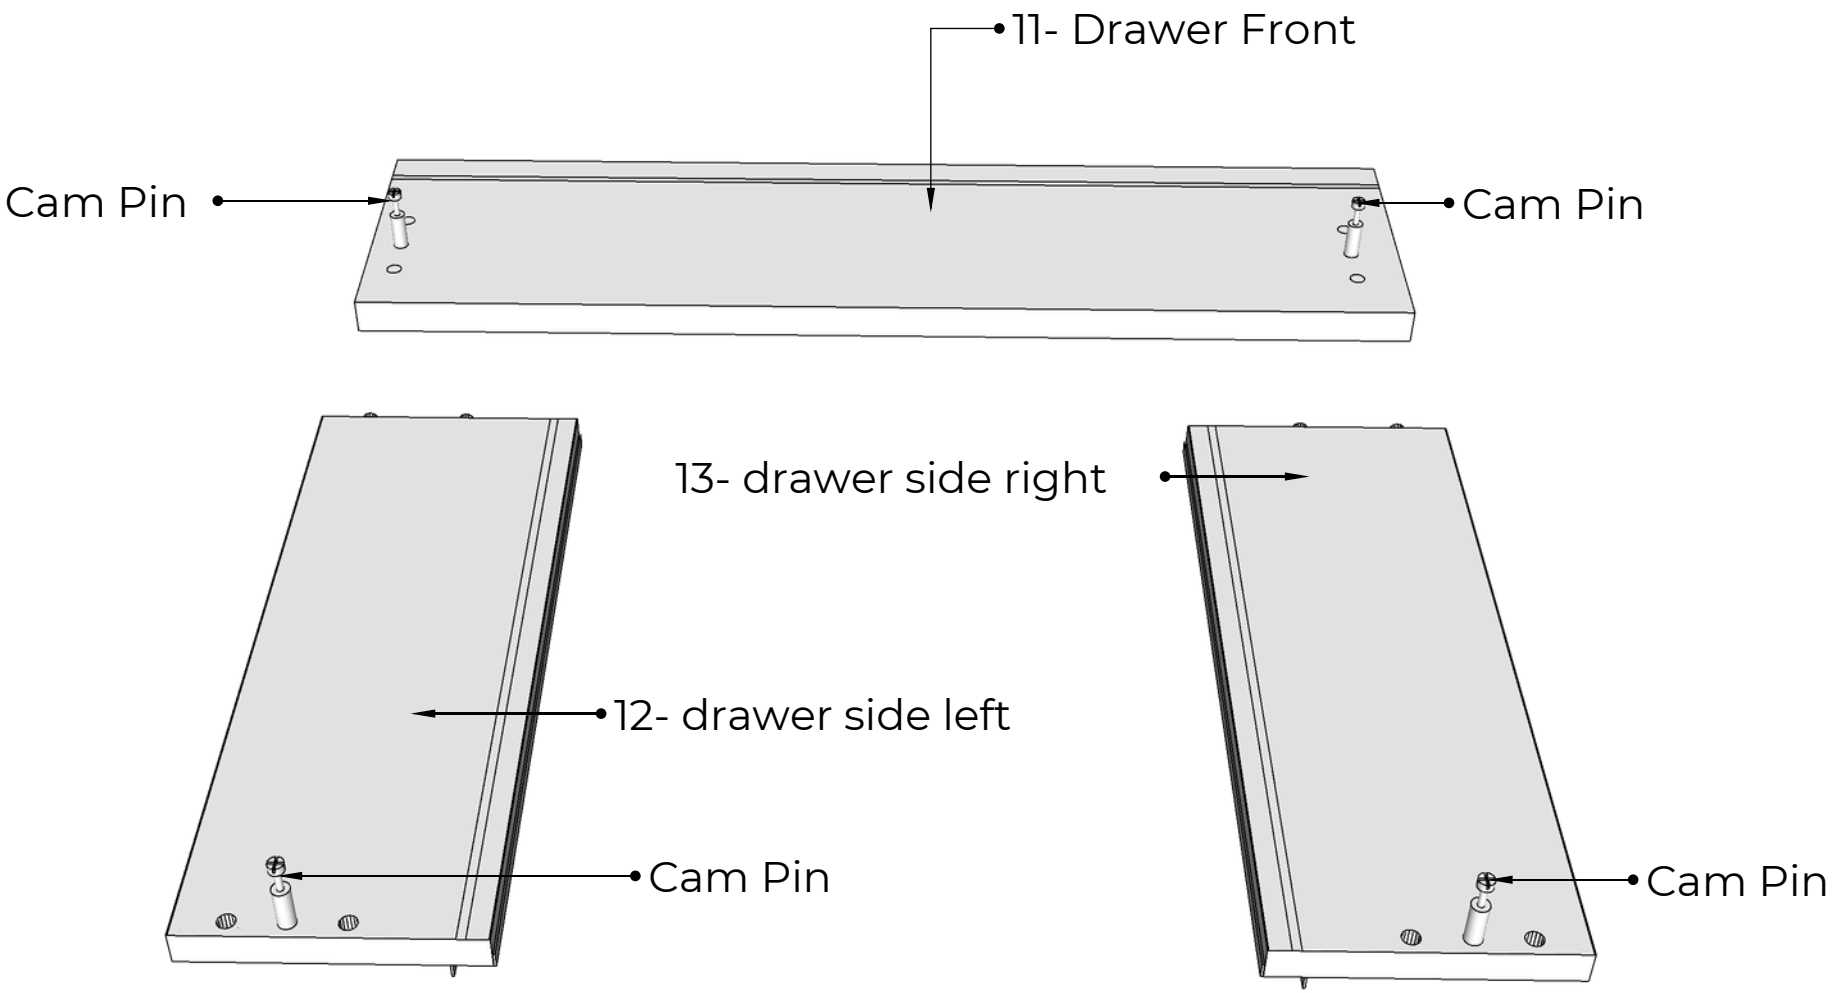

Step 2

DRAWER ASSEMBLY


Insert cams**(C)** into large holes in drawer sides**(12,13)** and drawer rear**(14)**, ensuring the arrow on the cam faces nearest edge

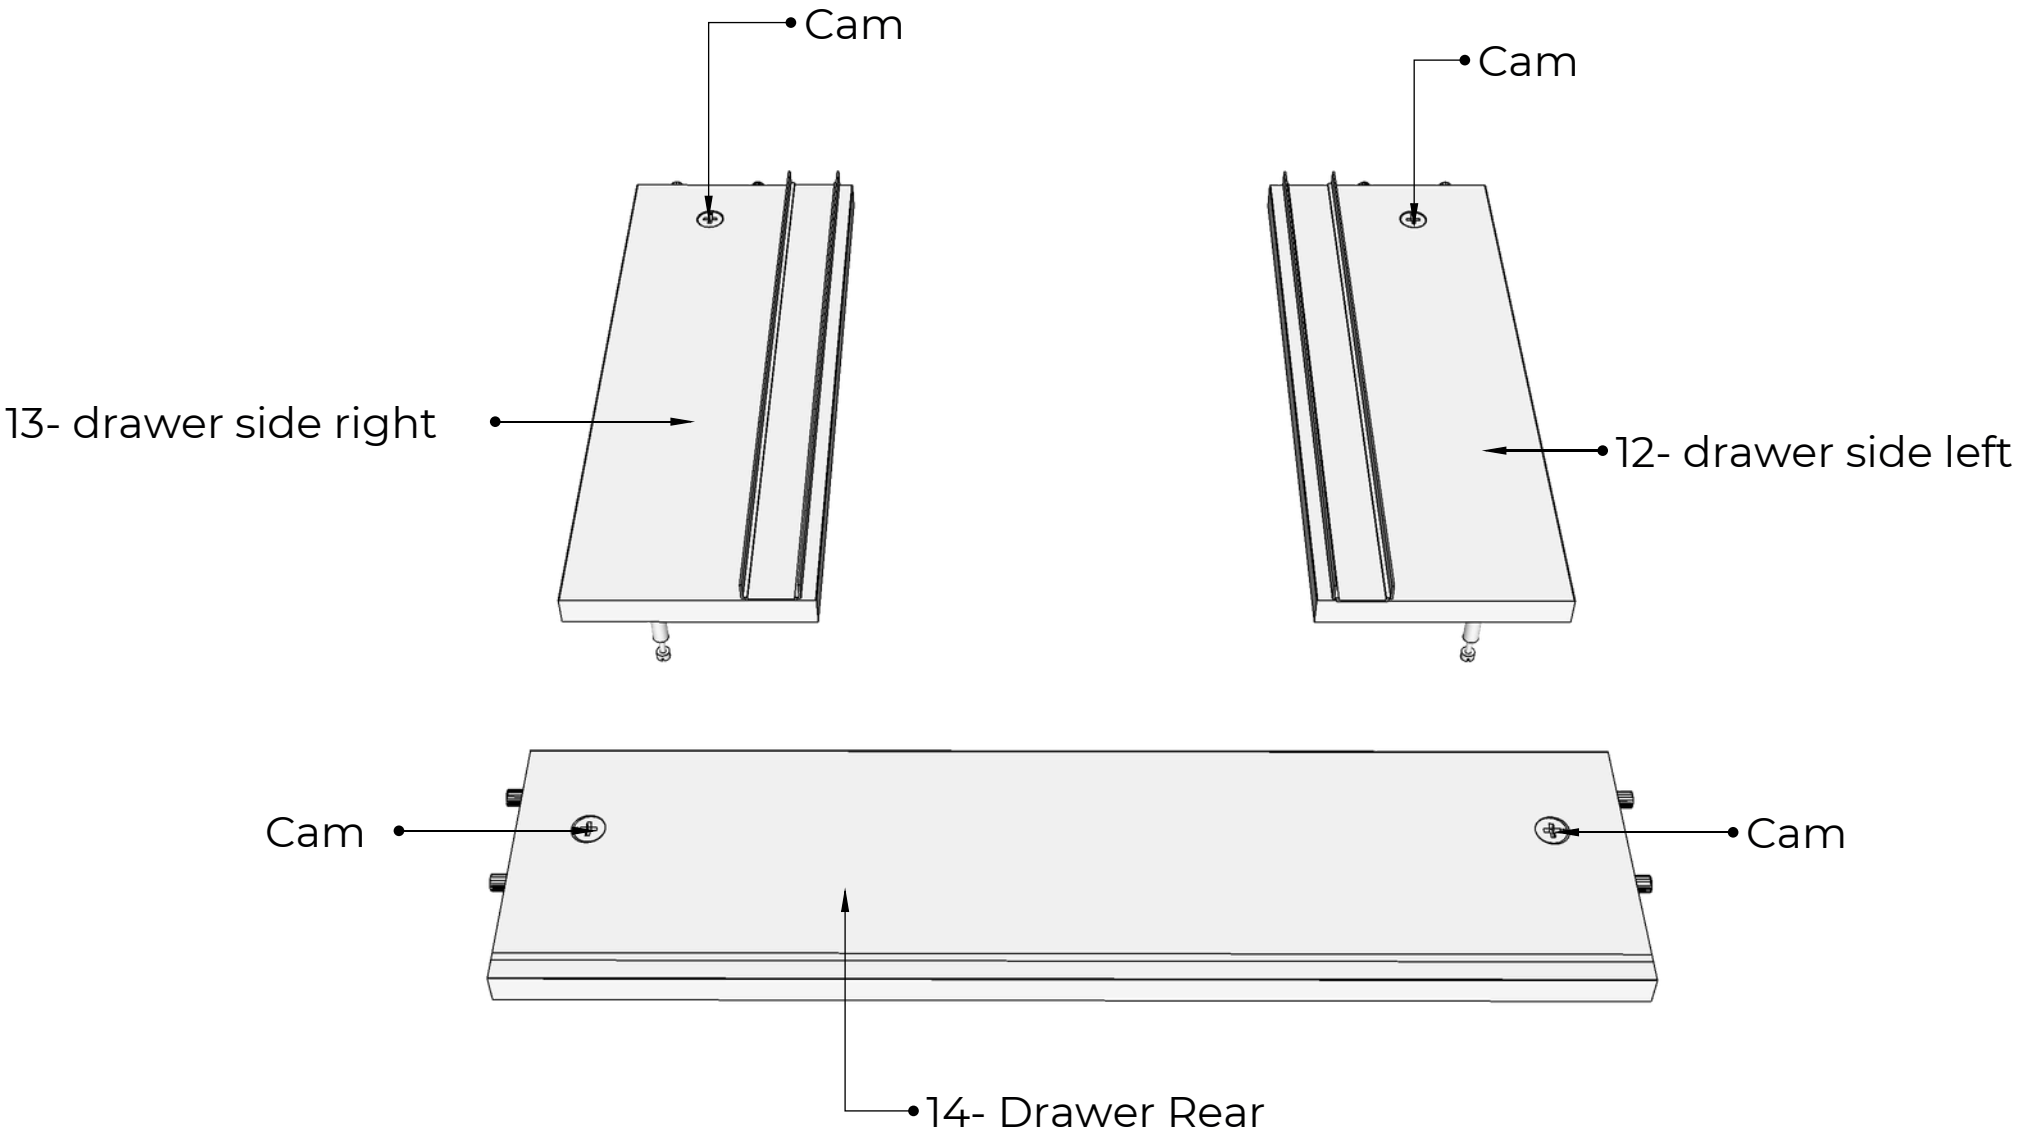

DRAWER ASSEMBLY

Step 3


Attach drawer sides**(12,13)** to drawer rear**(14)** and tighten cams**(C)**

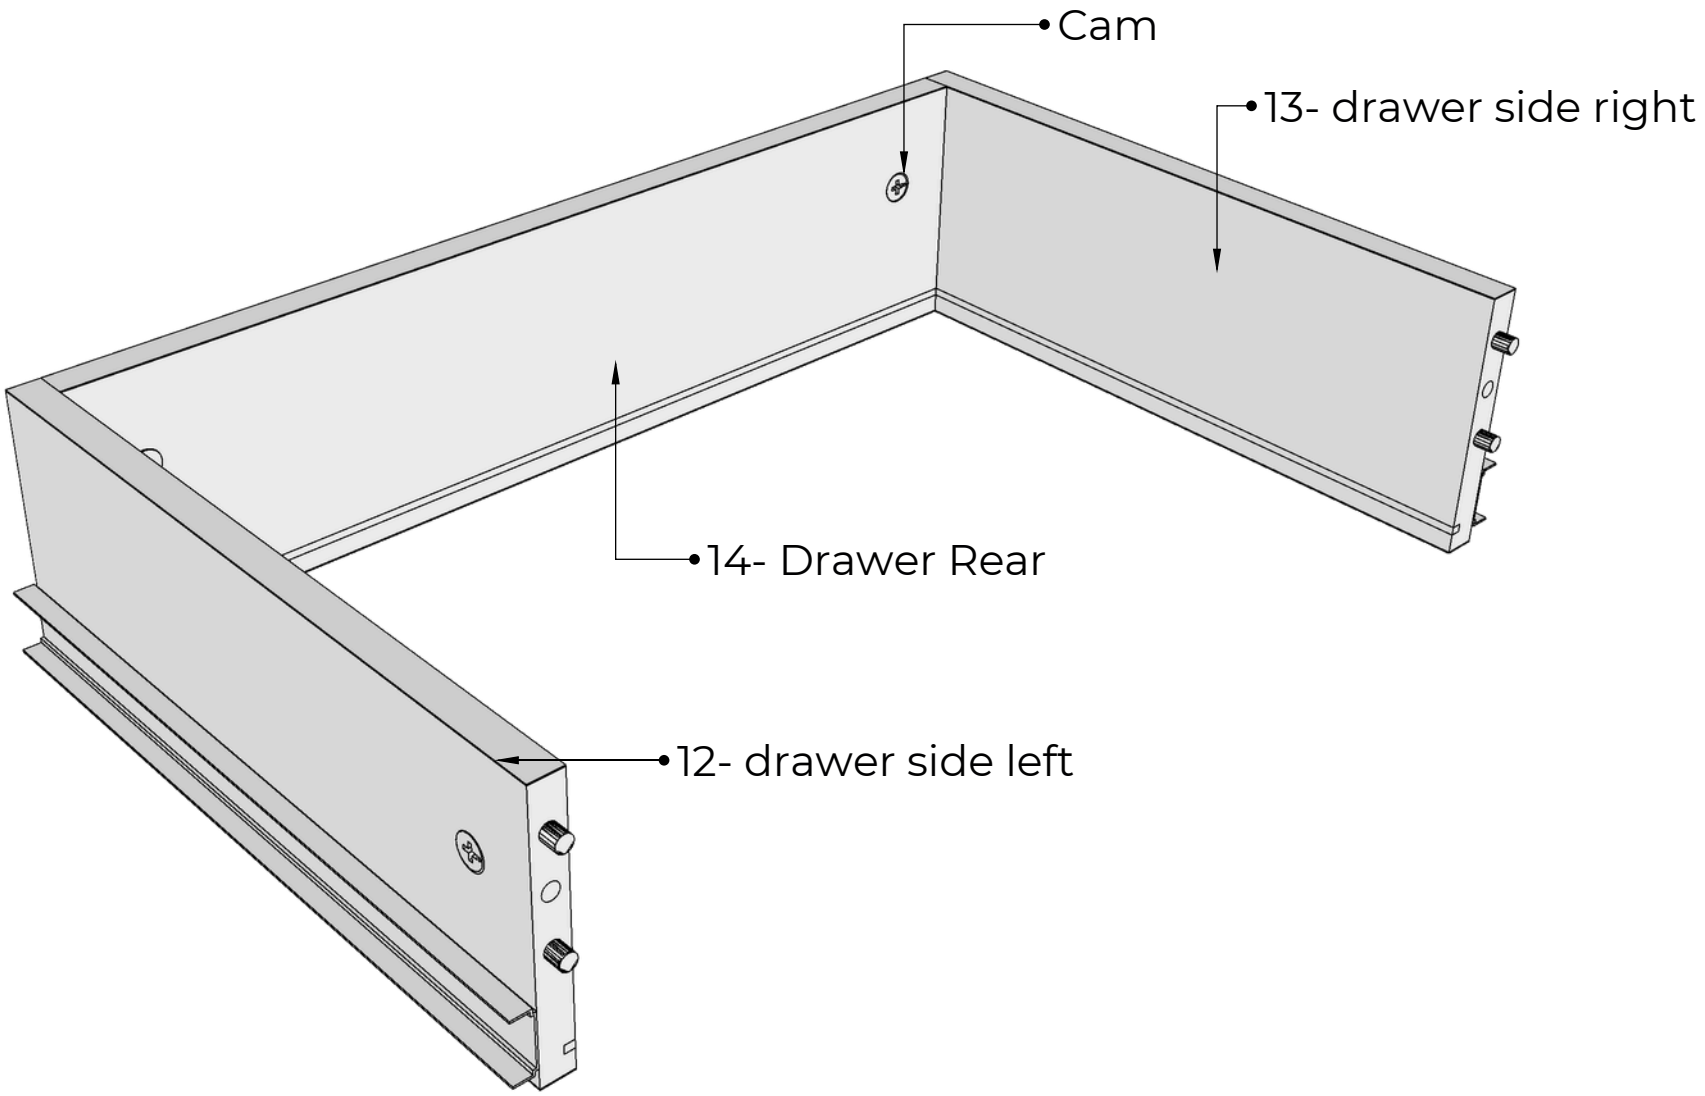

DRAWER ASSEMBLY

Step 4

Slide drawer bottom**(4)** into the grooves on the drawer sides**(12,13)** and drawer rear**(14)**

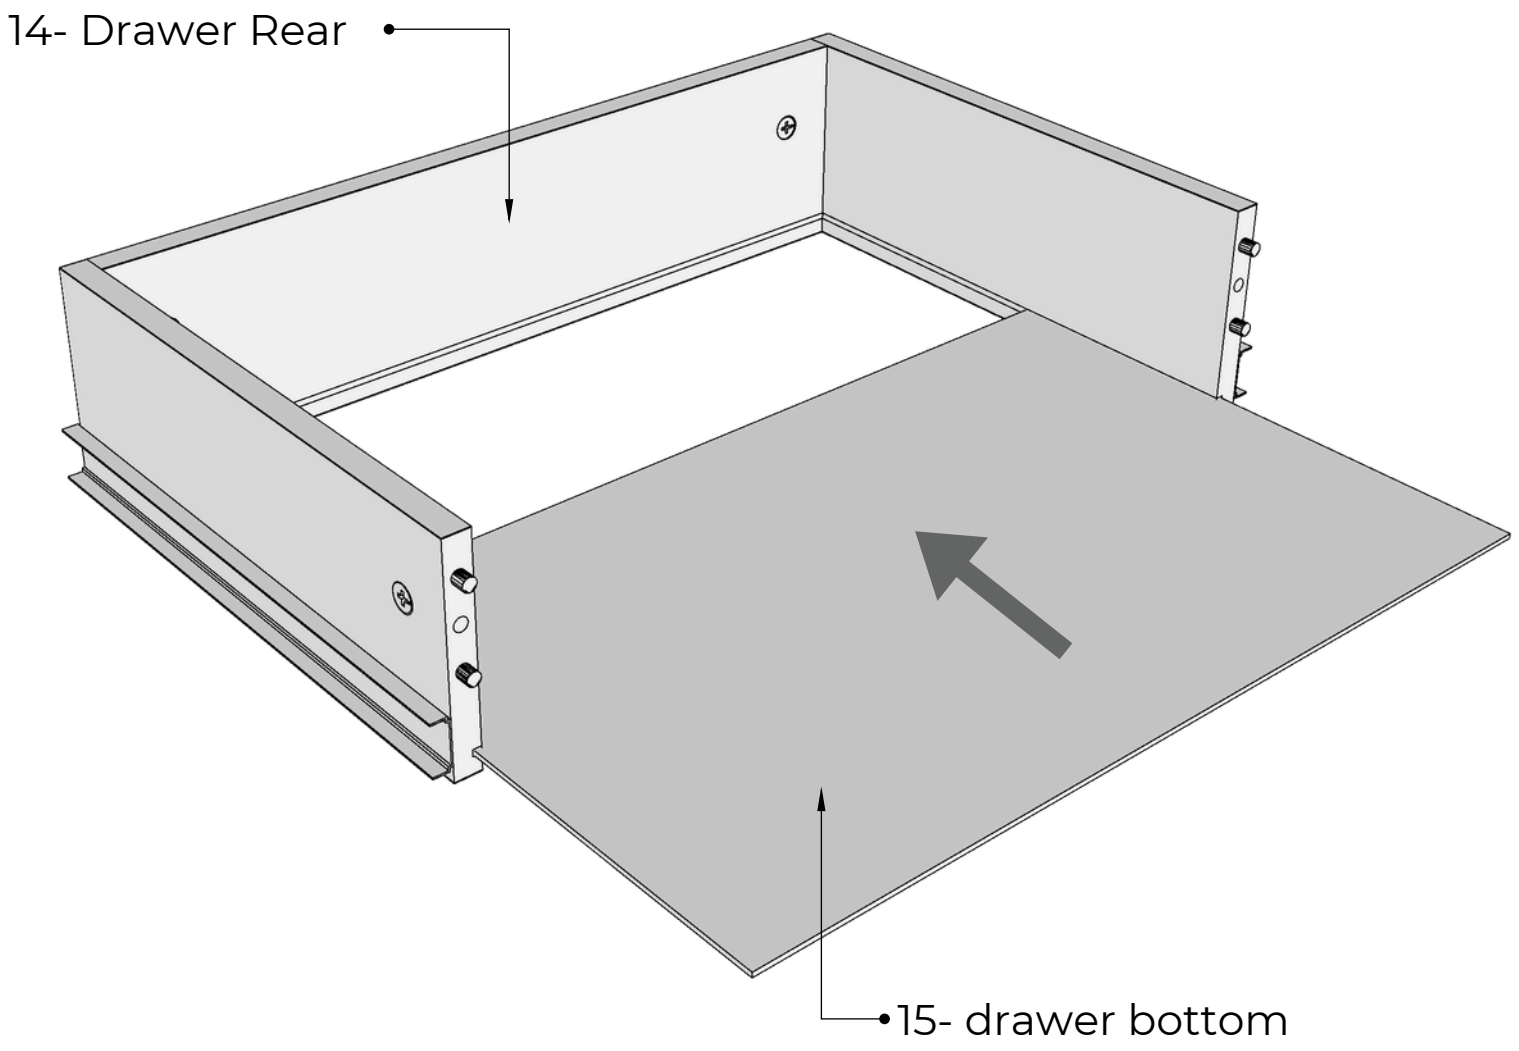

DRAWER ASSEMBLY

Step 5

Attach drawer front**(11)** to drawer assembly by sliding the cam pins**(D)** into the holes on the drawer sides**(12,13)** and tightening the cams**(C)**
Ensure that the drawer bottom**(15)** fits into the groove in the drawer front**(11)**

