# KIDS TOY BOX ASSEMBLY INSTRUCTIONS

## Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to saftey testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create a beautifully space to feel comfortable in.

**Here are a few assembly tips before you get started:**



**Make Time**

The first step to all seamless assemblys is taking a moment to carfully read through the instructions- you are already on your way to create a beautifully functional space!



**Set The Mood**

Put on your favourite playlist, order a pizza and pour yourself a drink to get in the mood!



**Tool Check**

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



**Room Reveal**

You Did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging.

## Creating your home

**Time to assemble 30 min - People needed 1 - Difficulty level 6/10 - Tools needed - Phillips scredriver - allen key (supplied)**

# KIDS TOY BOX ASSEMBLY INSTRUCTIONS

## Parts List

| | | |
|---|---|---|
| **1.** | Left Side (Short) | X 1 |
| **2.** | Right Side (Short) | X 1 |
| **3.** | Front 1 | X 1 |
| **4.** | Front 2 | X 1 |
| **5.** | Bottom | x 1 |

## Hardware

**A**

Glue Bottle



x 1

**B**

Castors



x 4

**C**

G - Screws (9 x 16)



x 16


**WARNING**: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall.




Phillips screwdrivers required. For quicker assembly, we recommend the use of a power drill on a low-speed setting.


**Step 1**

fill dowel holes in front 1**(3)** with wood glue
Align dowels in left**(1)** and right**(2)** short panels with holes in front 1**(3)** and press down firmly

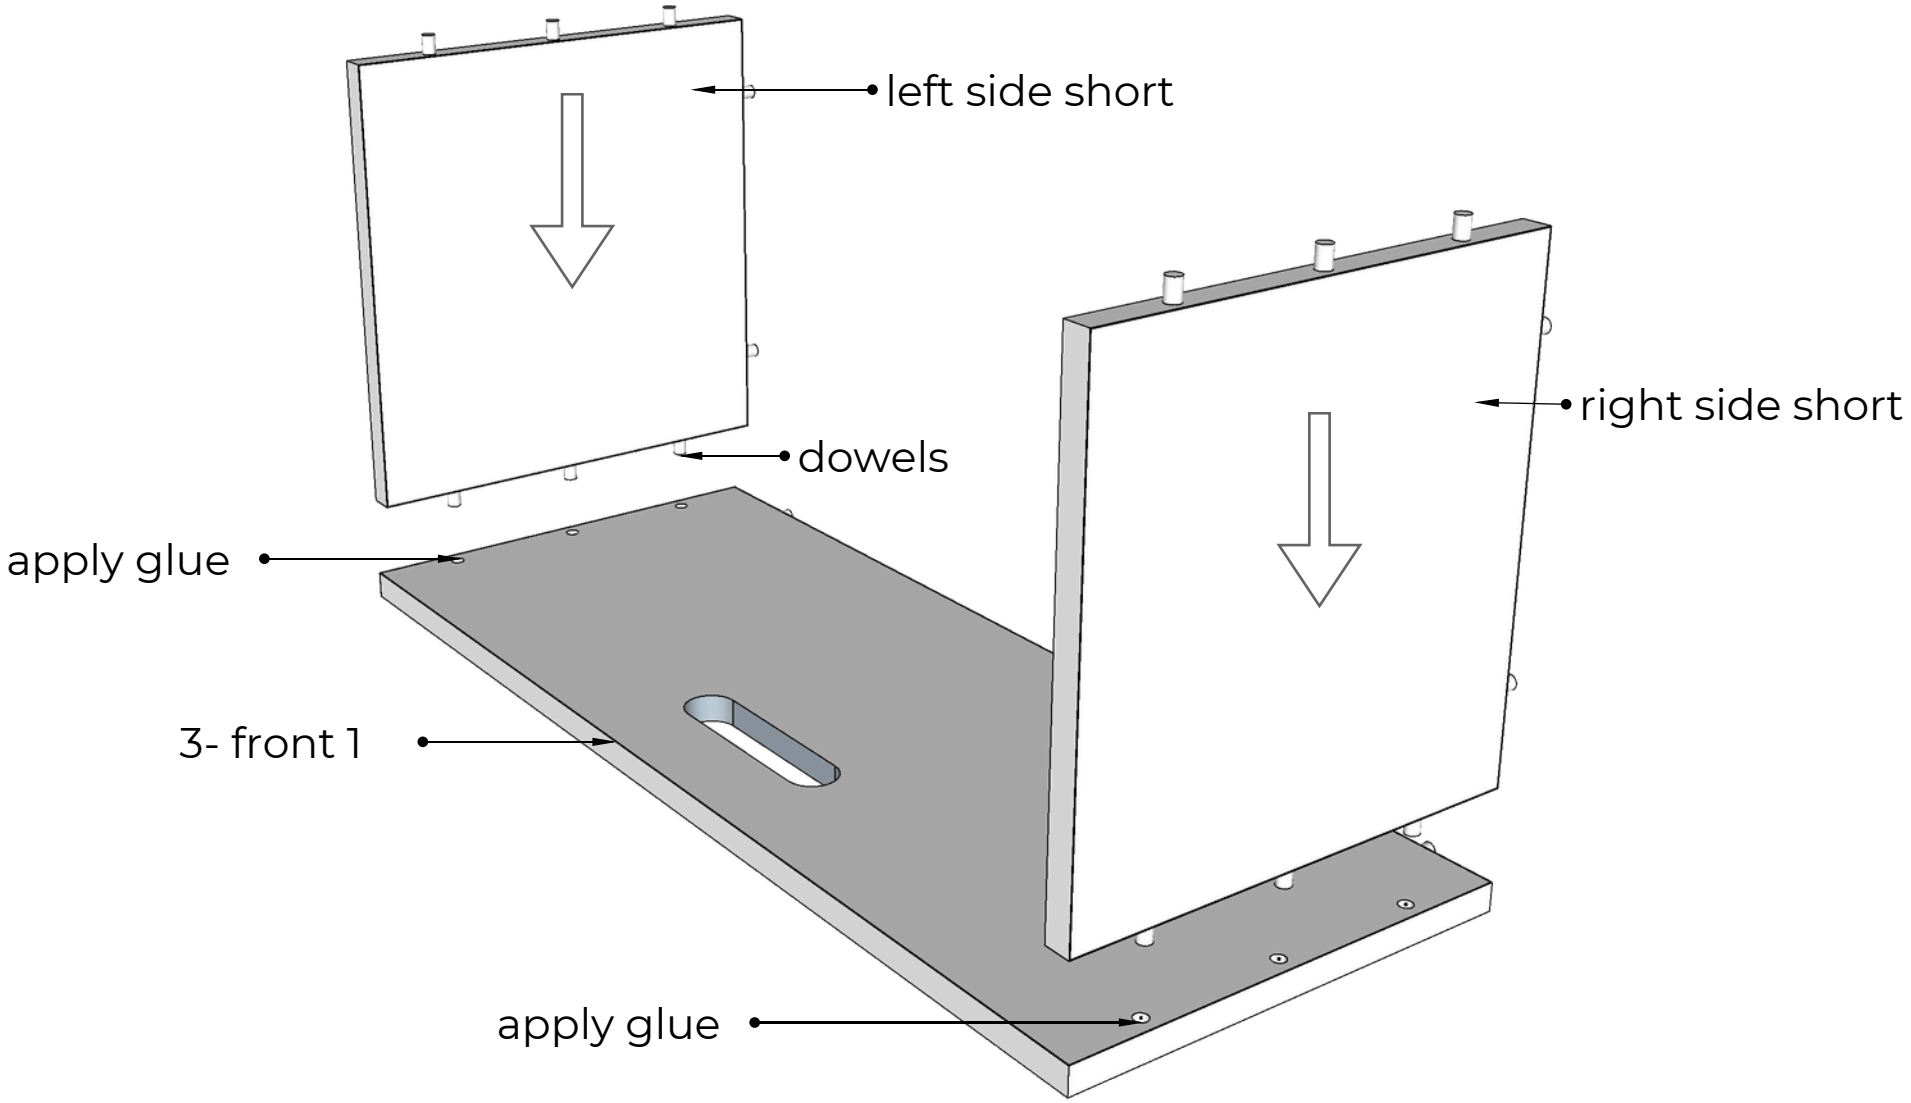


**Step 2**

Fill dowel holes in front 2**(4)** with wood glue
Align dowels in left**(1)** and right**(2)** short panels with holes in front 2**(4)** and press down firmly

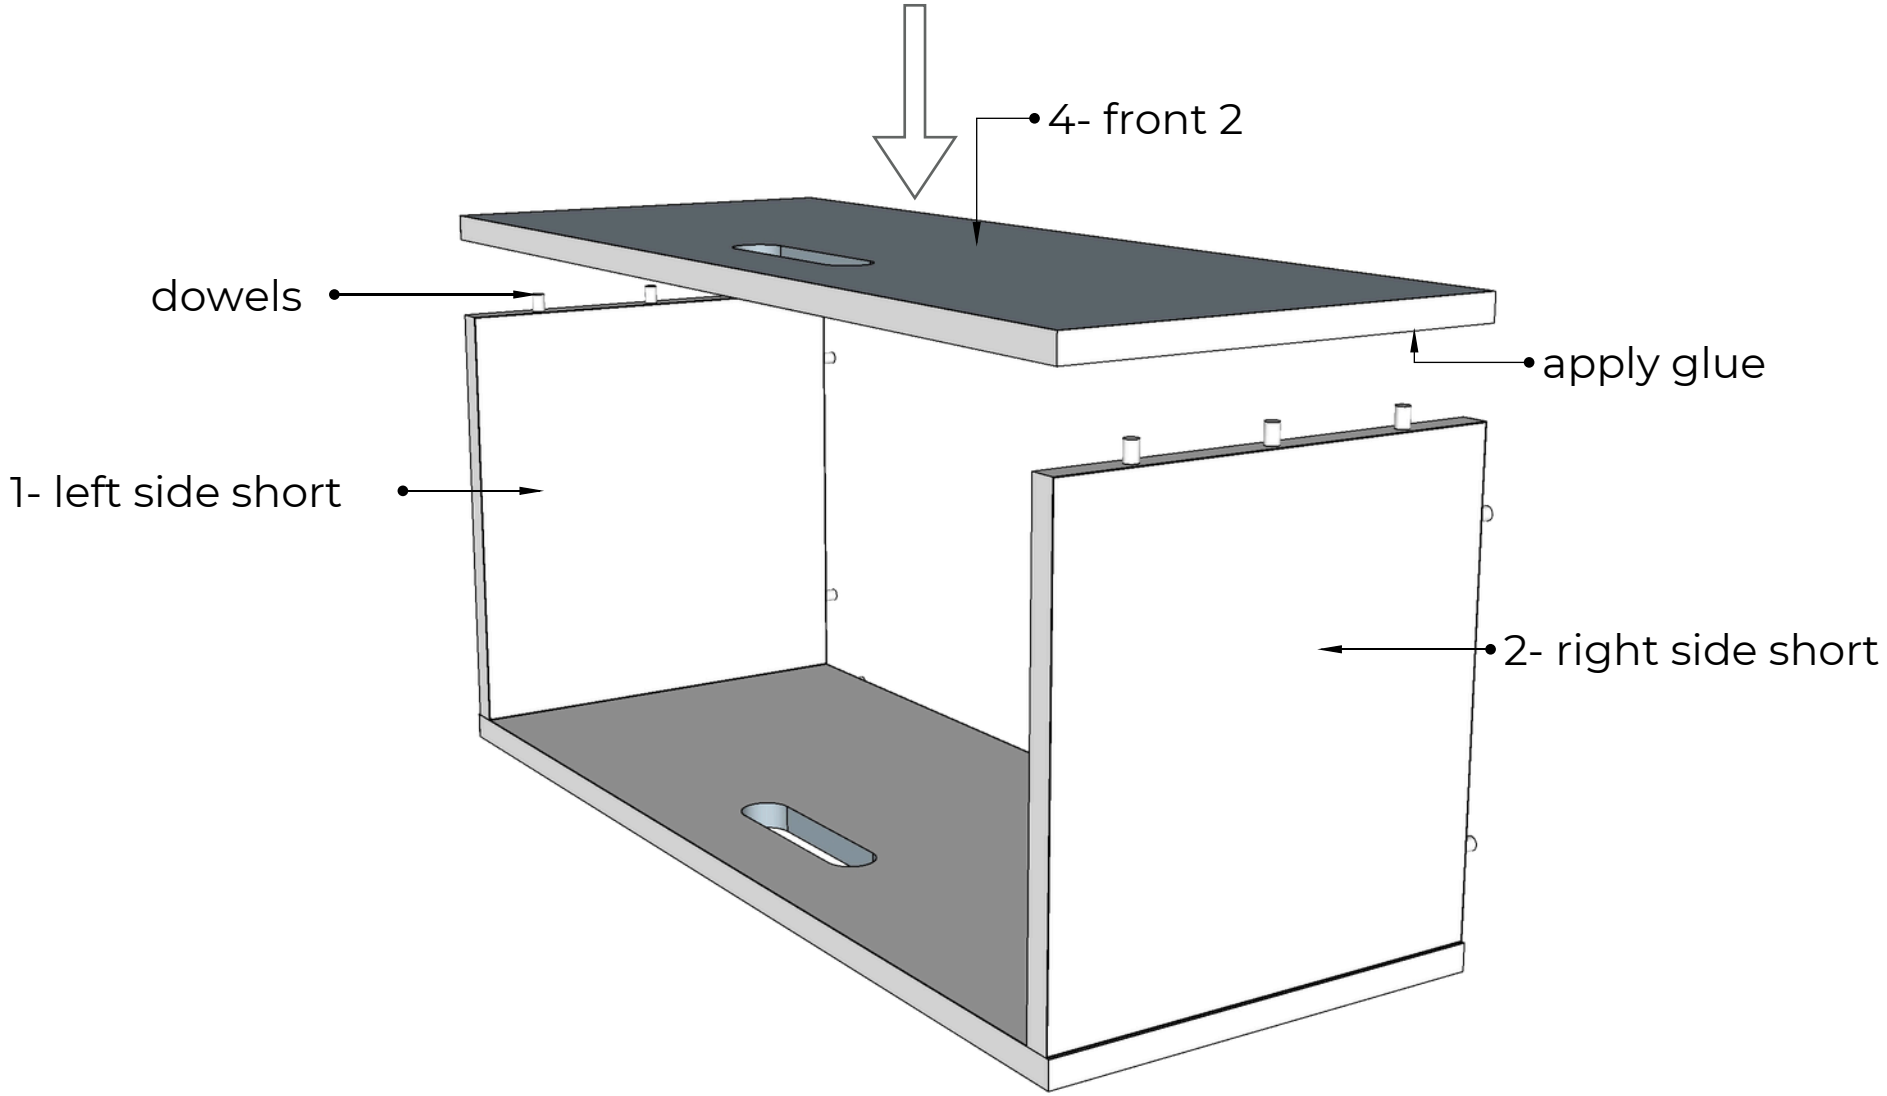


**Step 3**

Fill dowel holes in bottom**(5)** with wood glue
Align dowels of assembly with holes in bottom**(5)** and press down firmly

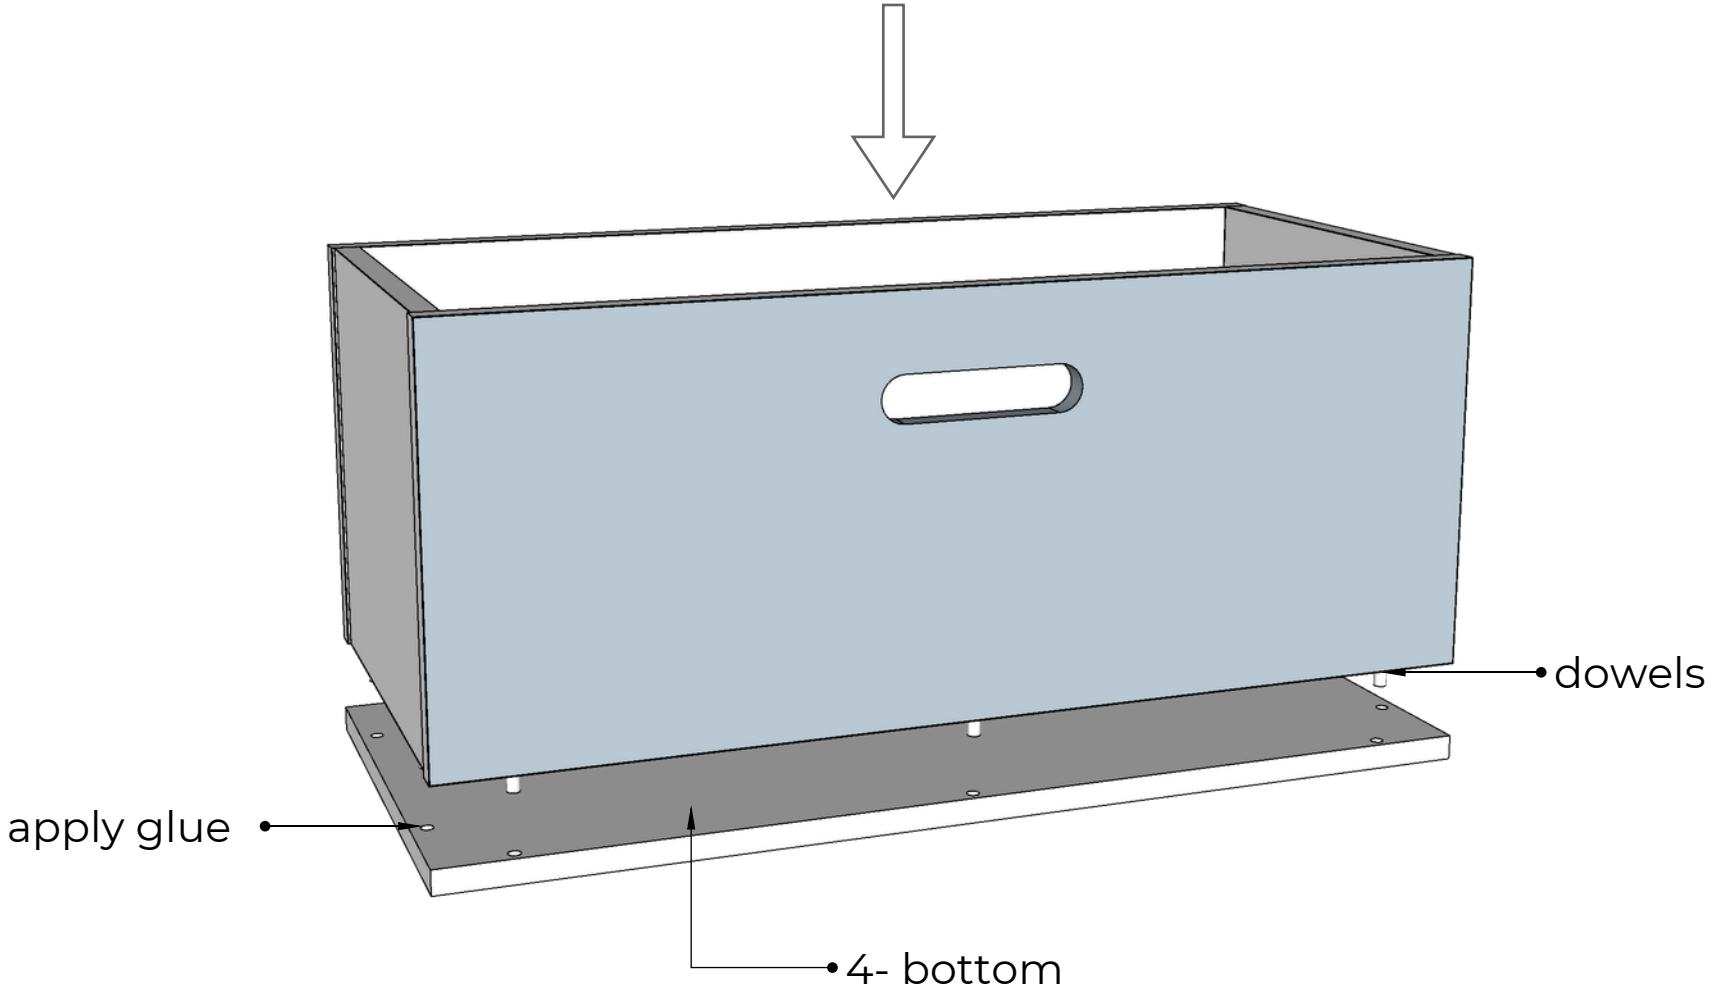

**Step 4**

Align castor wheels**(B)** with pre-drilled holes in bottom**(5)** and fasten with supplied screws

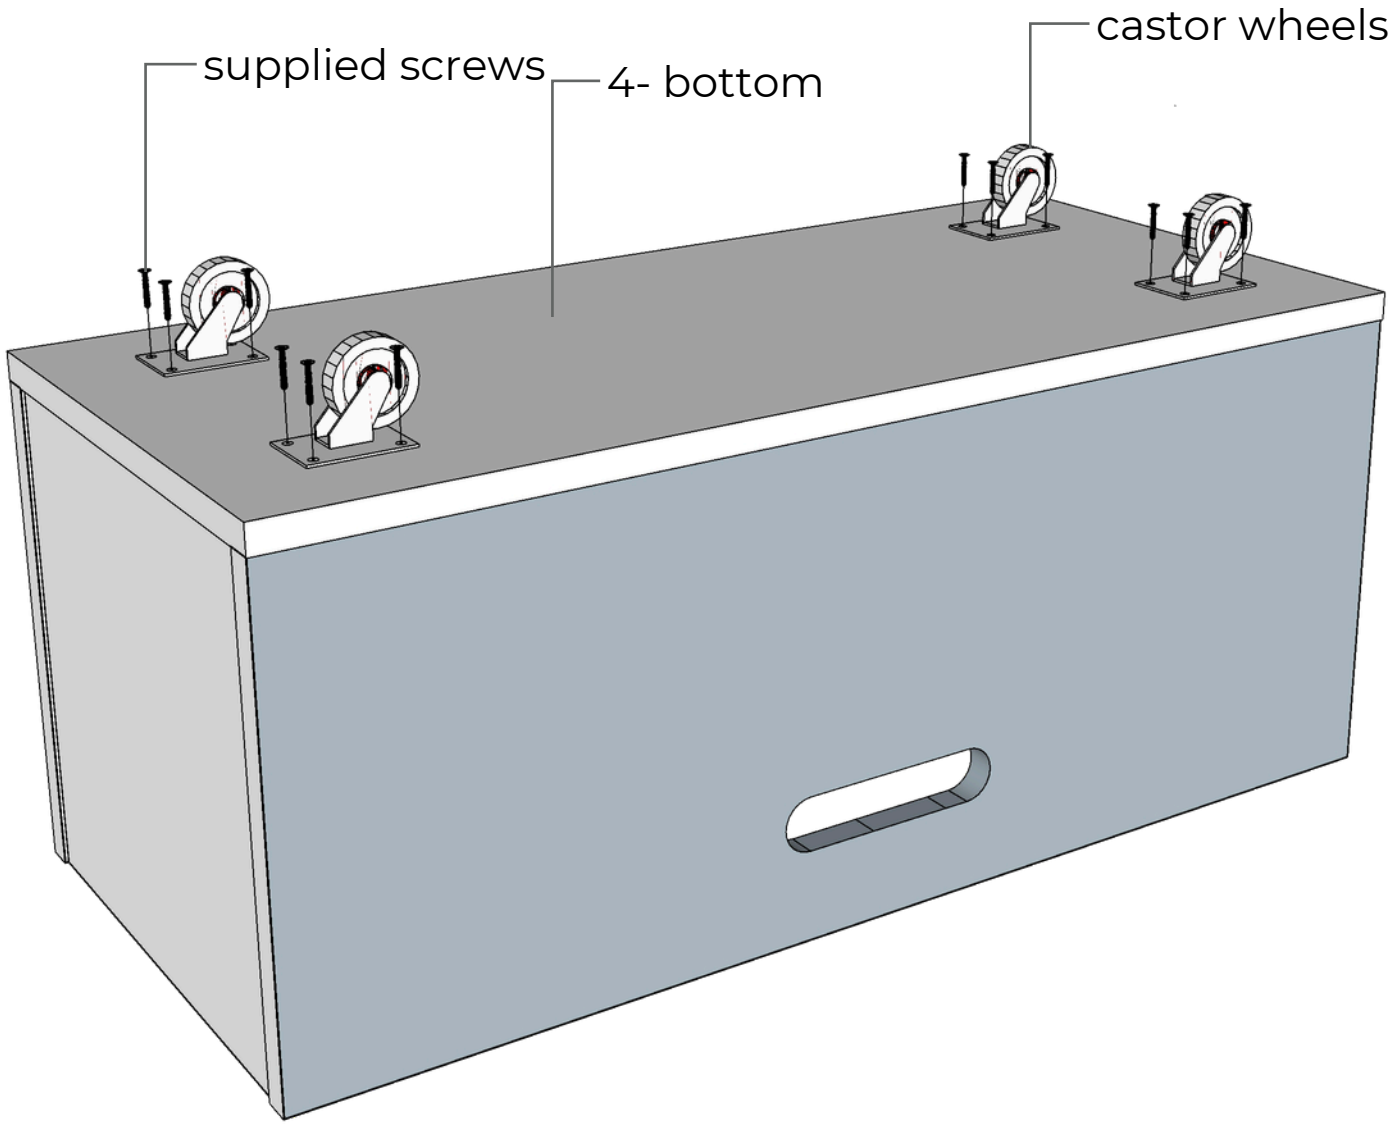

**Step 5**

Turn unit onto its wheels
Wipe any excess glue with a damp cloth
Keep unit in position for at least 20mm to allow glue to set

