LINA SIDEBOARD ASSEMBLY

Thank you for supporting us.

We believe design belongs toeveryone. From materials and processes to saftey testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create a beautifully space to feel comfortable in.

Hereareafew assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carfully read through the instructions- you are already on your way to create a beautifully functional space!



Set The Mood

Put on your favourite playlist, order a pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You Did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging.

Creating your home

Time to assemble 30 min - People needed 1 - Difficultylevel6/10 - Toolsneeded - Phillips scredriver - allen key (supplied)

LINA SIDEBOARD ASSEMBLY

Parts List

1.	Left Side	X 1	**6.** Partition	x	1
2.	Right Side	X 1	**7.** Fixed Shelf	x	2
3.	Bottom	X 1	**8.** Cabinet Doors	x	4
4.	Top	X 1	**9.** Cleat	x	2
5.	Cabinet Backing 3mm	x 1	**10.** Legs Big	x	2
			11. Leg Small	x	1

Hardware

A
Confirmat Screws
(use supplied Allen Key)



x 12

B
Cam



x 18

C
Cam Pins



x 18

D
Full Overlay Hinge
Ferrari Screws (8x16) x24



x 4

E
Half Overlay Hinge
Ferrari Screws (8x16) x24



x 4

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake.




Accordingly, we recommend that all furniture is anchored to a wall.

Phillips screwdrivers required. For quicker assembly, we recommend the use of a power drill on a low-speed setting.

LINA SIDEBOARD ASSEMBLY


Step 1

Insert cam pins**(C)** into small holes in top**(4)**, left side**(1)**, right side**(2)** and Partition**(6)** take note that the partition**(6)** gets cam pins**(C)** on both sides**(1,2)**
Insert cams**(B)** into big holes in left side**(1)**, right side**(2)** and partition**(6)** ensuring arrow on cam**(B)** faces nearest edge

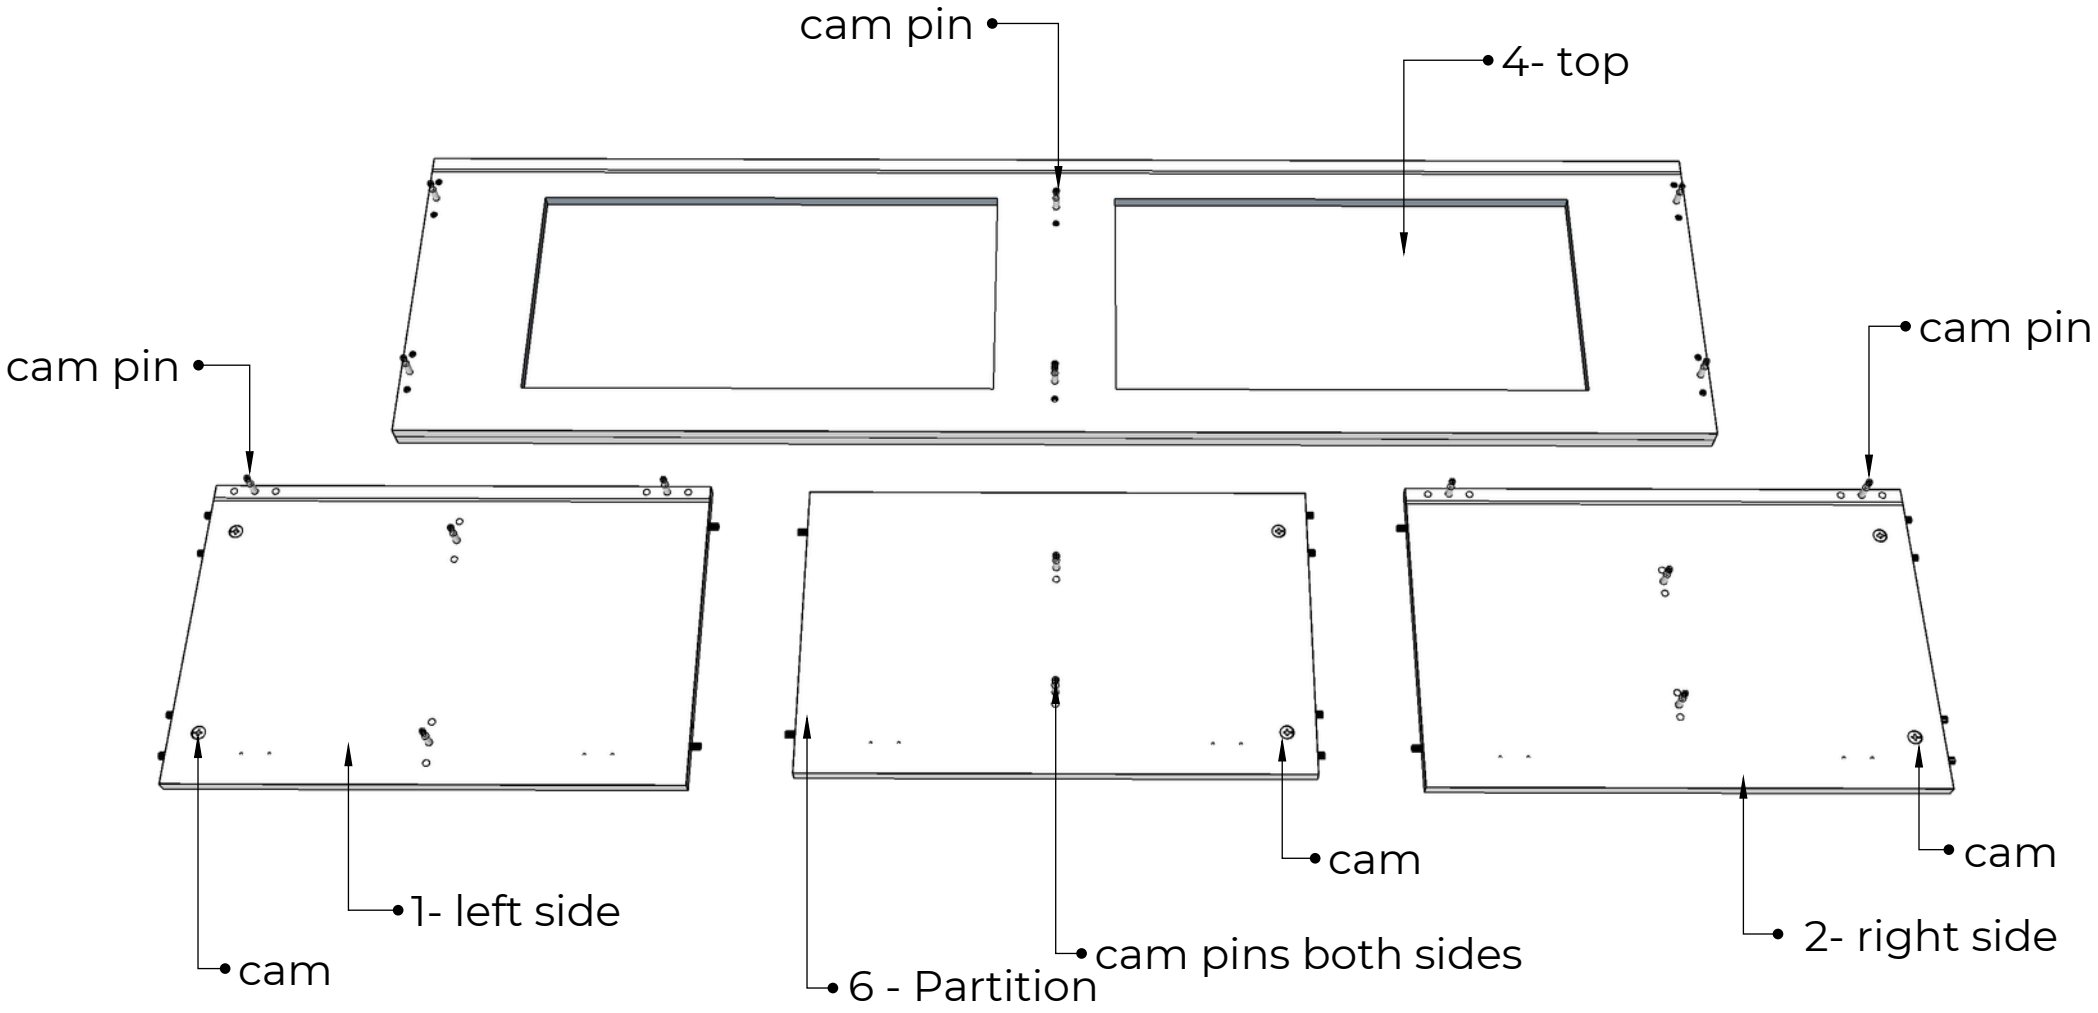


Step 2

Insert cams**(B)** into big holes in cleats**(9)** and shelves**(7)** ensuring arrow on cam**(B)** faces nearest edge

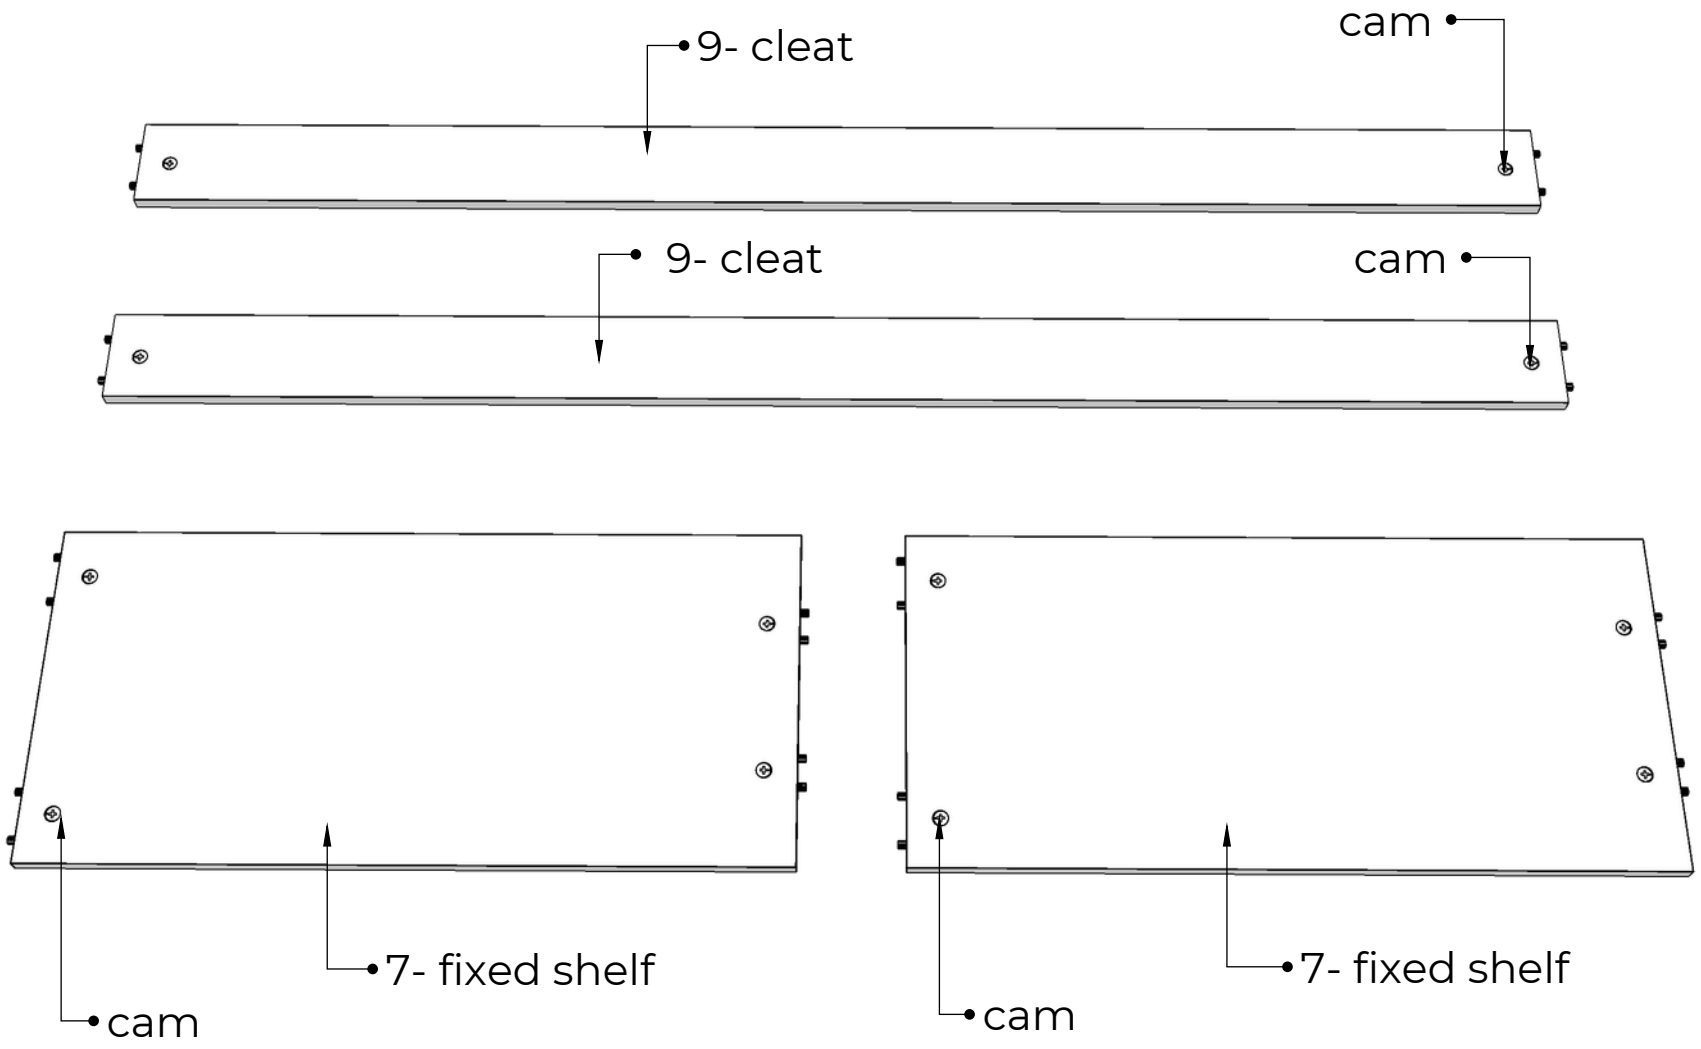


Step 3

attach cleats**(9)** to left side**(1)** and fasten cams**(B)** on cleats**(9)**

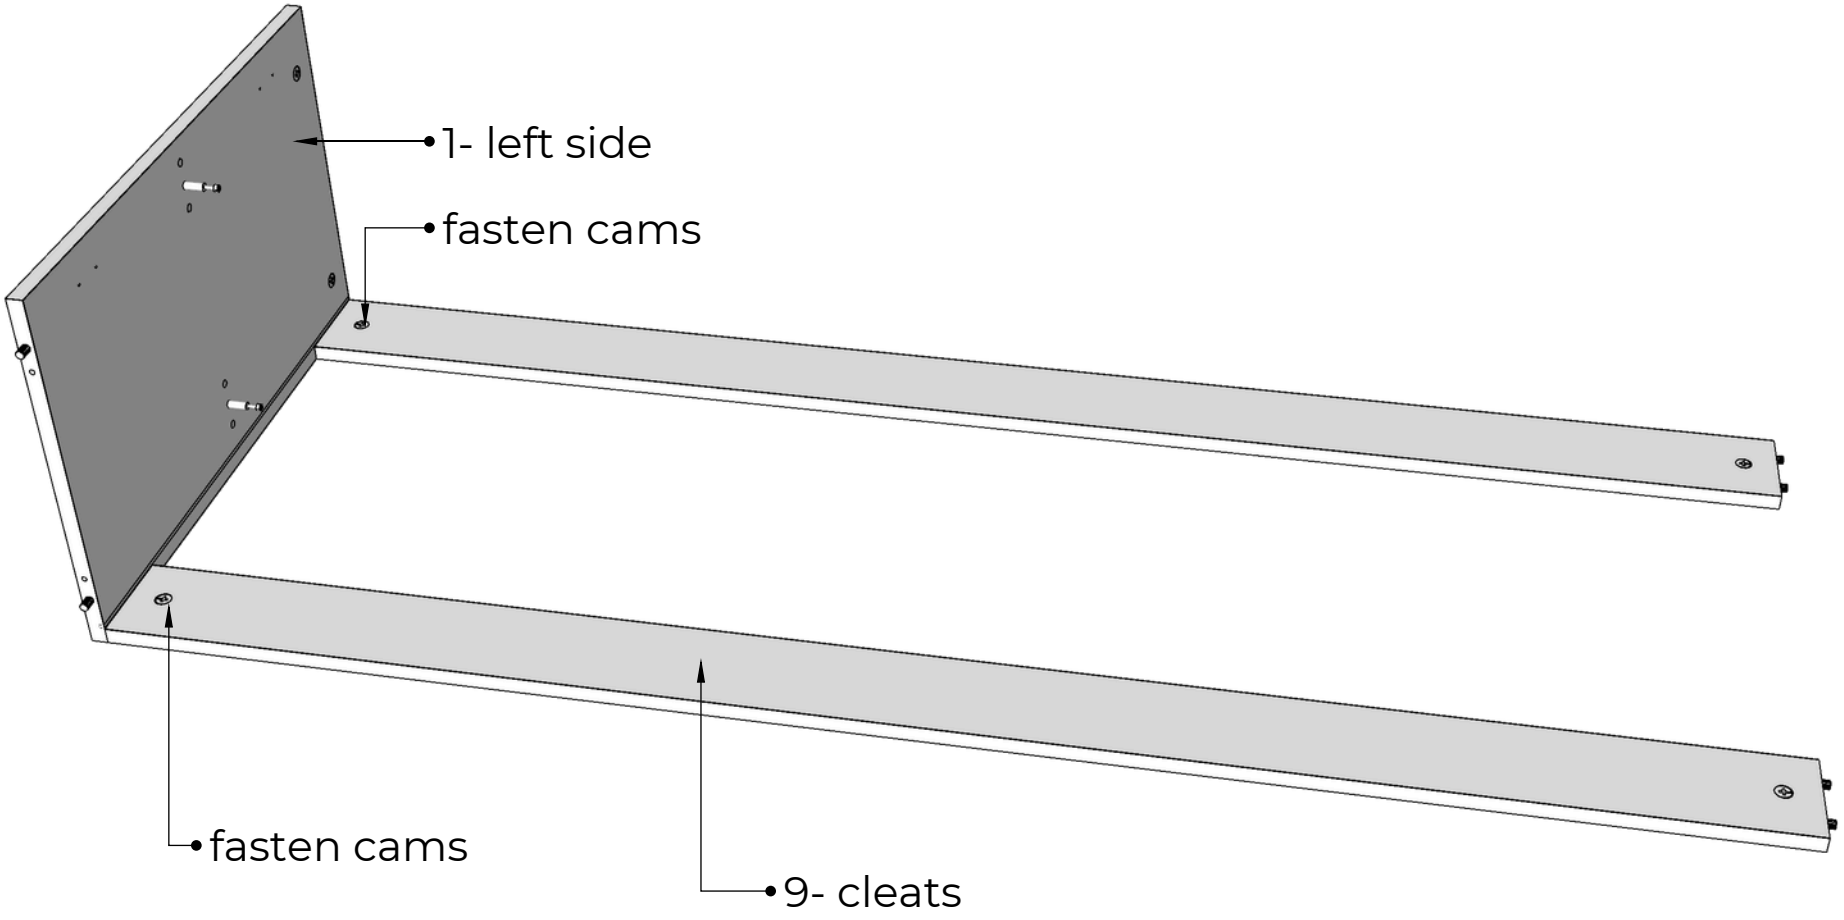


Step 4

Attach fixed shelf(7) to left side**(1)** and fasten cams**(B)** on fixed shelf**(7)**

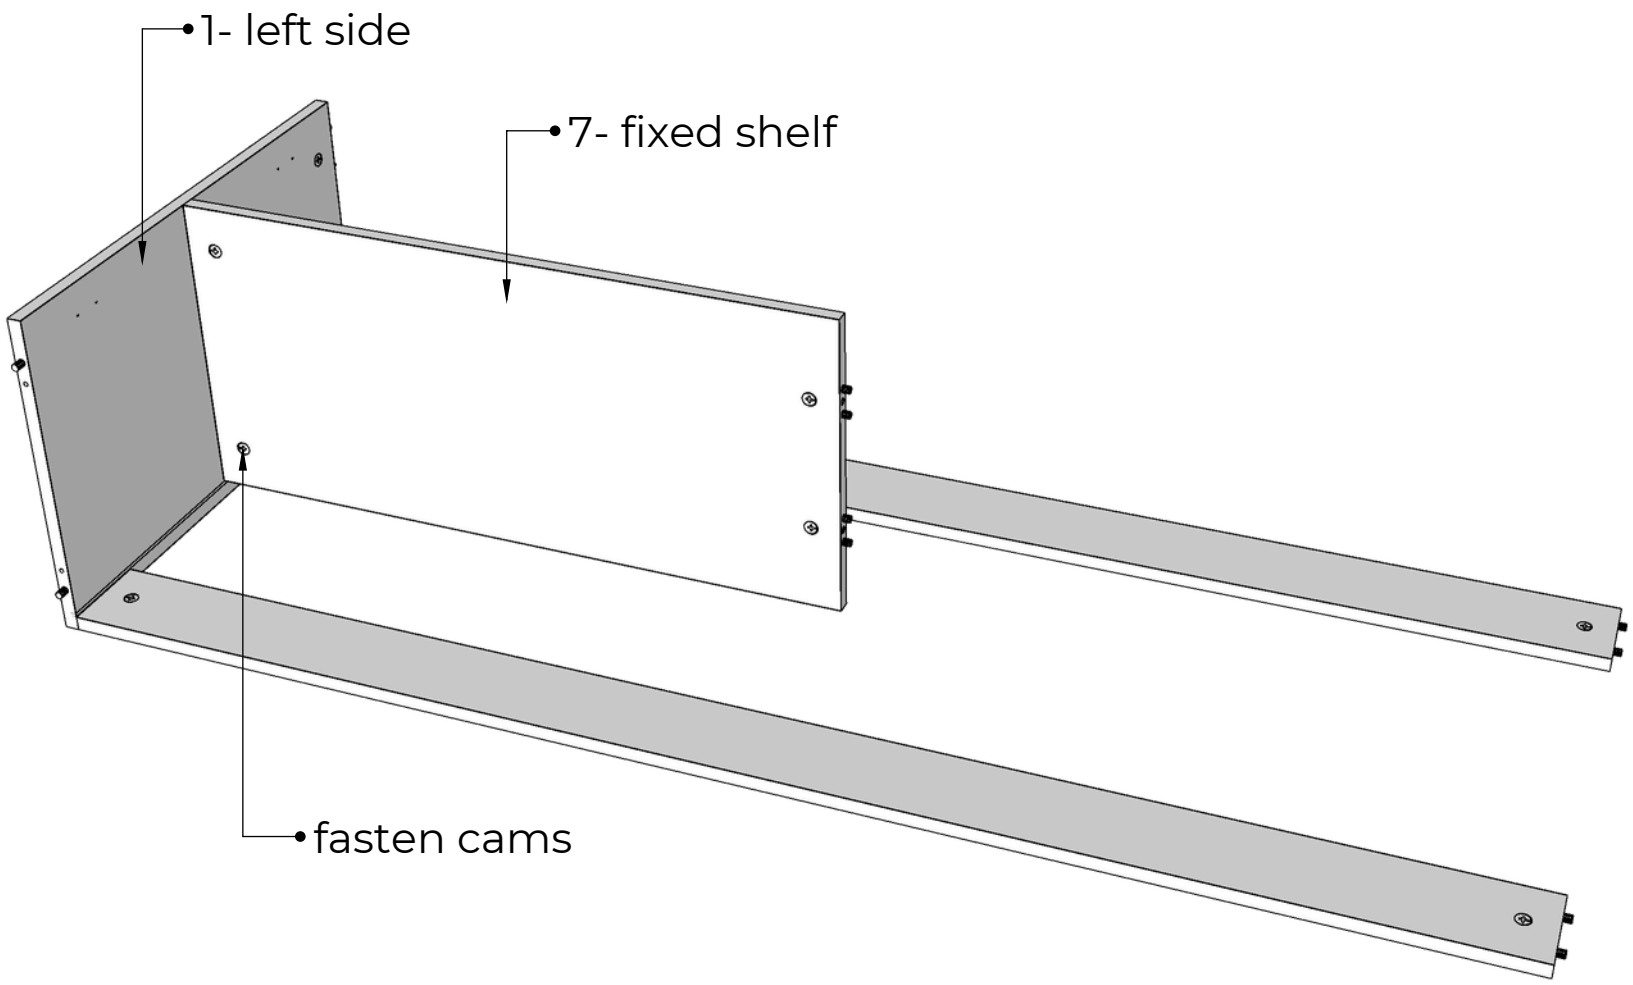


Step 5

Attach partition**(6)** to fixed shelf**(7)** and fasten cams**(B)** on fixed shelf**(7)**

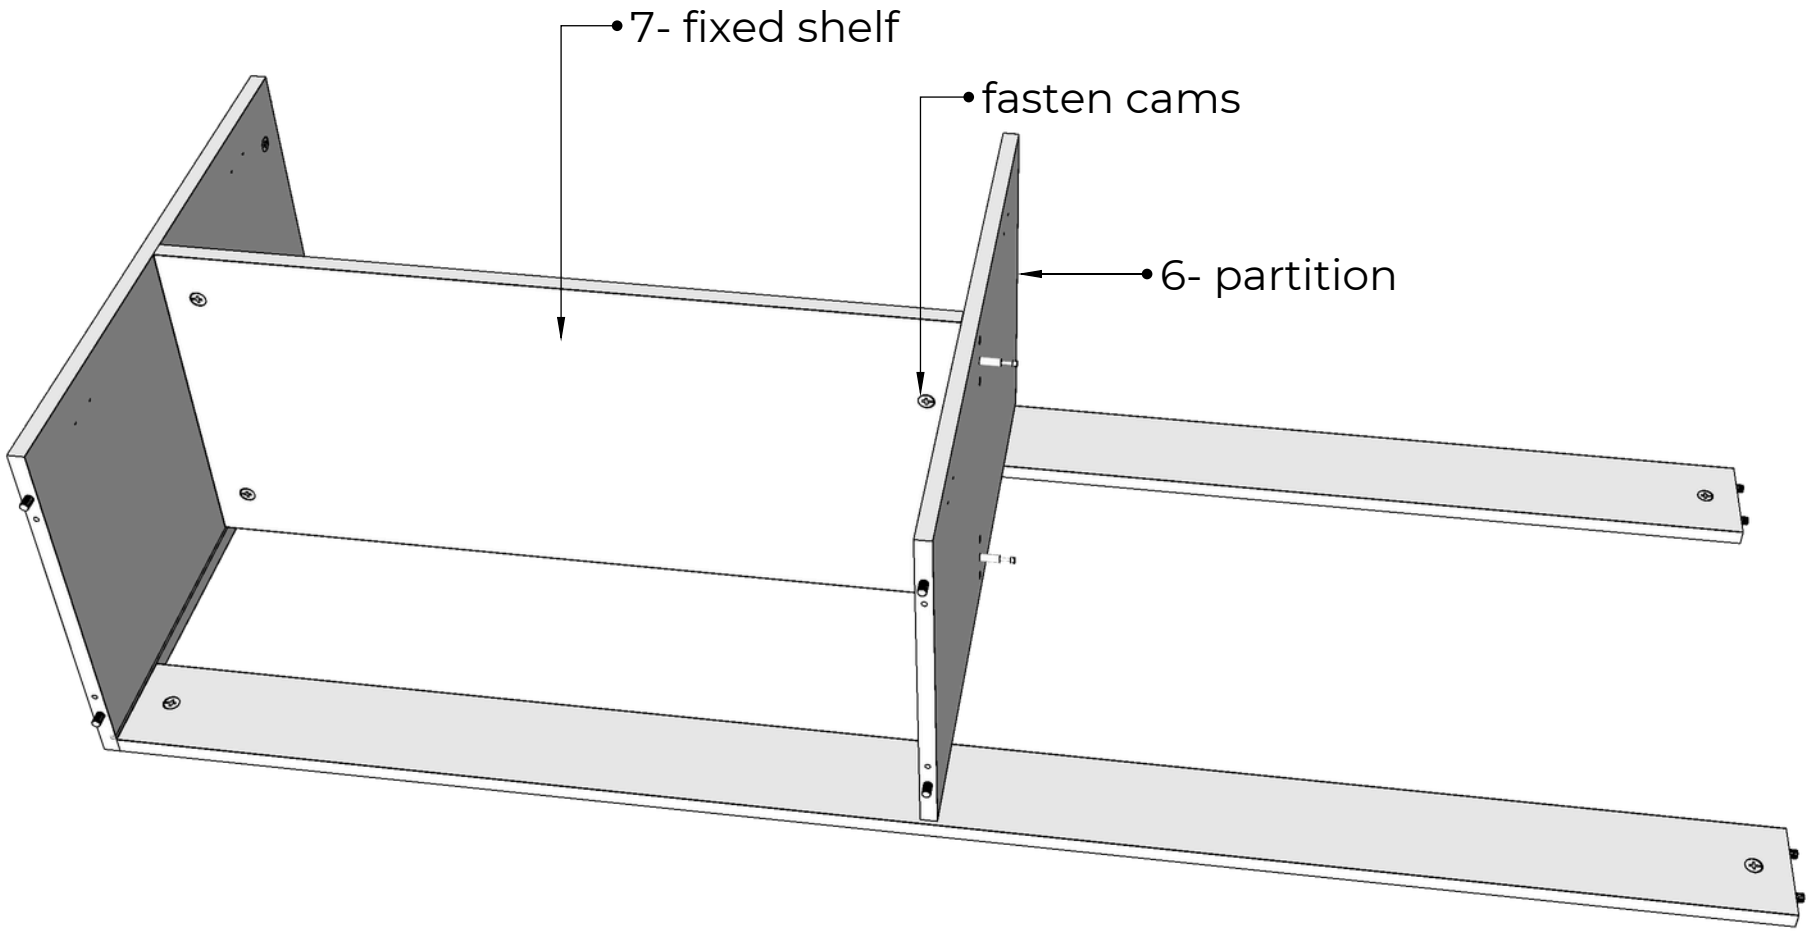

Step 6


Attach fixed shelf**(7)** to partition**(6)** and fasten cams**(B)** on fixed shelf**(7)**

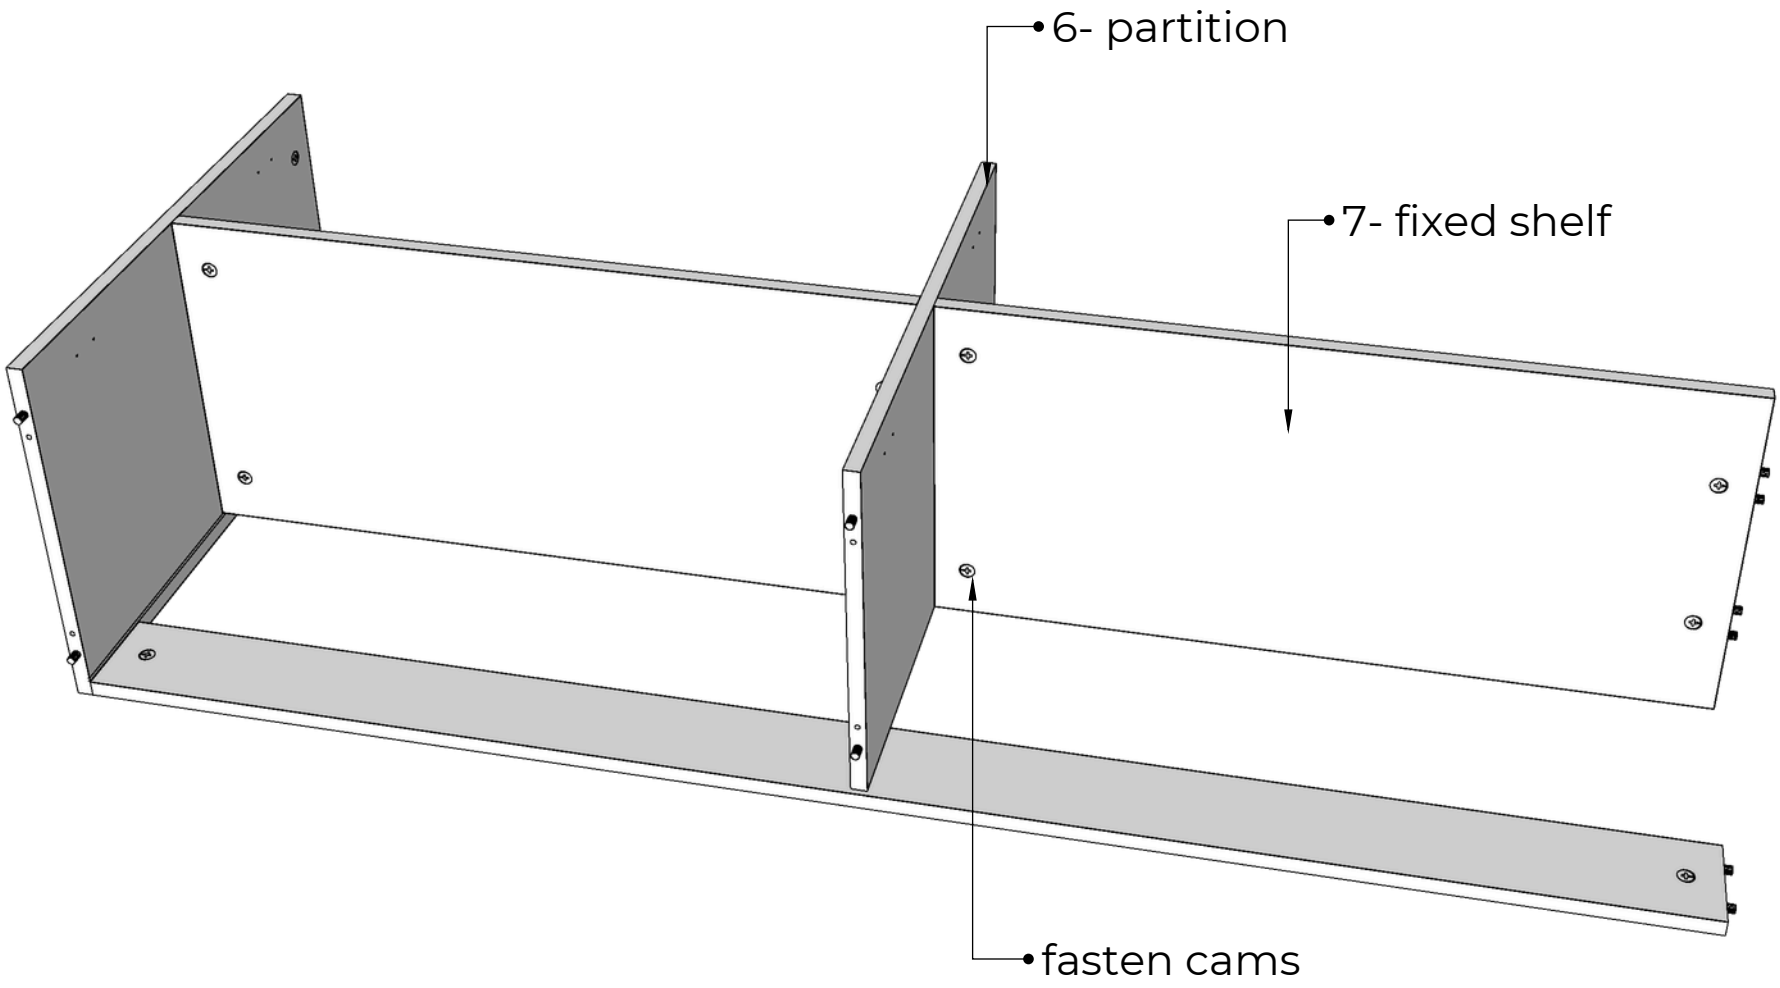

LINA SIDEBOARD ASSEMBLY


Step 7

Attach right side**(2)** to fixed shelf**(7)** and cleats**(9)** and fasten cams**(B)** on fixed shelf**(7)** and cleats**(9)**

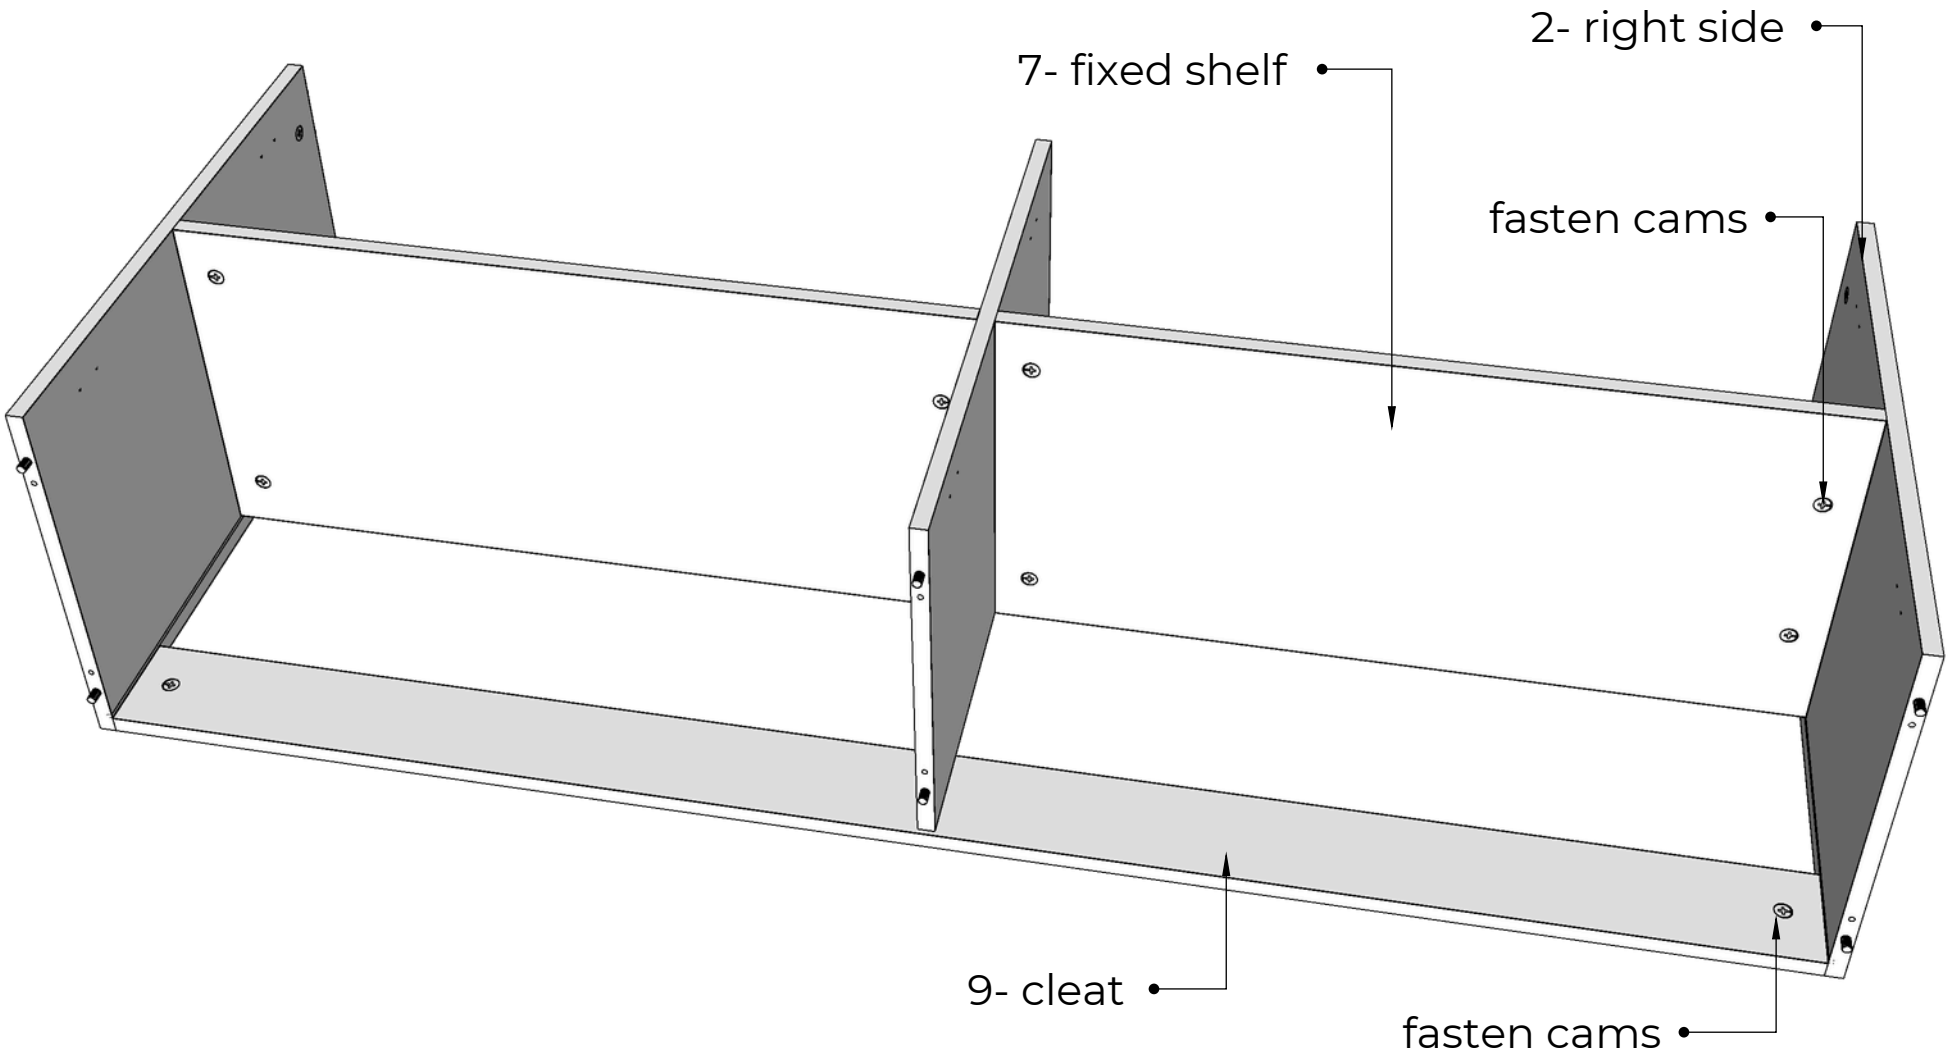


Step 8

Locate legs big**(10)** and leg small**(11)** over dowel hols in bottom**(3)** and secure with confirmat screws**(A)** through the bottom**(3)**

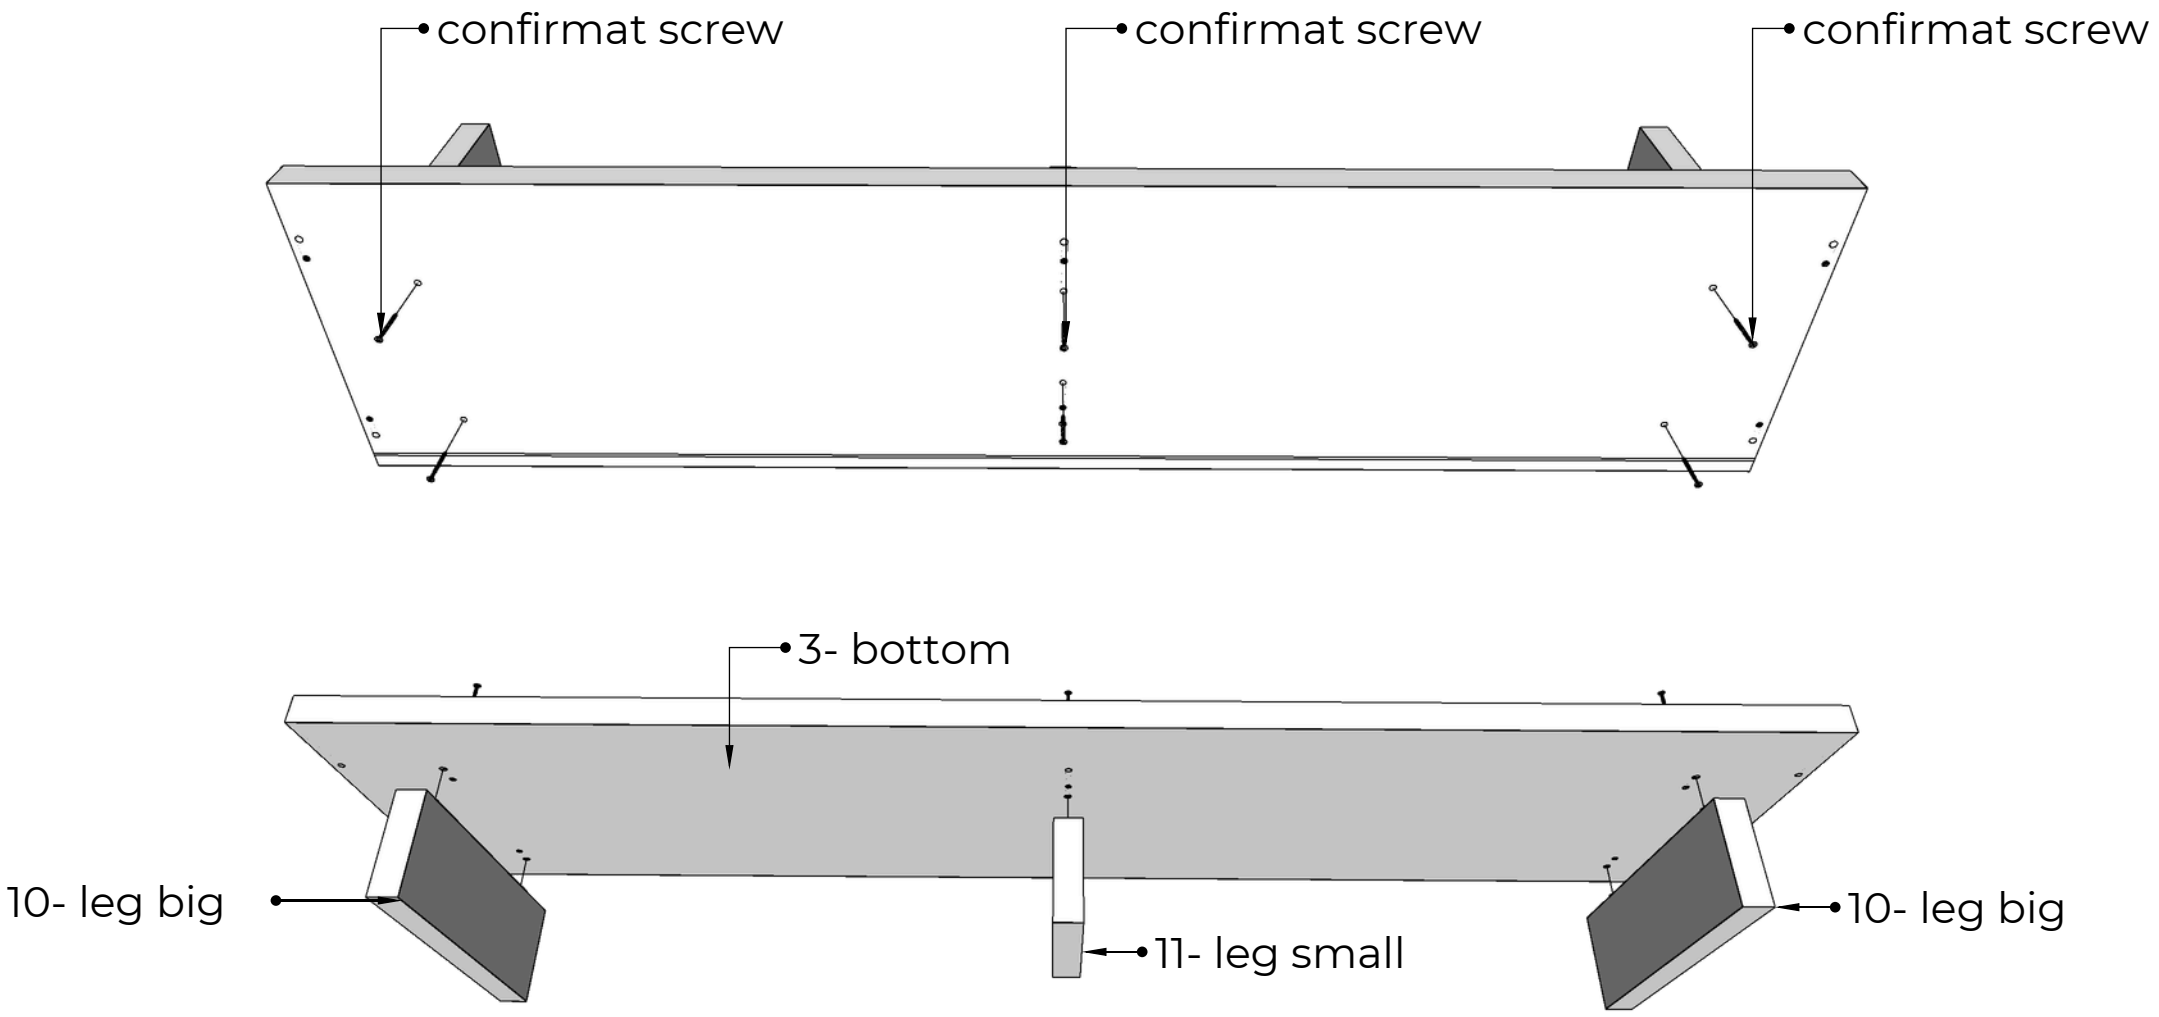


Step 9

Attach the bottom**(3)** assembly to the cabinet assembly by aligning the dowels and dowel holes in the bottom**(3)** and securing it with confirmat screws**(A)** through the bottom**(3)**

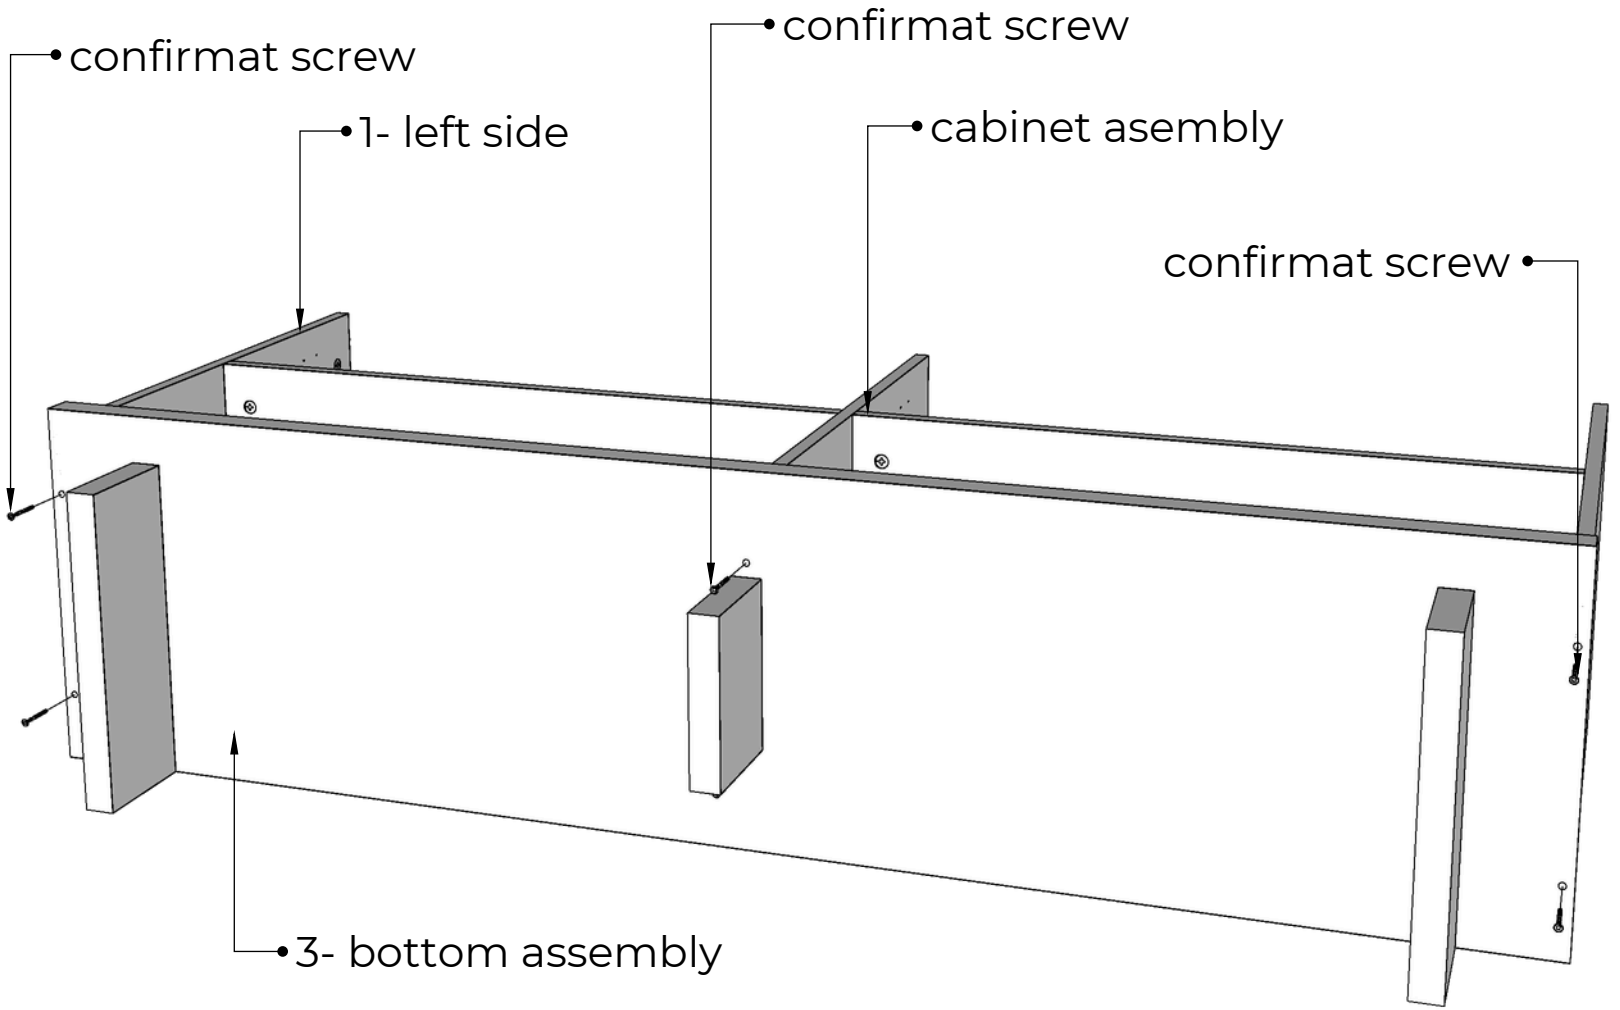

Step 10


Slide backing**(5)** into grooves on sides ensuring it also fits into the groove in the bottom**(3)**

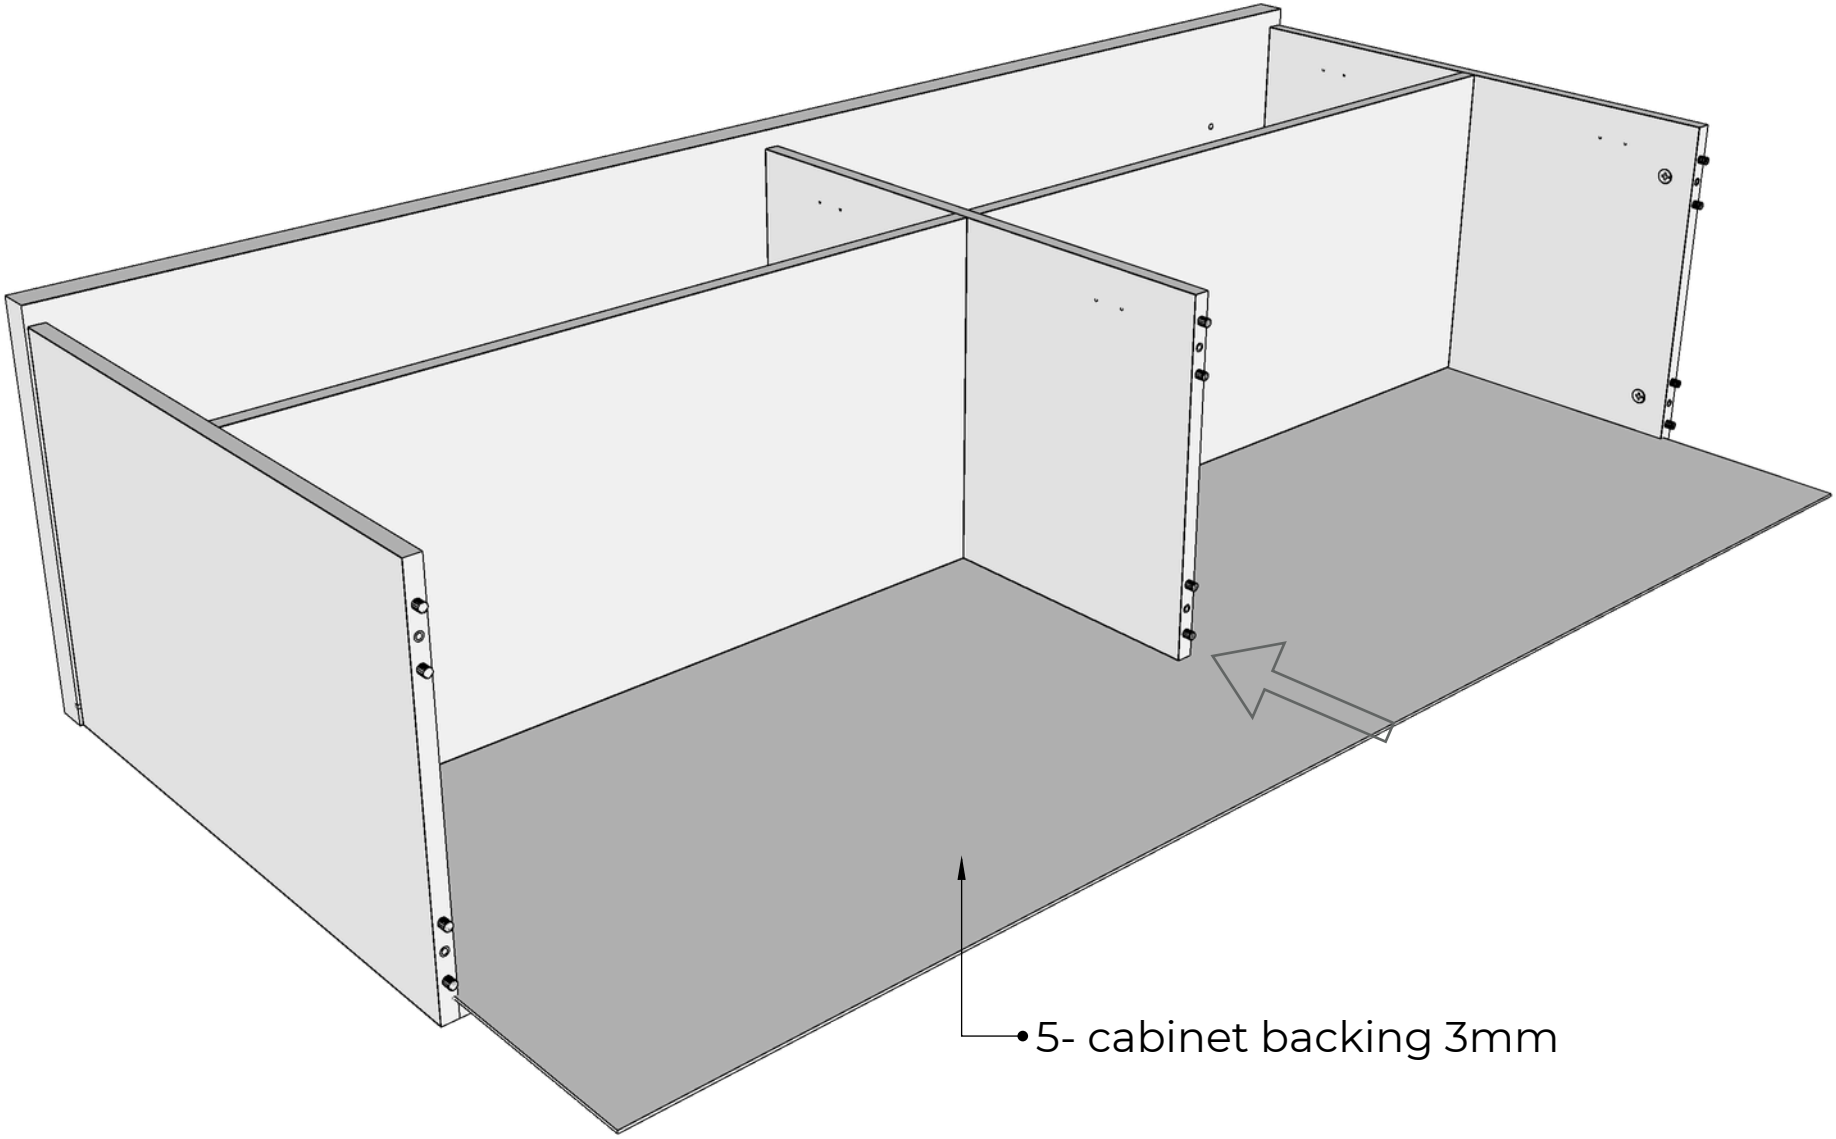

LINA SIDEBOARD ASSEMBLY

Step 11


Attach top**(4)** to cabinet assembly and fasten cams**(B)** in sides and partition**(6)**

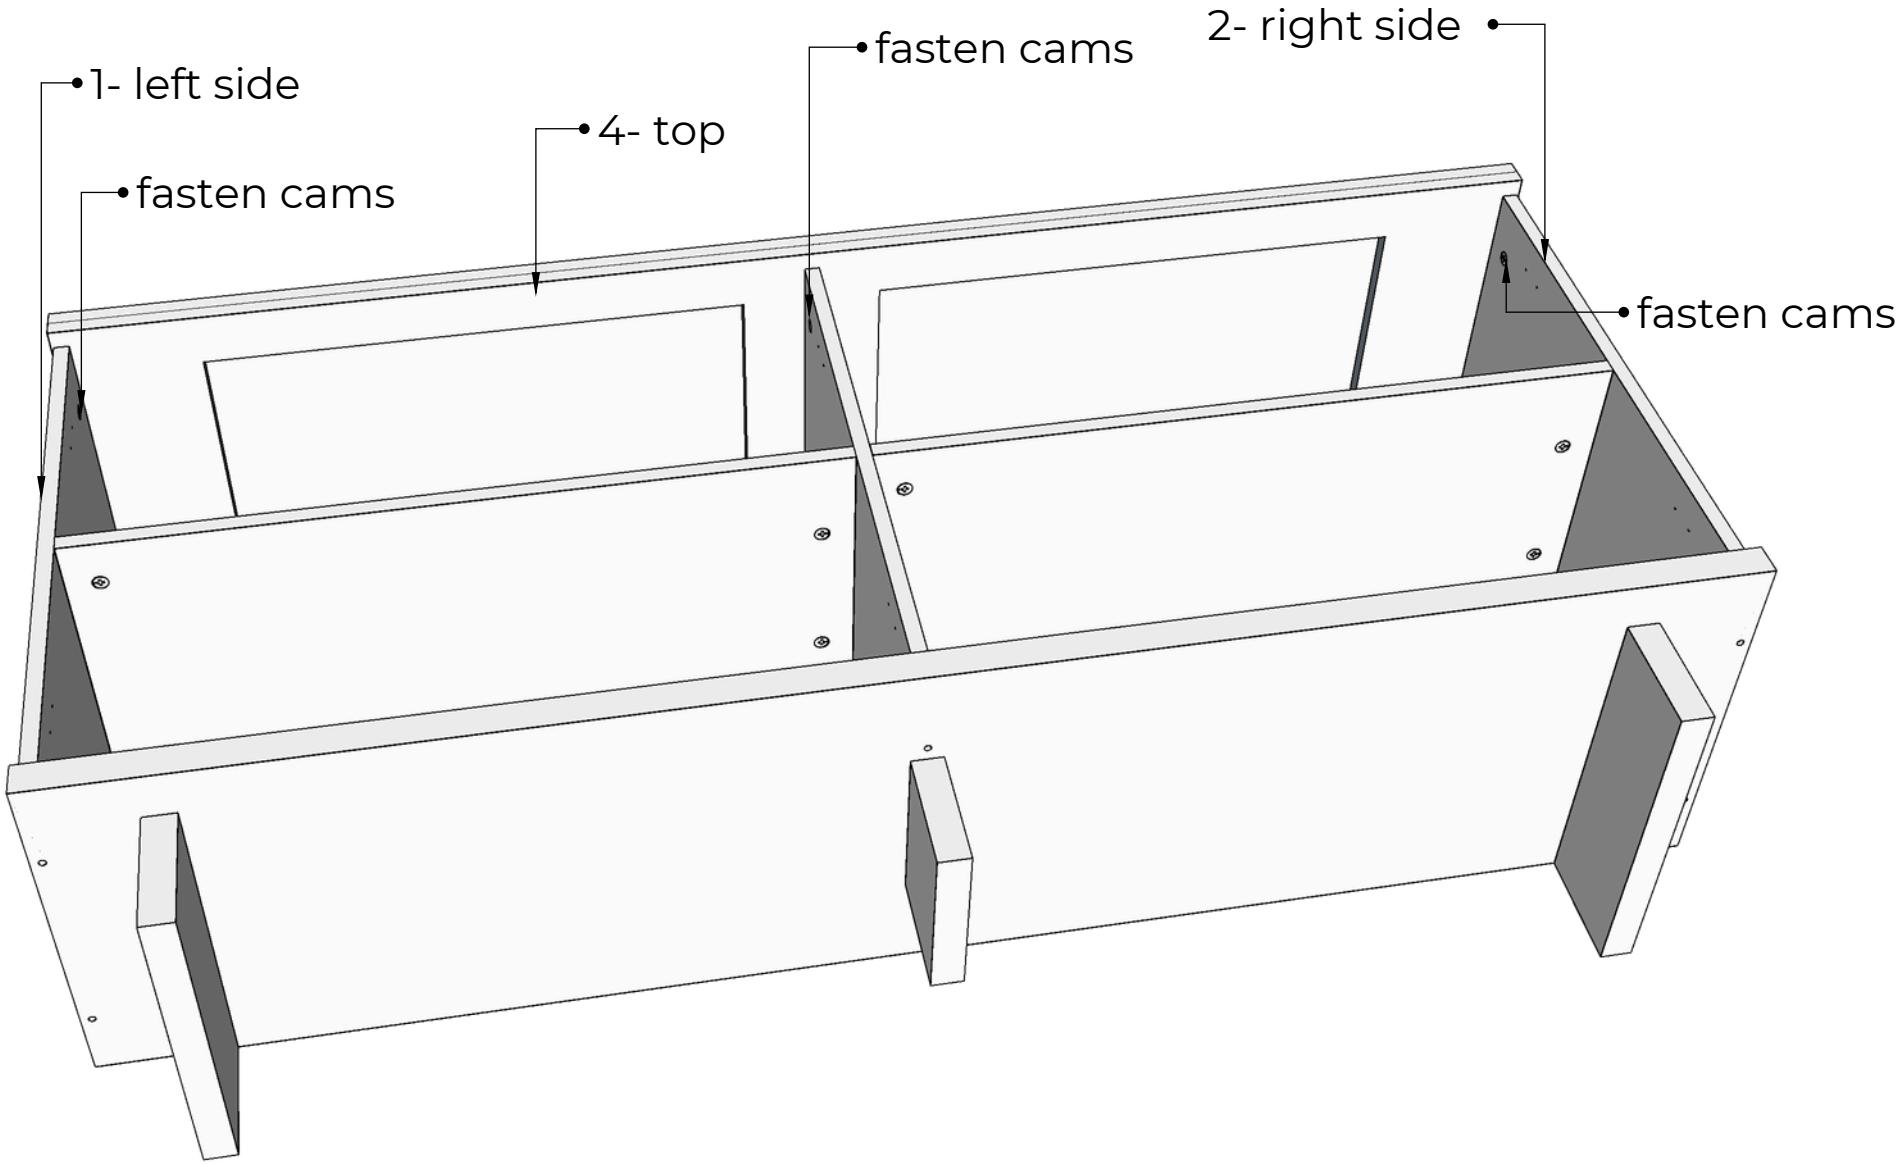

LINA SIDEBOARD ASSEMBLY


Step 12

Attach hinges**(D,E)** to doors**(8)** with supplied silver screws
the outside doors**(8)** will use straight hinges**(E)** and the inside doors**(8)** will use cranked hinges**(D)**
Note the different Hinges!!

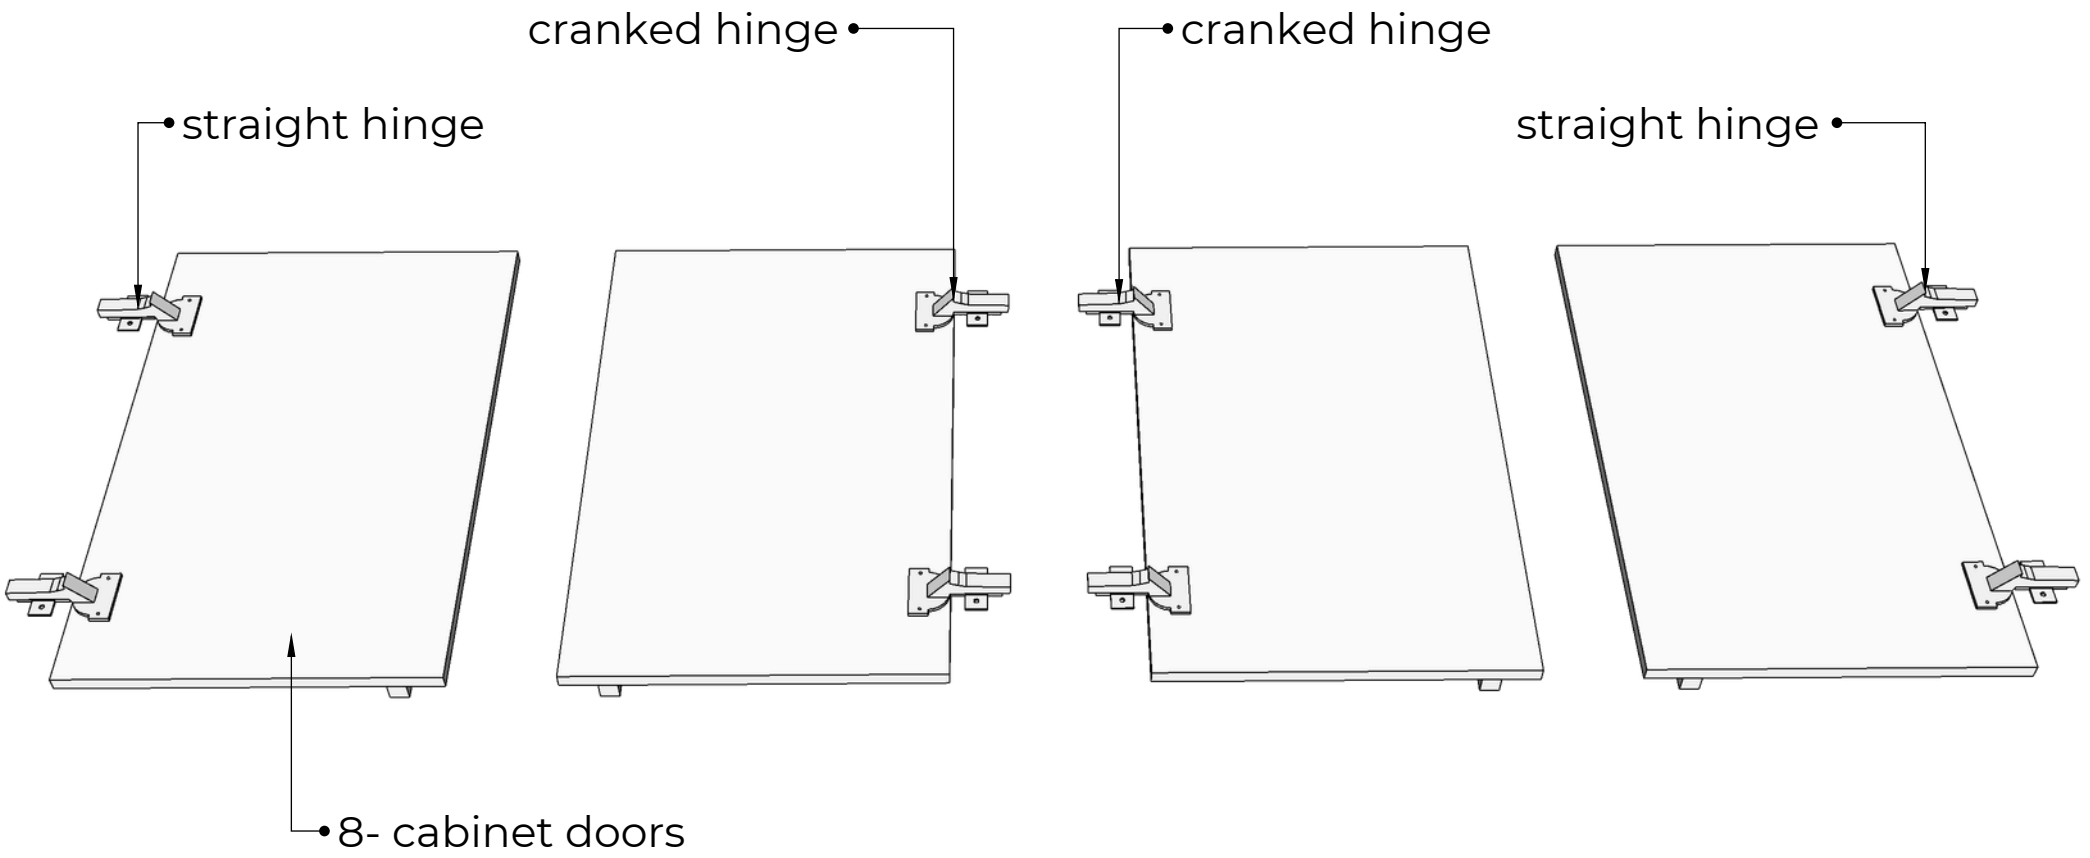

Step 13

Attach doors**(8)** to cabinet sides**(1,2)** and division**(6)** by aligning it with the pre-drilled holes and fastening with supplied screws

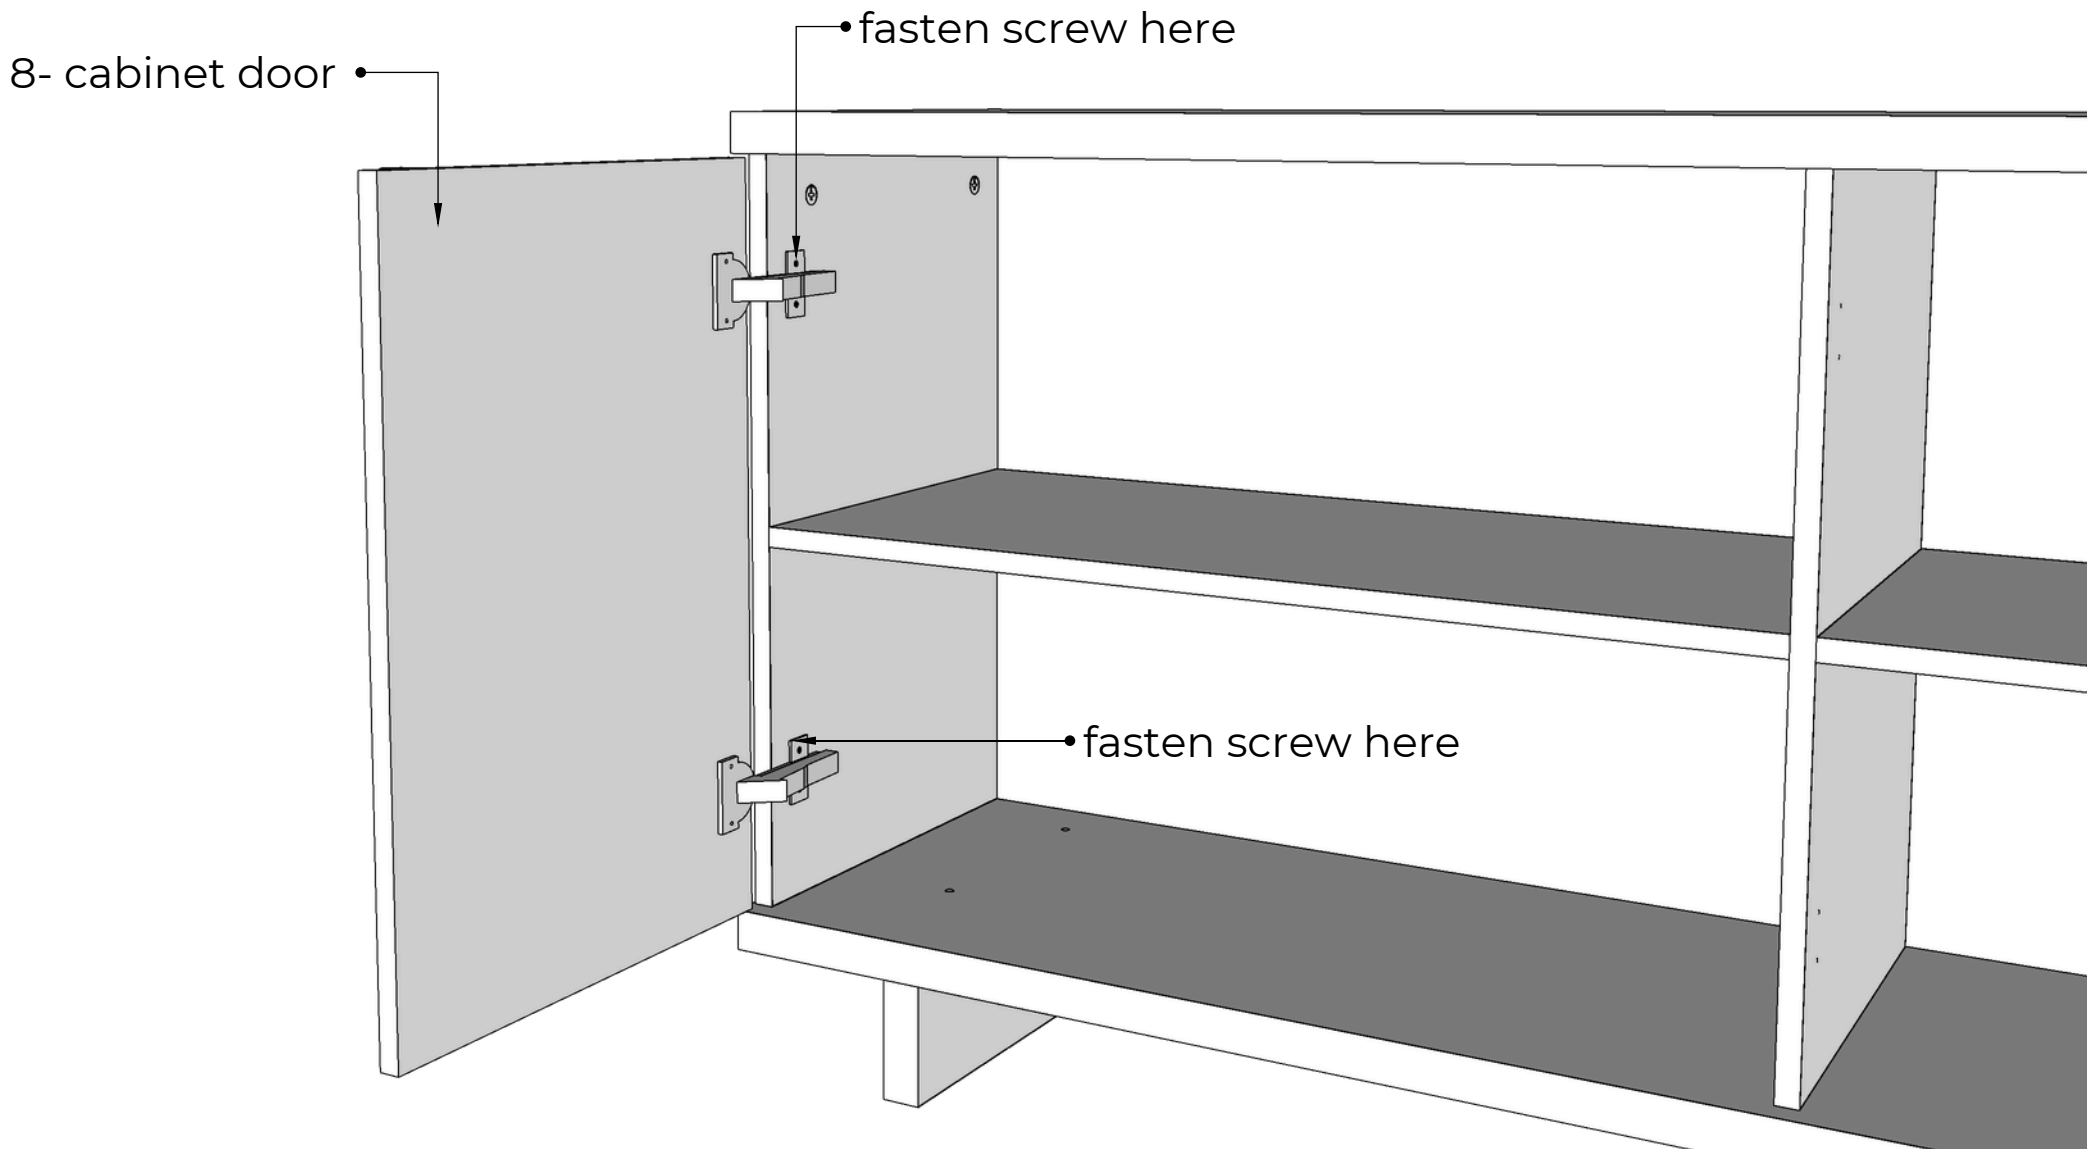

LINA SIDEBOARD ASSEMBLY

Assembled Unit

