



me&co
QUALITY, AFFORDABLE FURNITURE

ASSEMBLY INSTRUCTIONS




MONTE CARLO FLOATING UNIT

Parts List (16 parts)

1. Left Side	x 1	8. Cleat 96	x 1
2. Left Divider	x 1	9. Middle Flap	x 1
3. Right Divider	x 1	10. Left Flap	x 1
4. Right Side	x 1	11. Right Flap	x 1
5. Bottom Panel	x 1	12. Left Back Board	x 1
6. Top Panel	x 1	13. Middle Back Board	x 1
7. Cleats 128	x 2	14. Right Back Board	x 1
		15. Shelf 32mm	x 1

Hardware

A	Confirmat Screws (use the supplied Allen Key)	x 36	
B	Allen Key	x 1	
C	Cams	x 8	
D	Cam Pins	x 8	
E	Flap Stay (12 Screws)	x 3	
F	Magnetic Catch & Plate (9 x small brass screws)	x 3	
G	Round Backflap Hinge (36 x Screws)	x 6	
H	Hilti 70mm	x 8	

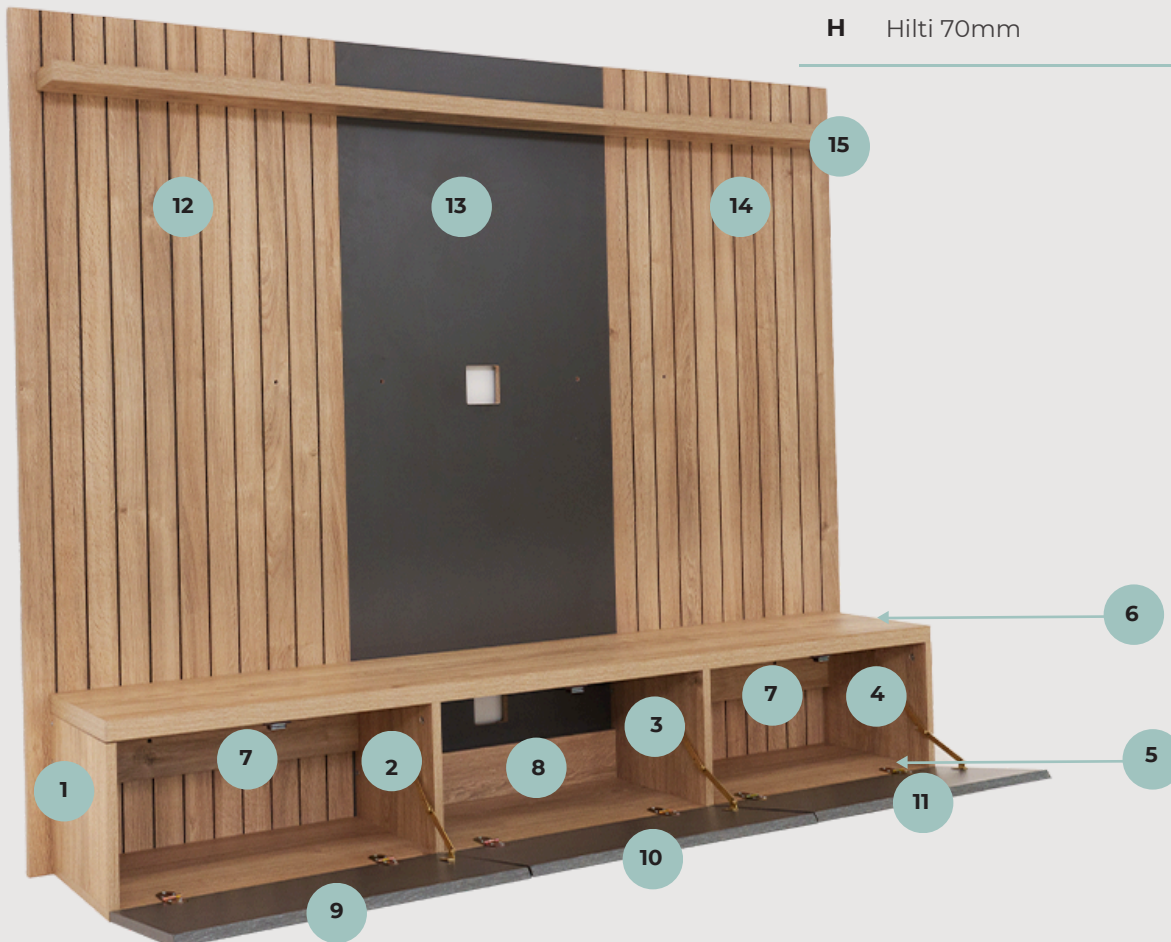

CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.



MONTE CARLO FLOATING UNIT



Unit Assembly

- ▶ Place Top Panel (6) on flat surface with screw holes facing upwards. Screw Cam Pin (D) into the small holes on the Top Panel (6). Use supplied screws to position magnetic catch (F) at marked holes.
- ▶ Fit Sides (1, 4) and Dividers (2, 3) over pins on Top. Slide 1 x Cleat 128 (7) between each side and division with 3 x wooden dowels going into the Top Panel. Slide Cleat 96 (8) in between the two dividers.
- ▶ Place Cam Screw (C) in big holes on the sides and division - with small arrow on cam facing down. Tighten with Phillip Screwdriver. Insert and tighten 10 x Conformat Screws (A) through sides and divisions into the cleats with Allen Key(B).
- ▶ Place Bottom Panel (5) onto build, with the holes for hinges facing forward. Screw in Conformat Screw (A) through bottom with Allen Key.
- ▶ Use supplied screws to attach the Hinges (G) to the three Flaps (9-11). Use screws to screw in Magnetic Catch Plate (F) at marked hole on Flap.
- ▶ Attach flaps (9-11) to Bottom(5) using screws and designated holes, making sure that each flap goes on the side designated for it. (Left Flap on Left Side)
- ▶ Attach Flap Stay (E) onto each flap with 2 x Screws. The other end of the flap stay screws into the left side (1) and two divisions.
- ▶ Turn the build on its Front (Flaps at the bottom) and line up the 3 x back boards (12 - 14) over the holes on the Bottom and Top of Unit. Screw in Conformat Screws (A) through the back boards into the Bottom and Top Panels. *(Second person needed to hold onto build so that it does not fall over)*
- ▶ Align Shelf (15) with holes on top side and back boards and screw in Conformat Screws (A) through back boards and into shelf.
- ▶ The Tv Unit is now complete and can be fitted to the Wall with the 8 x supplied Hilti's (H) (4 x behind the flaps and 4 x on the back boards)



Qr Code - Video Assembly

- ▶ Available soon



**There we go! You are all
done. Congratulations !**

CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.