# NEO BEDSIDE TABLE ASSEMBLY INSTRUCTIONS

## Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to saftey testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create a beautifully space to feel comfortable in.

**Here are a few assembly tips before you get started:**



**Make Time**

The first step to all seamless assembly is taking a moment to carfully read through the instructions- you are already on your way to create a beautifully functional space!



**Set The Mood**

Put on your favourite playlist, order a pizza and pour yourself a drink to get in the mood!



**Tool Check**

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



**Room Reveal**

You Did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging.

## Creating your home

**Time to assemble 30 min - People needed 1 - Difficulty level 6/10 - Tools needed - Phillips scredriver - allen key (supplied)**

# NEO BEDSIDE TABLE ASSEMBLY INSTRUCTIONS

## Parts List

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| **1.** | Left Side | x 1 | **5.** | Backing 3mm | x 1 | **9.** | Drawer Side Left | x 3 |
| **2.** | Right Side | x 1 | **6.** | Dowel Skirting | x 1 | **10.** | Drawer Side Right | x 3 |
| **3.** | Bottom Panel | x 1 | **7.** | Drawer Front | x 3 | **11.** | Drawer Bottom 3mm | x 3 |
| **4.** | Top Panel | x 1 | **8.** | Drawer Rear | x 3 | | | |

## Hardware

**A**

Cam



x 20

**B**

Cam Pins



x 20

**C**

Pull Handle
6x Screws (4x16)



x 3

**D**

350mm Drawer Runner
18 x Screws (6 x 16)



x 3

**WARNING**: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall.





Phillips screwdrivers required. For quicker assembly, we recommend the use of a power drill on a low-speed setting.

# NEO BEDSIDE TABLE ASSEMBLY INSTRUCTIONS


**Step 1**

Insert and tighten cam pins**(B)** into small holes in the top**(4)** and sides**(1.2)**
Attach drawer runners**(D)** to sides left**(1)** and side right**(2)** taking note of marked area
Insert cams**(A)** into big holes in bottom**(3)** and sides**(1,2)** ensuring arrow on cam**(A)** faces nearest edge

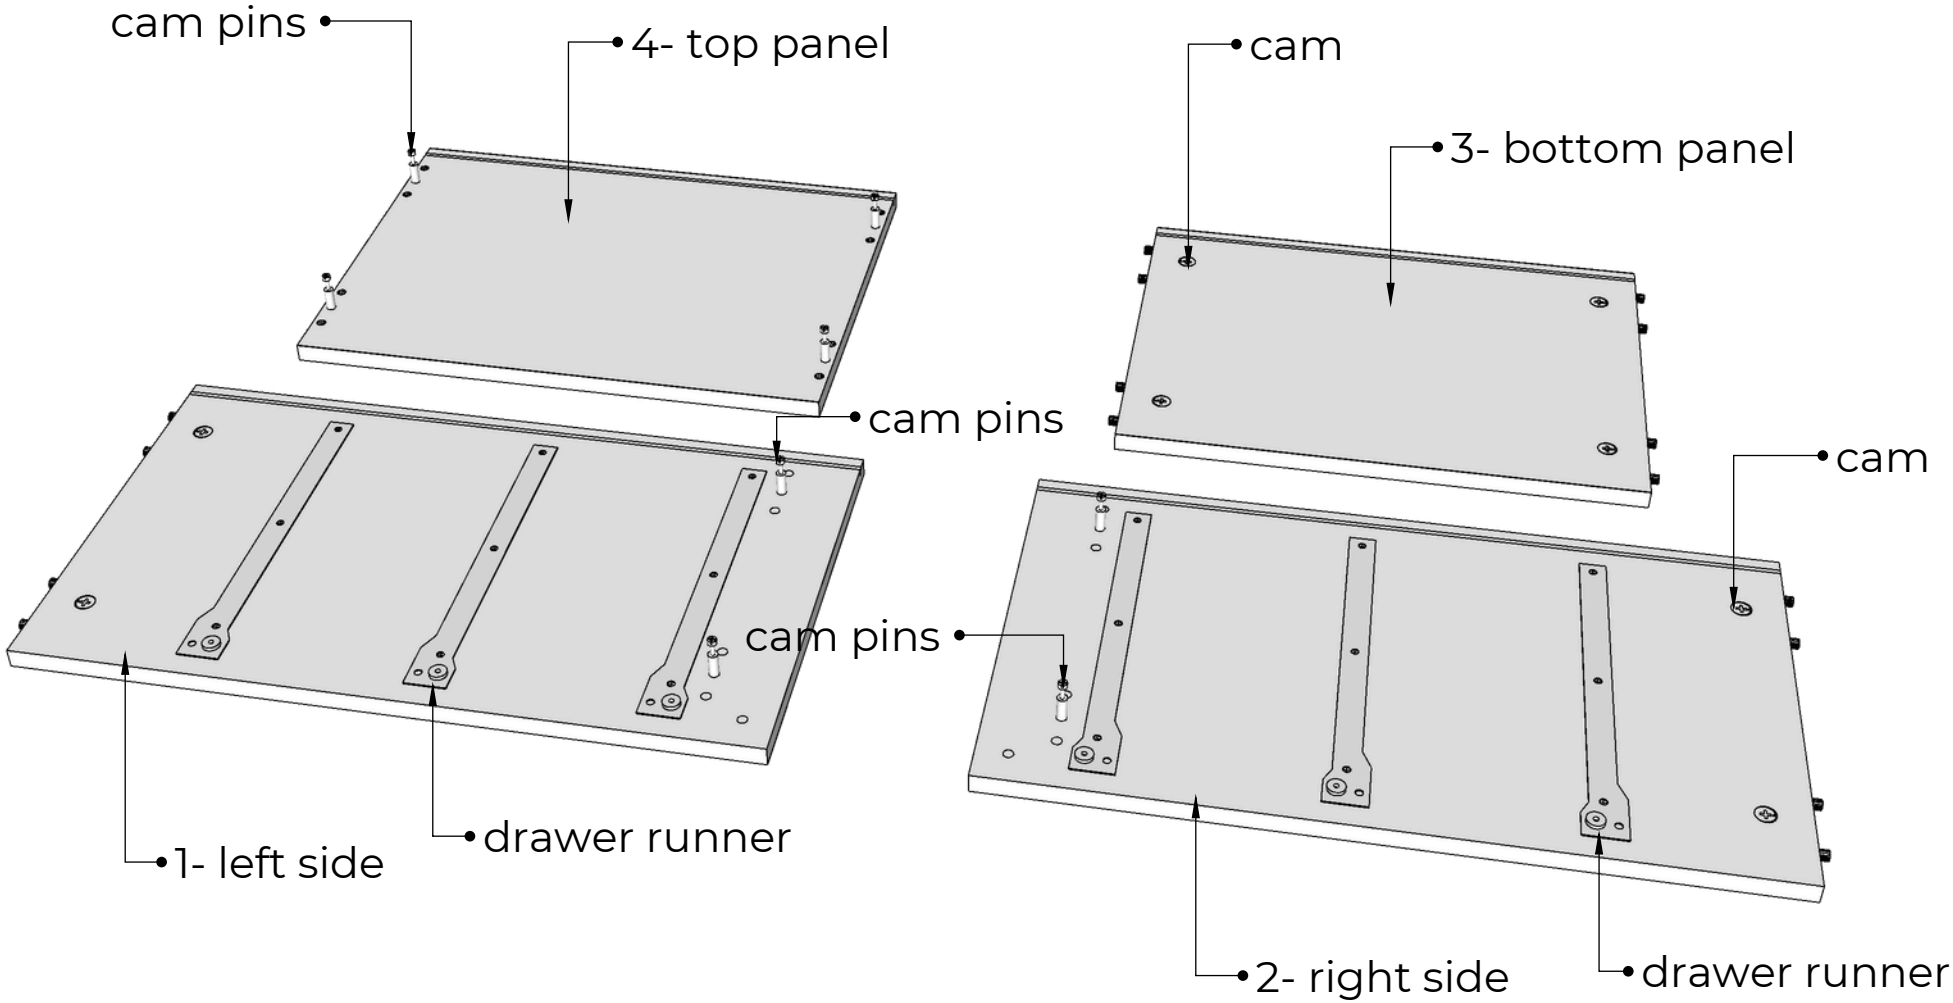


Step 2

Attach bottom**(3)** to left side**(1)** and tighten cam**(A)** in bottom panel**(3)**

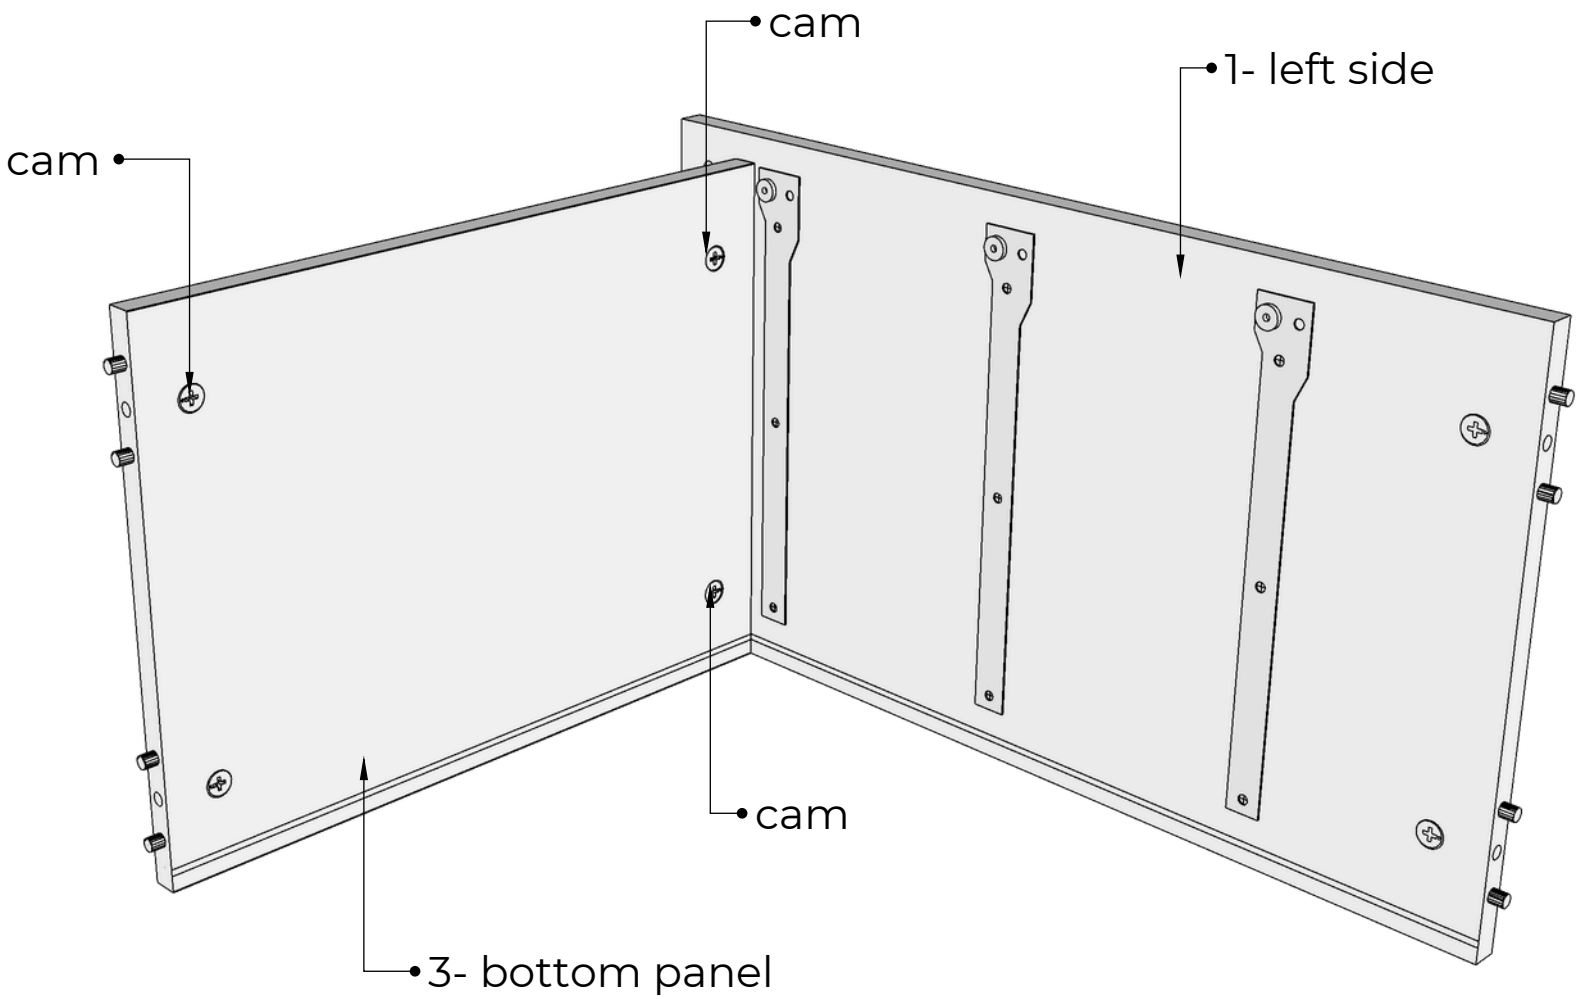


**Step 3.**

Slide doweled skirting**(6)** into the pre-drilled hole in left side**(1)**

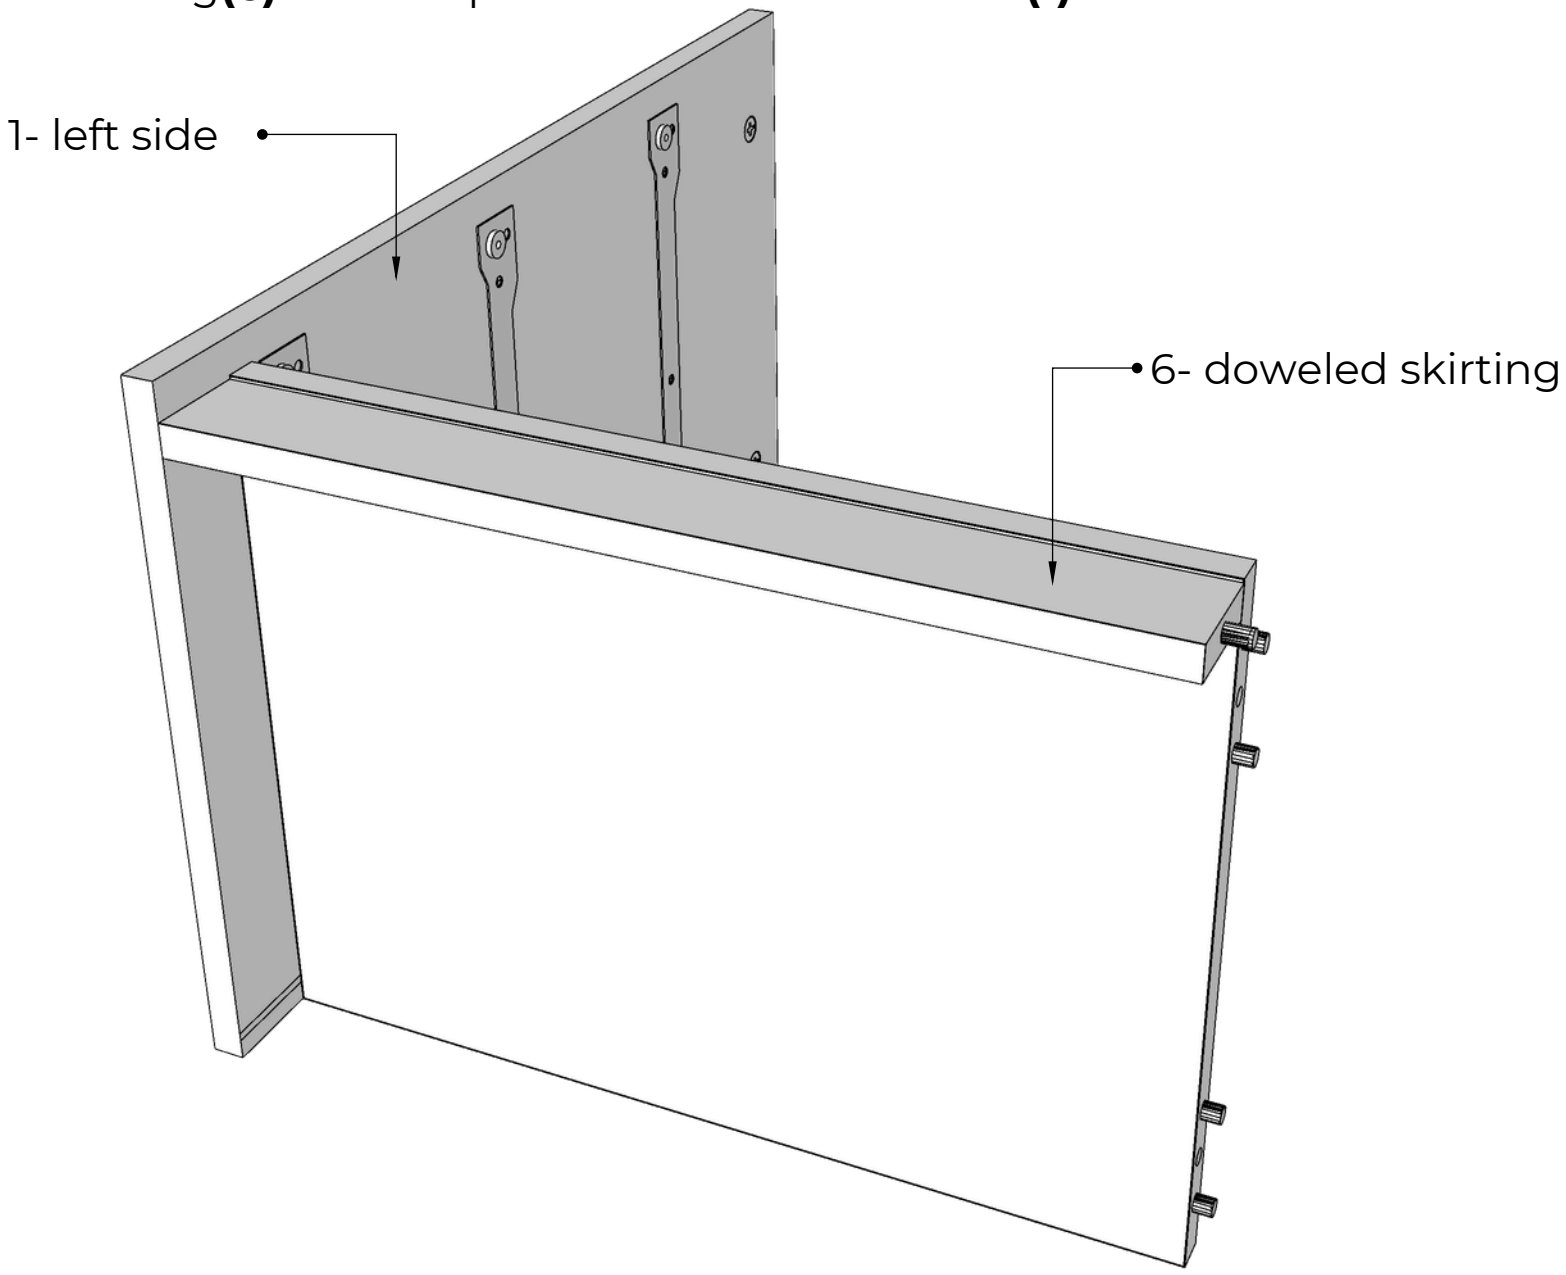


**Step 4**

Attach right side**(2)** to assembly and tighten cams**(A)** in bottom panel**(3)**

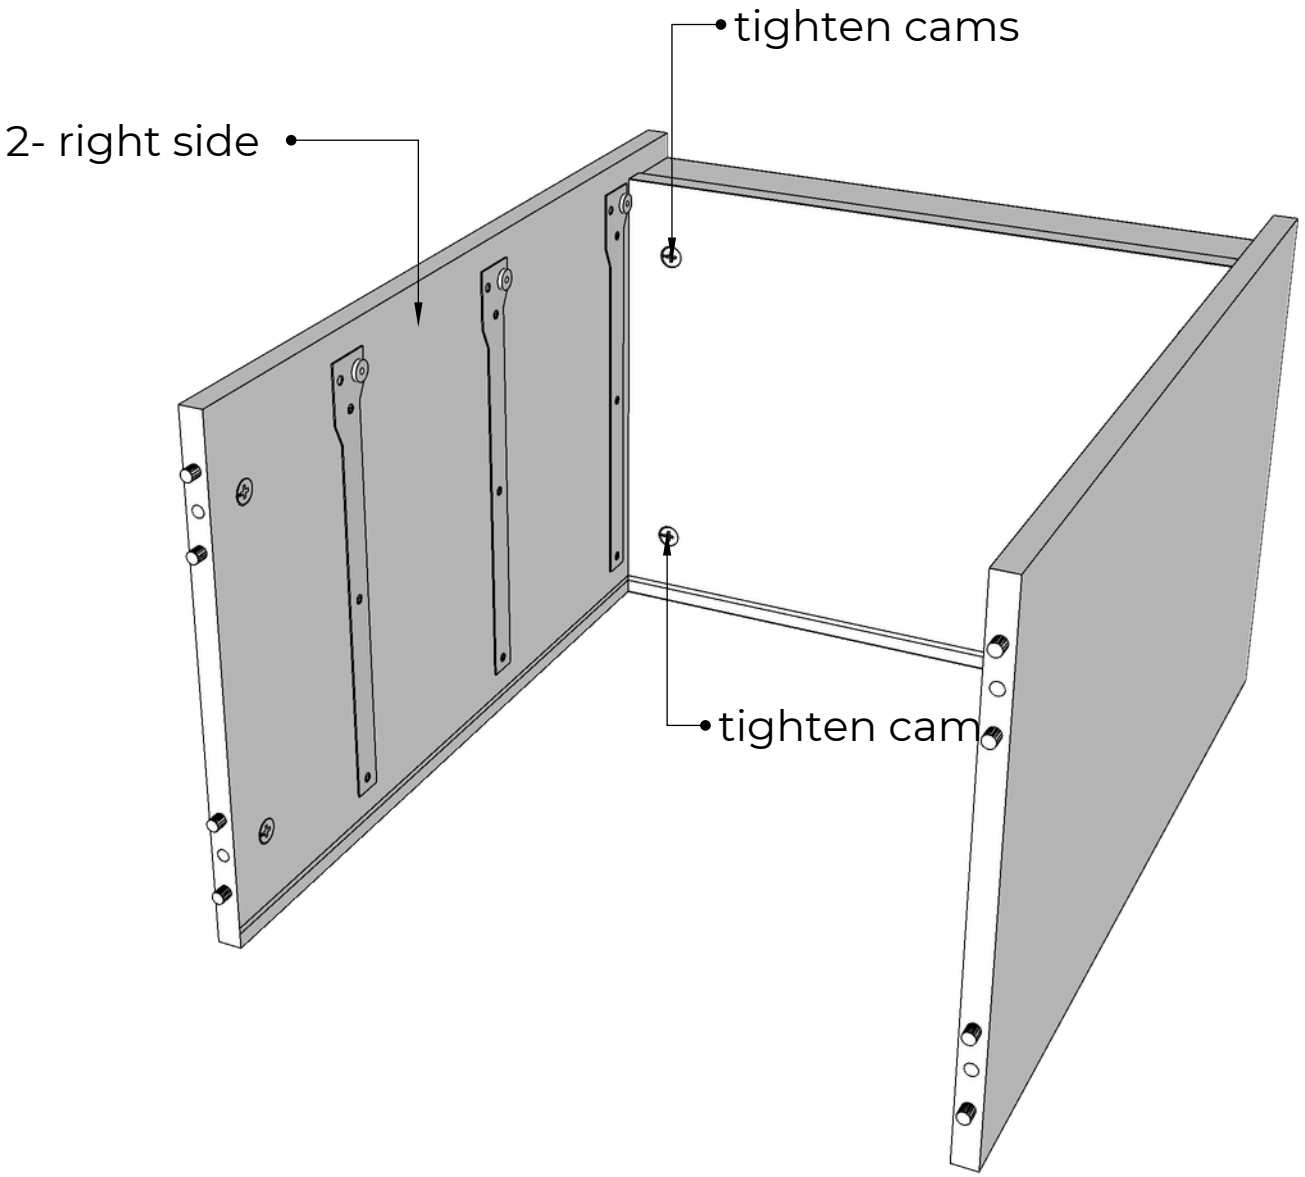


Step 5

Slide cabinet backing**(5)** into the grooves on the sides ensuring it also fits into the groove in the bottom panel**(3)**

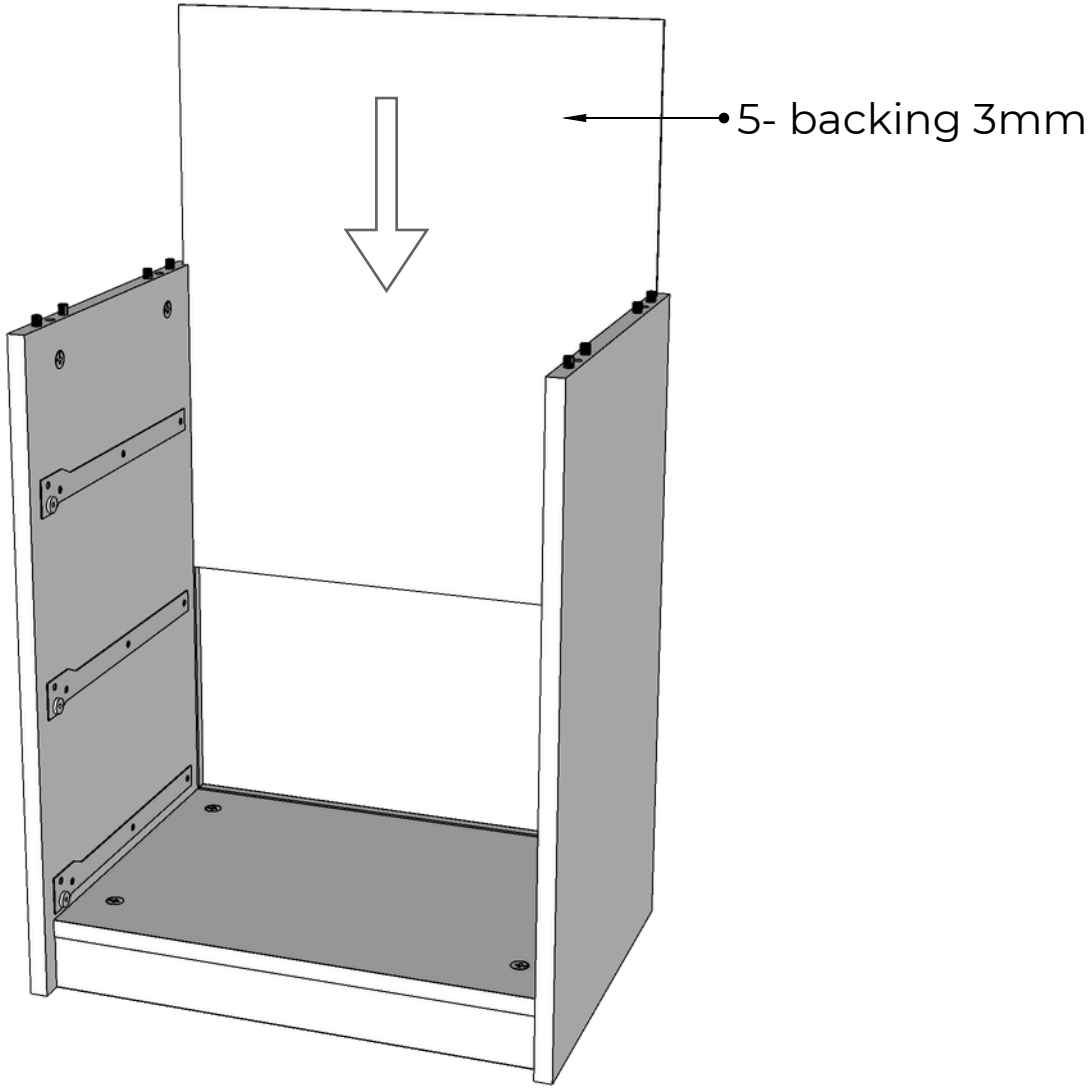


**Step 6**

Align the cam pins**(B)** in the top**(4)** with the holes in the sides**(1,2)** and attach the top**(4)** to the previous assembly ensure that the cabinet backing**(5)** fits into the groove in the top panel**(4)** and tighten the cams**(A)** in the sides**(1,2)**

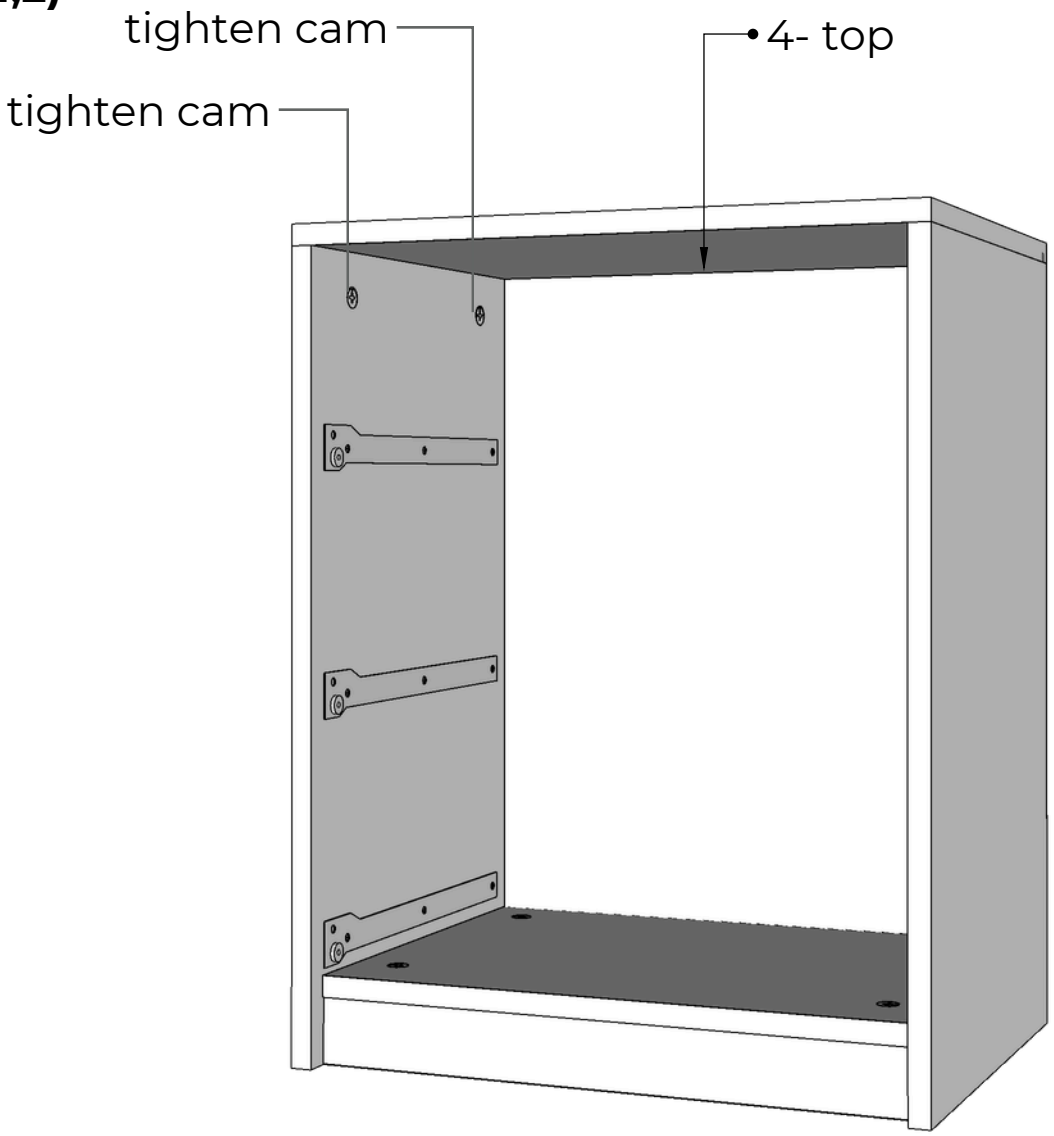

**Step 7**

After drawer assembly is done, insert drawers into cabinet assembly by slightly tilting the drawer assembly downward and pressing forward. Make sure the wheels are running inside the guides.

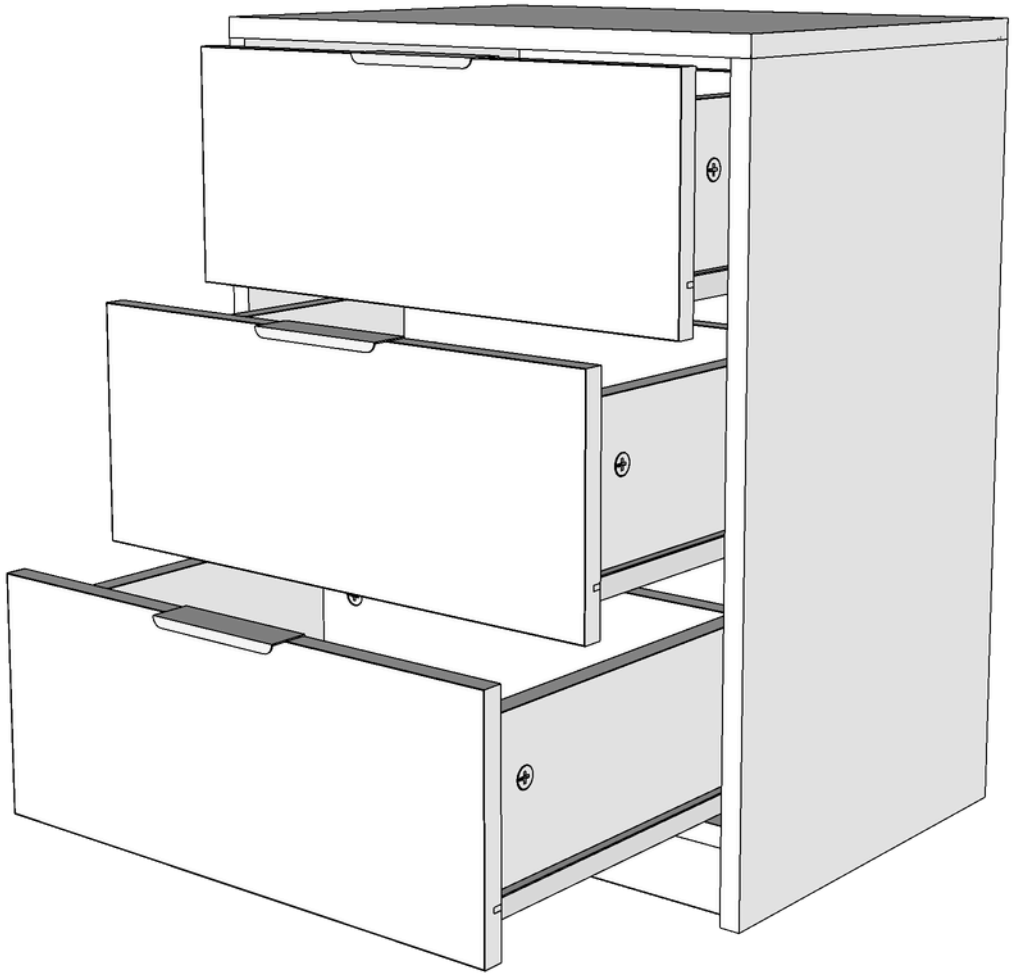


## Assembled Unit



## DRAWER ASSEMBLY

**Step 1**


Insert cam pins**(B)** into drawer front**(7)** and drawer sides**(9,10)**

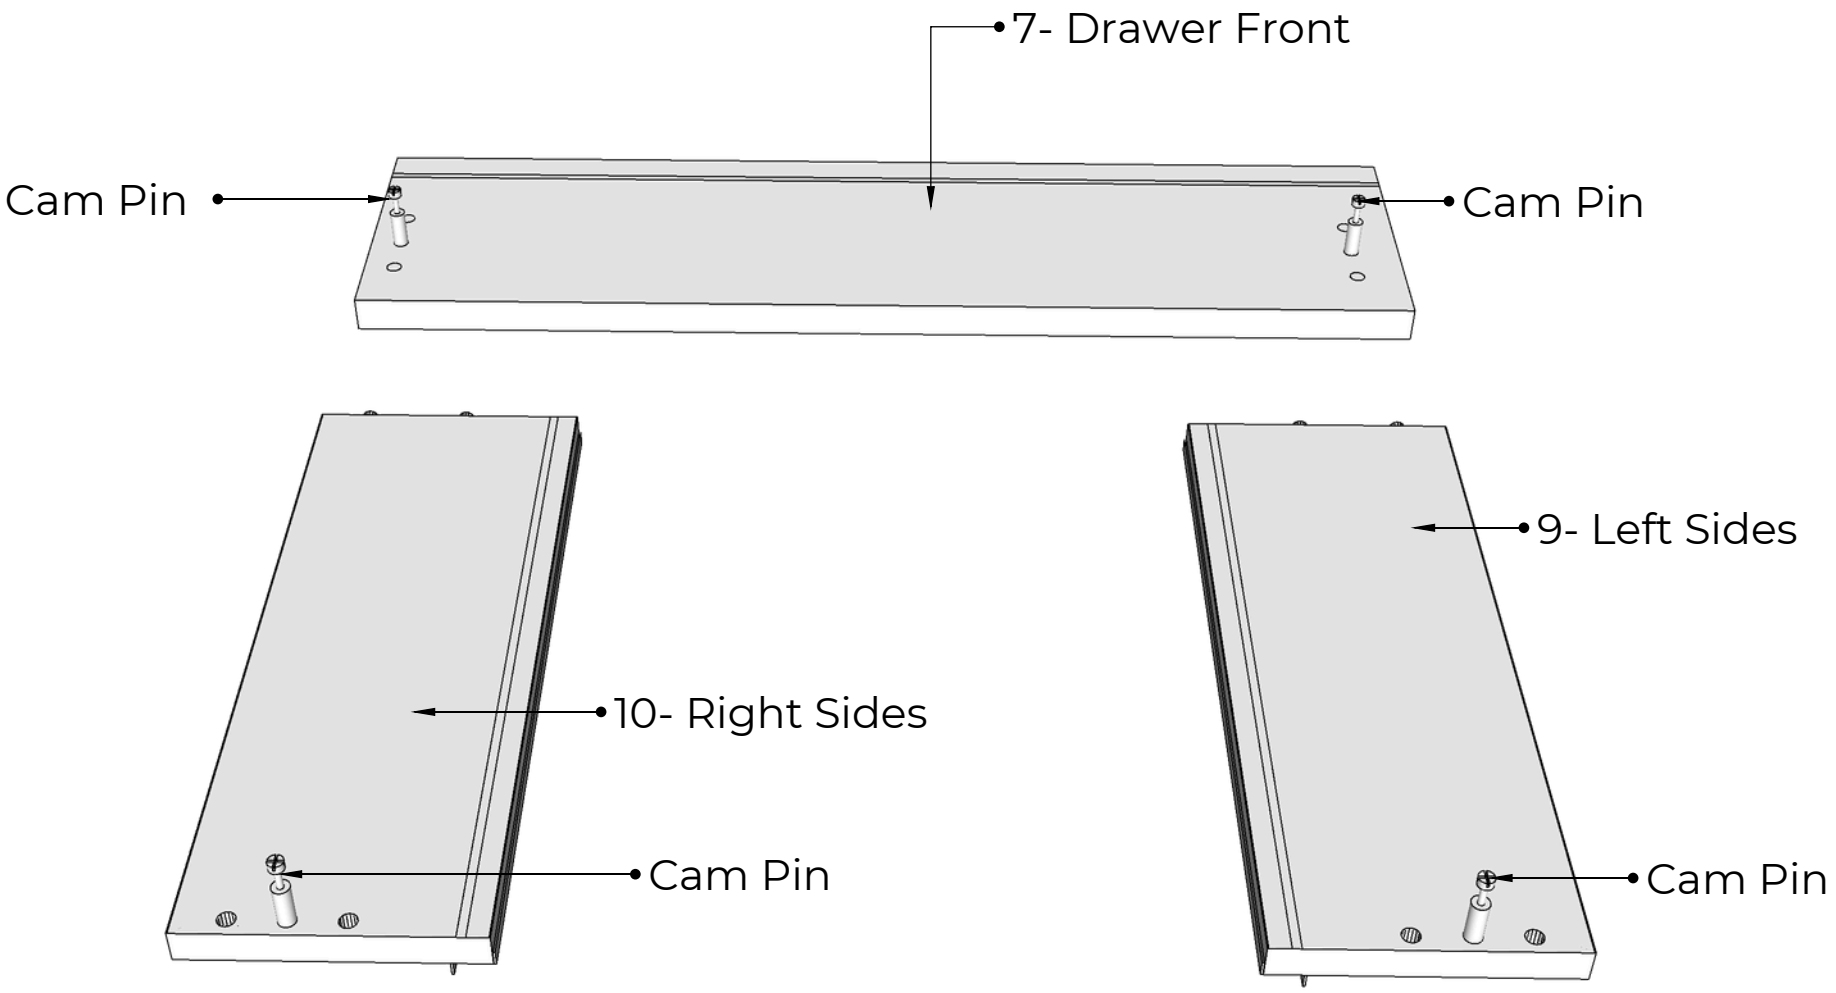

## DRAWER ASSEMBLY

**Step 2**


Insert cams**(A)** into large holes in drawer sides**(9,10)** and drawer rear**(8)**, ensuring the arrow on the cam faces nearest edge

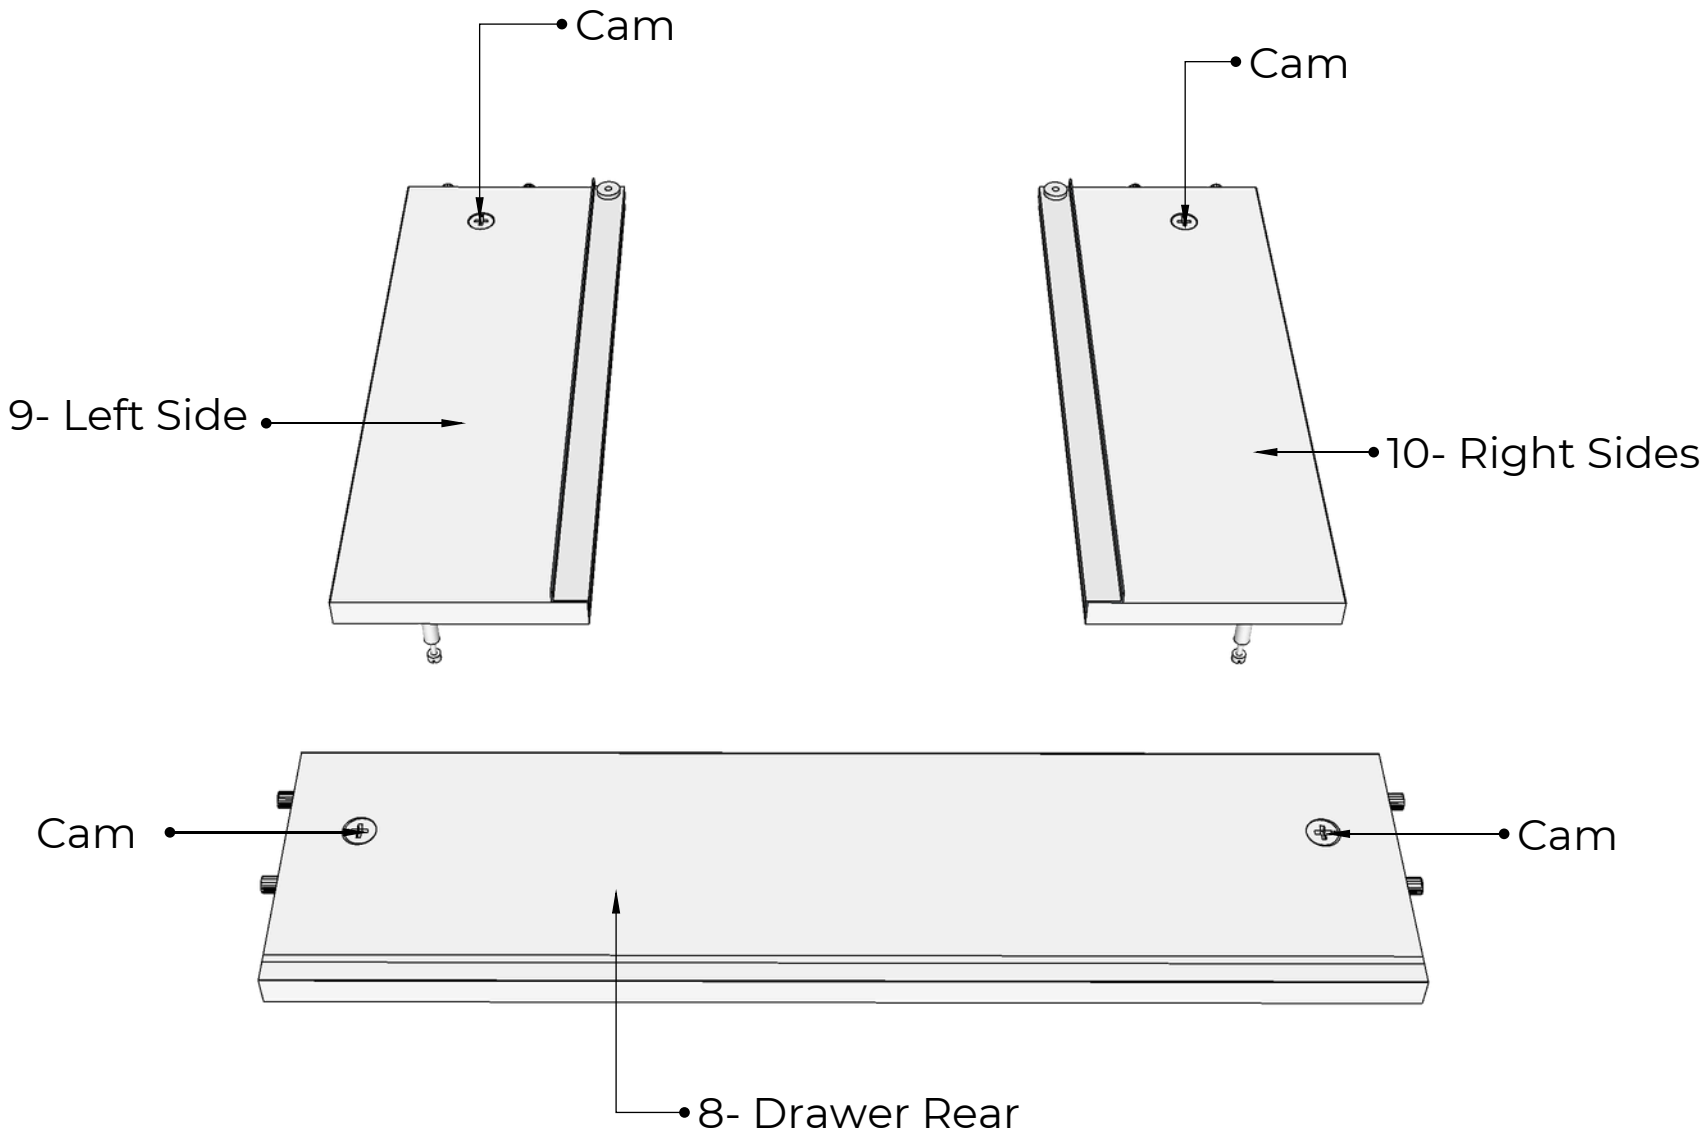

## DRAWER ASSEMBLY

**Step 3**


Attach drawer sides**(9,10)** to drawer rear**(8)** and tighten cams**(A)**

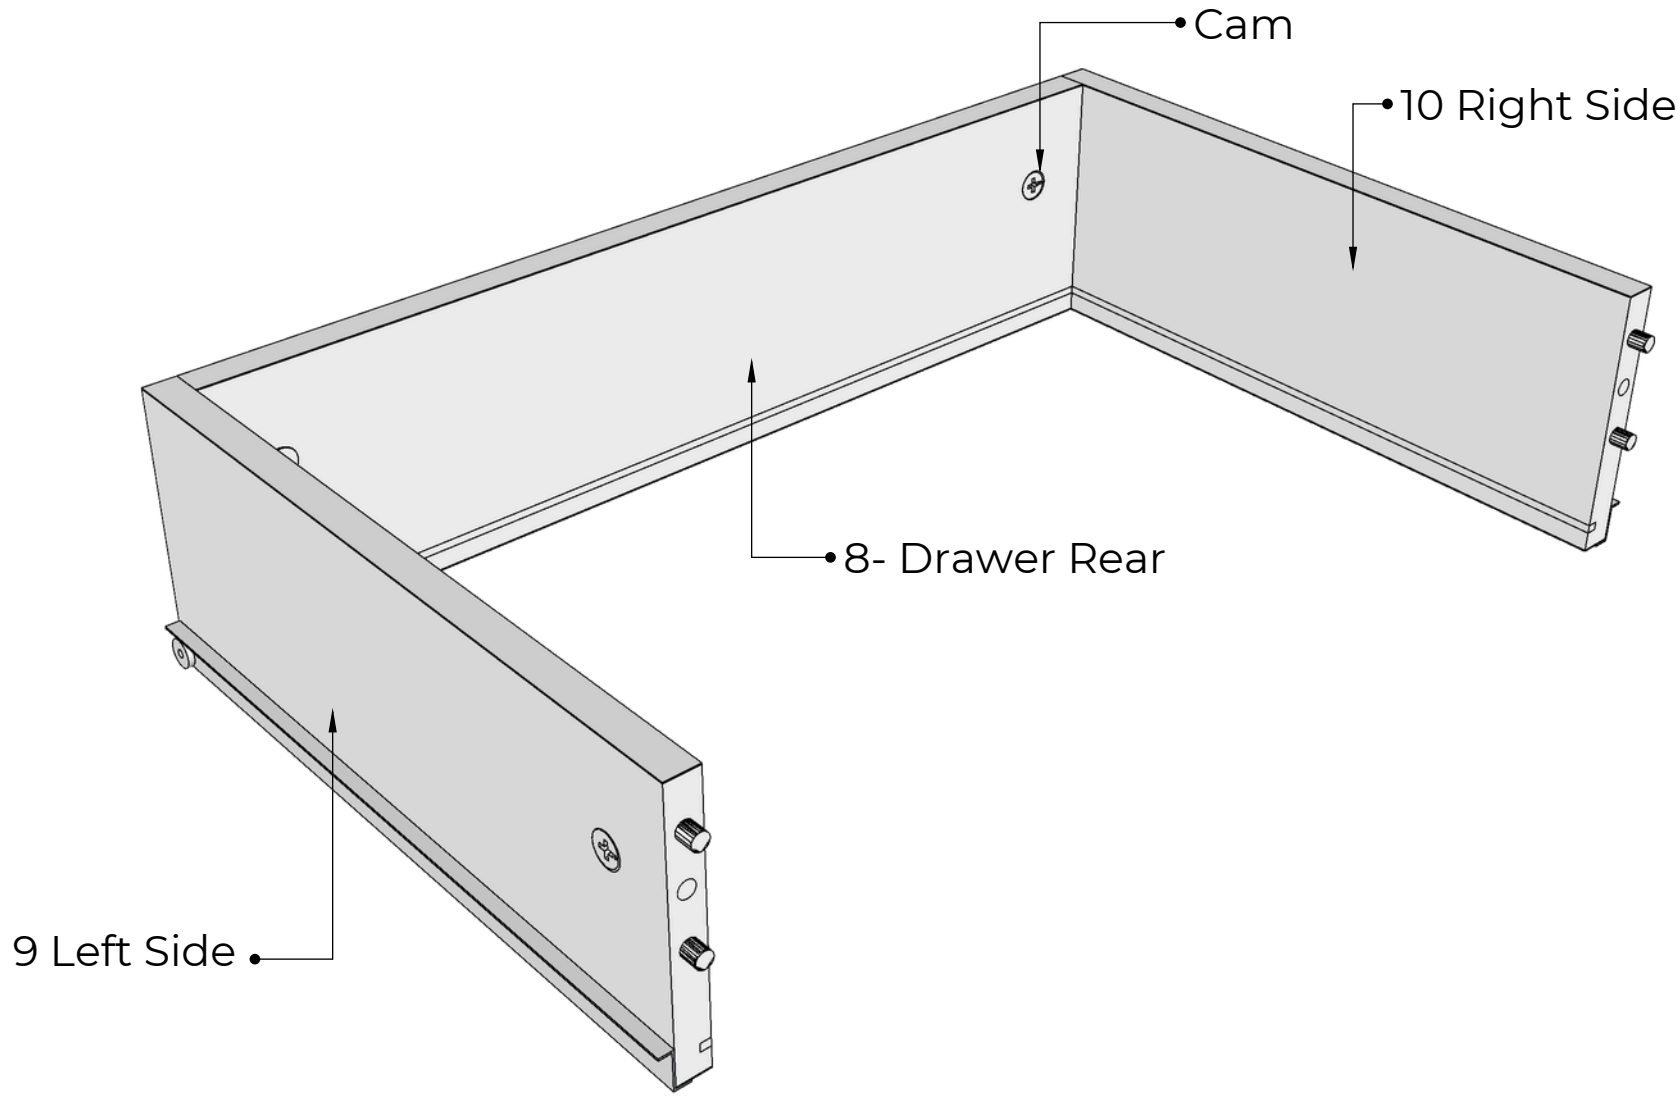

## DRAWER ASSEMBLY

**Step 4**

Slide drawer bottom**(11)** into the grooves on the drawer sides**(10)** and drawer rear**(8)**

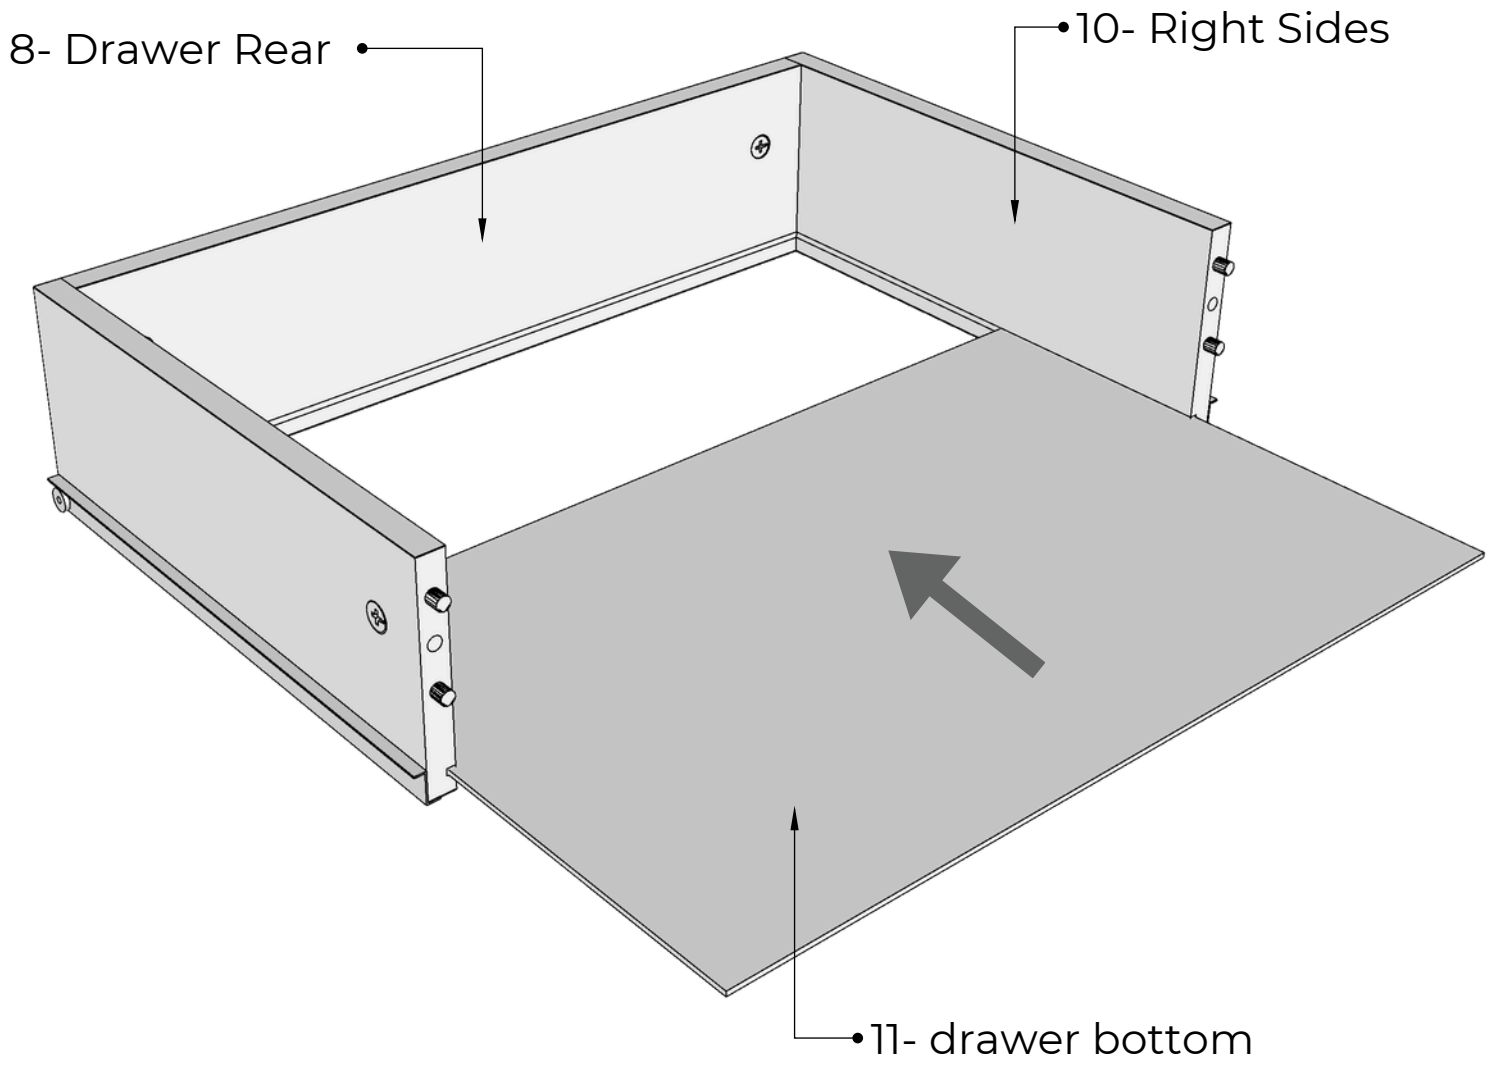

## DRAWER ASSEMBLY

**Step 5**

Attach drawer front**(7)** to drawer assembly by sliding the cam pins**(B)** into the holes on the drawer sides**(9,10)** and tightening the cams**(A)**
Ensure that the drawer bottom**(11)** fits into the groove in the drawer front**(7)**
attach the handle**(C)** to the back of the drawer front**(7)** with supplied screws

