



NOVA BEDSIDE TABLE

Parts List

- | | | |
|-------------------|---------------------|--------------|
| 1. Left Side X 1 | 5. Backing 3mm X 2 | 9. Cleat X 1 |
| 2. Right Side X 1 | 6. Drawer Front X 1 | |
| 3. Bottom X 1 | 7. Drawer Sides X 2 | |
| 4. Top X 1 | 8. Drawer Rear X 1 | |



Body Assembly







- ▶ Screw Cam Pin (D) into Top Panel (4). Insert Cam (C) into big hole on Side Left (1) and Side Right (2) with small arrows on Cam facing outside holes.
- ▶ Attach Drawer Runners (B) to Side Left and Side Right using Flat Screws provided - see markings on side for position of runners.
- ▶ Screw Bottom Panel (3) to Sides (1,2) using Confirmat Screws (A) with Allen Key Provided.
- ▶ Slide Cleat (9) in between Sides (1,2) so that the dowels align with the holes on the sides and insert and tighten Confirmat screws (A) from the outside of the sides.
- ▶ Insert Foil Backing (5) for cabinet into back grooves.
- ▶ Attach Top Panel to Sides (1,2) using Cams (C) - Do not use excessive force.
- ▶ Attach Y-Legs (F) to the Bottom Panel (3) using the Supplied Screws.




Drawer Assembly

- ▶ Place Drawer Front (6) on soft surface. Screw Cam Pins (D) into small holes. Remember to attach handle after assembly.
- ▶ Fit Drawer Sides (7) over pins on Front and tighten.
- ▶ Slide Drawer Foil Backing (5) into grooves.
- ▶ Fit Drawer Rear (8) between sides (1,2) - make sure Foil Backing is in groove. Use 2 x Confirmat Screw (A) to fix Drawer Rear (8) to Drawer Sides (7)
- ▶ Slide Drawer into main body by tilting on a downward angle - Make sure wheels are running **inside** the guides on the sides of the body.

Hardware

A	Confirmat Screws <i>Use Allen Key Provided</i>	x 8	
B	Set Drawer Runners Screws (6 x 16)	x 1 x 6	
C	Cam Screws	x 6	
D	Cam Pins	x 6	
E	Pull Handle Screws (4 x 16)	x 1 x 2	
F	Slim Y-Legs G-Screws (9 x 16)	x 4 x 16	

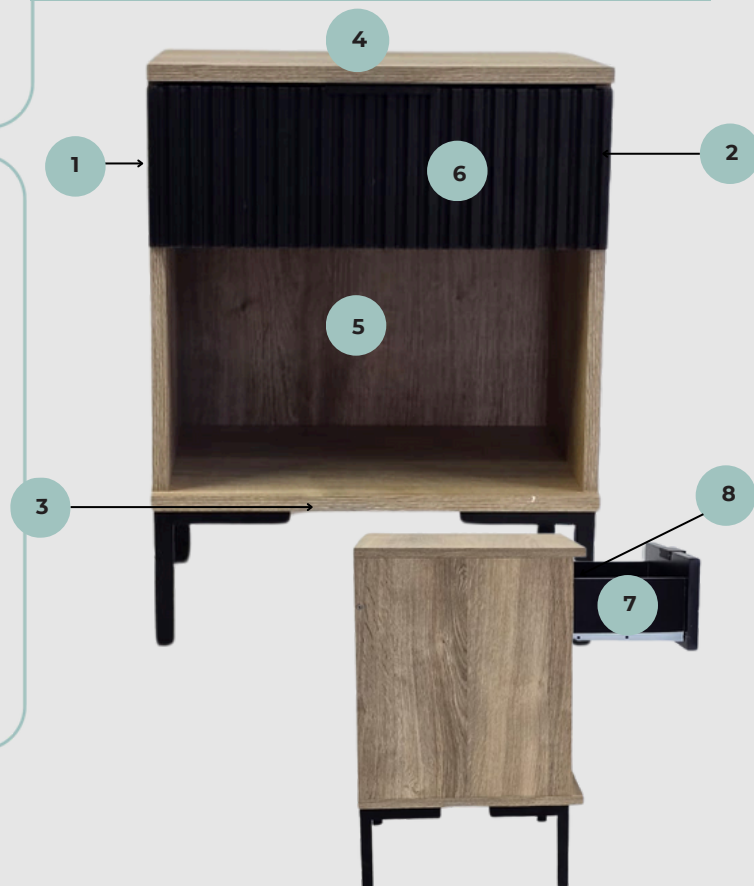

Scan to
watch
assembly
video



There we go! You are all done. Congratulations !

CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.



NOVA BEDSIDE TABLE

Parts List

- | | | |
|-------------------|---------------------|--------------|
| 1. Left Side X 1 | 5. Backing 3mm X 2 | 9. Cleat X 1 |
| 2. Right Side X 1 | 6. Drawer Front X 1 | |
| 3. Bottom X 1 | 7. Drawer Sides X 2 | |
| 4. Top X 1 | 8. Drawer Rear X 1 | |



Body Assembly







- ▶ Screw Cam Pin (D) into Top Panel (4). Insert Cam (C) into big hole on Side Left (1) and Side Right (2) with small arrows on Cam facing outside holes.
- ▶ Attach Drawer Runners (B) to Side Left and Side Right using Flat Screws provided - see markings on side for position of runners.
- ▶ Screw Bottom Panel (3) to Sides (1,2) using Confirmat Screws (A) with Allen Key Provided.
- ▶ Slide Cleat (9) in between Sides (1,2) so that the dowels align with the holes on the sides and insert and tighten Confirmat screws (A) from the outside of the sides.
- ▶ Insert Foil Backing (5) for cabinet into back grooves.
- ▶ Attach Top Panel to Sides (1,2) using Cams (C) - Do not use excessive force.
- ▶ Attach Y-Legs (F) to the Bottom Panel (3) using the Supplied Screws.




Drawer Assembly

- ▶ Place Drawer Front (6) on soft surface. Screw Cam Pins (D) into small holes. Remember to attach handle after assembly.
- ▶ Fit Drawer Sides (7) over pins on Front and tighten.
- ▶ Slide Drawer Foil Backing (5) into grooves.
- ▶ Fit Drawer Rear (8) between sides (1,2) - make sure Foil Backing is in groove. Use 2 x Confirmat Screw (A) to fix Drawer Rear (8) to Drawer Sides (7)
- ▶ Slide Drawer into main body by tilting on a downward angle - Make sure wheels are running **inside** the guides on the sides of the body.

Hardware

A	Confirmat Screws <i>Use Allen Key Provided</i>	x 8	
B	Set Drawer Runners Screws (6 x 16)	x 1 x 6	
C	Cam Screws	x 6	
D	Cam Pins	x 6	
E	Pull Handle Screws (4 x 16)	x 1 x 2	
F	Slim Y-Legs G-Screws (9 x 16)	x 4 x 16	

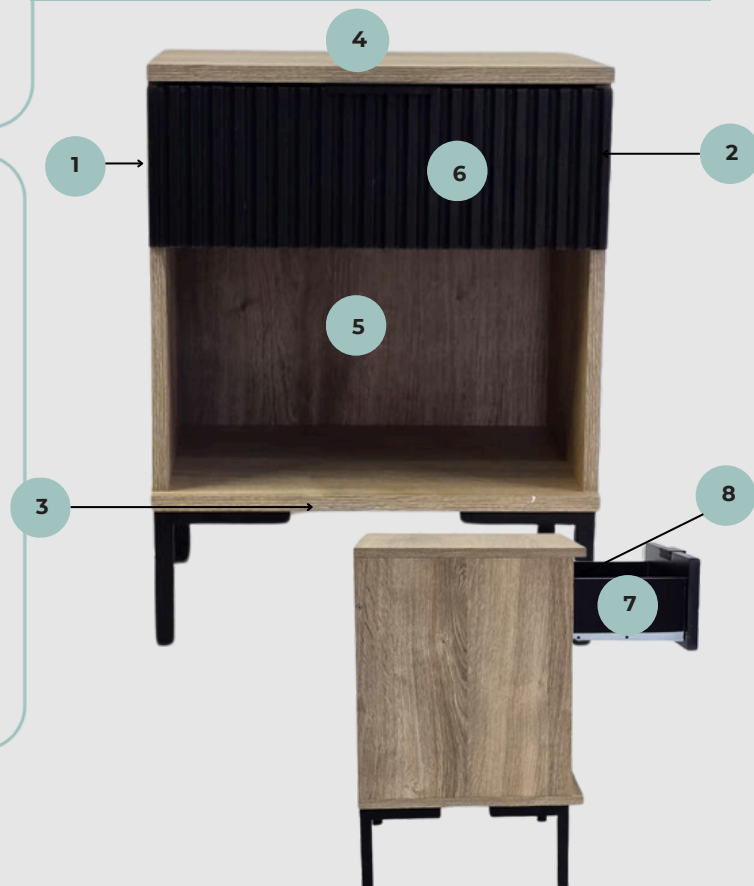

Scan to
watch
assembly
video



There we go! You are all done. Congratulations !

CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.