

OLIVIA BEDSIDE TABLE ASSEMBLY



Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to safety testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create a beautiful space to feel comfortable in.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carefully read through the instructions- you are already on your way to create a beautiful functional space!



Set The Mood

Put on your favourite playlist, order a pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You Did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging.

Creating your home

Time to assemble 30 min - People needed 1 - Difficulty level 6/10 - Tools needed - Phillips screwdriver - allen key (supplied)


OLIVIA BEDSIDE TABLE ASSEMBLY



Parts List

1.	Left Side	X 1	6.	Drawer Front	x 2
2.	Right Side	X 1	7.	Drawer Side	x 4
3.	Bottom	X 1	8.	Drawer Rear	x 2
4.	Top	X 1	9.	Cleat	x 1
5.	Backing 3mm	x 3			

Hardware

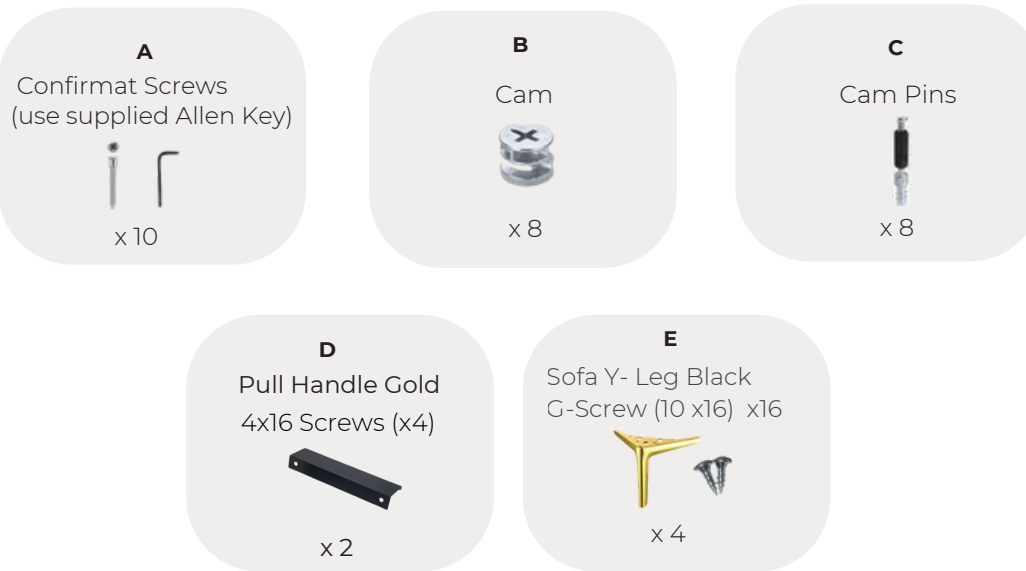

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake.



Accordingly, we recommend that all furniture is anchored to a wall.

Phillips screwdrivers required. For quicker assembly, we recommend the use of a power drill on a low-speed setting.




OLIVIA BEDSIDE TABLE CABINET ASSEMBLY



ASSEMBLY INSTRUCTIONS

Step 1

Screw cam pins(**C**) into small holes in top(**4**)

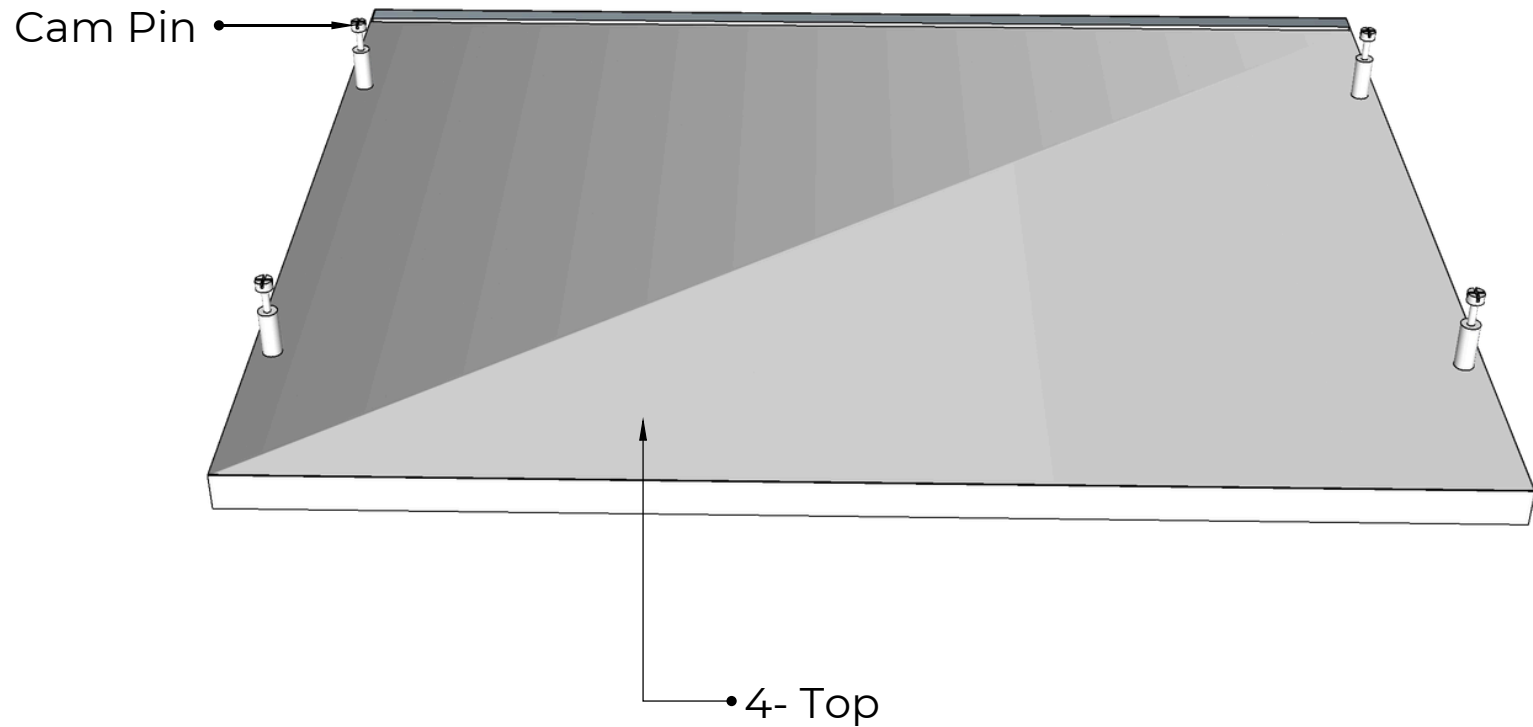

OLIVIA BEDSIDE TABLE CABINET ASSEMBLY





ASSEMBLY INSTRUCTIONS

Step 2

Insert Cams(**C**) into big holes on sides(**1,2**) with arrow on cam(**B**) facing nearest edge.

Attach Drawer Runners to sides(**1,2**) with supplied screws

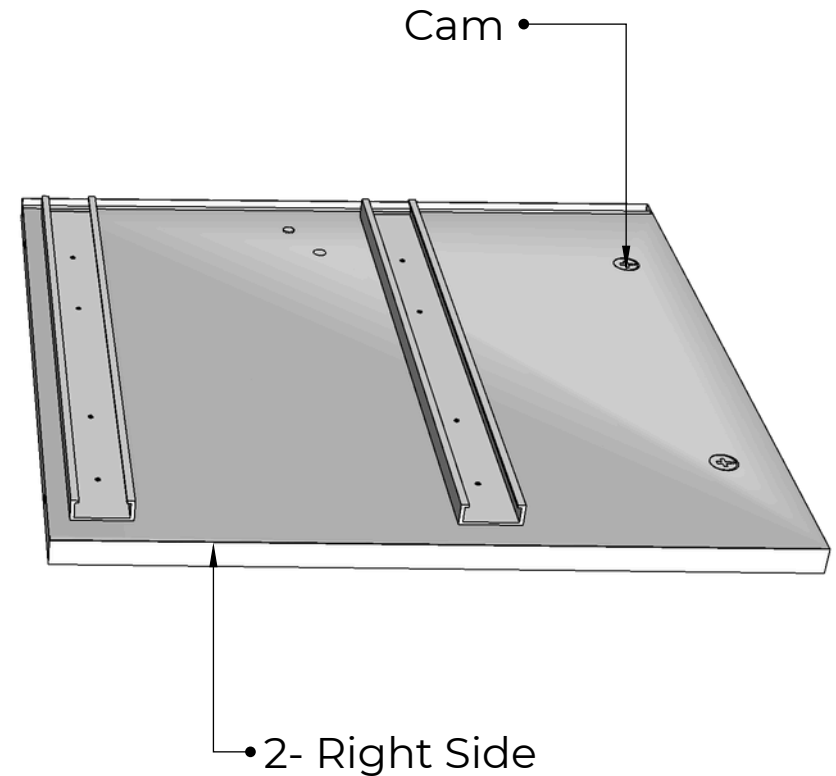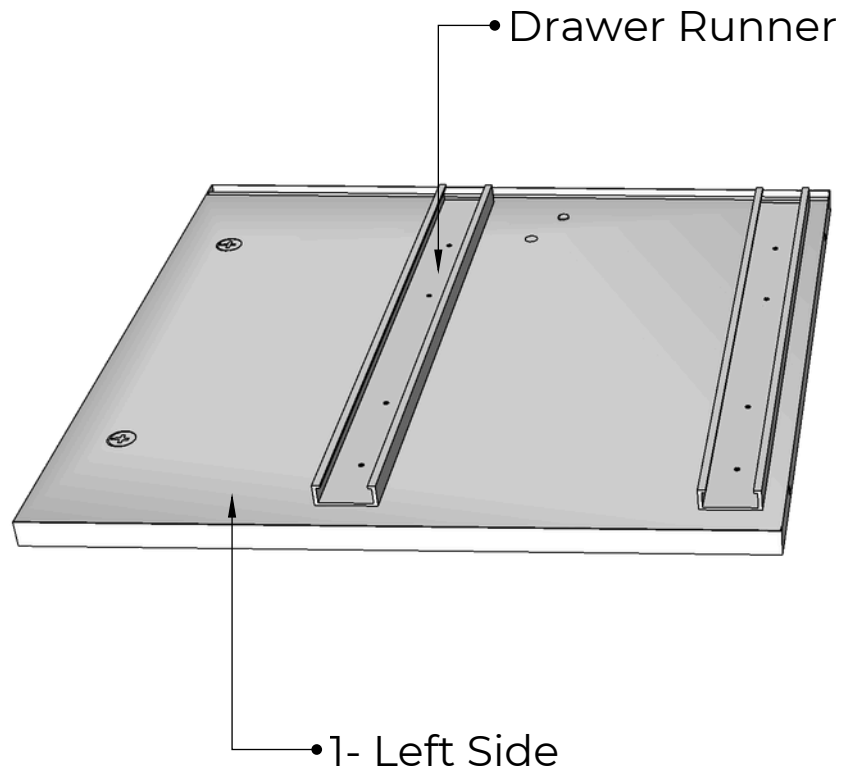


OLIVIA BEDSIDE TABLE CABINET ASSEMBLY



ASSEMBLY INSTRUCTIONS

Step 3

Attach sides **(1,2)** to cleat **(9)** by lining up the dowel holes and fastening with confirmat screws **(A)**

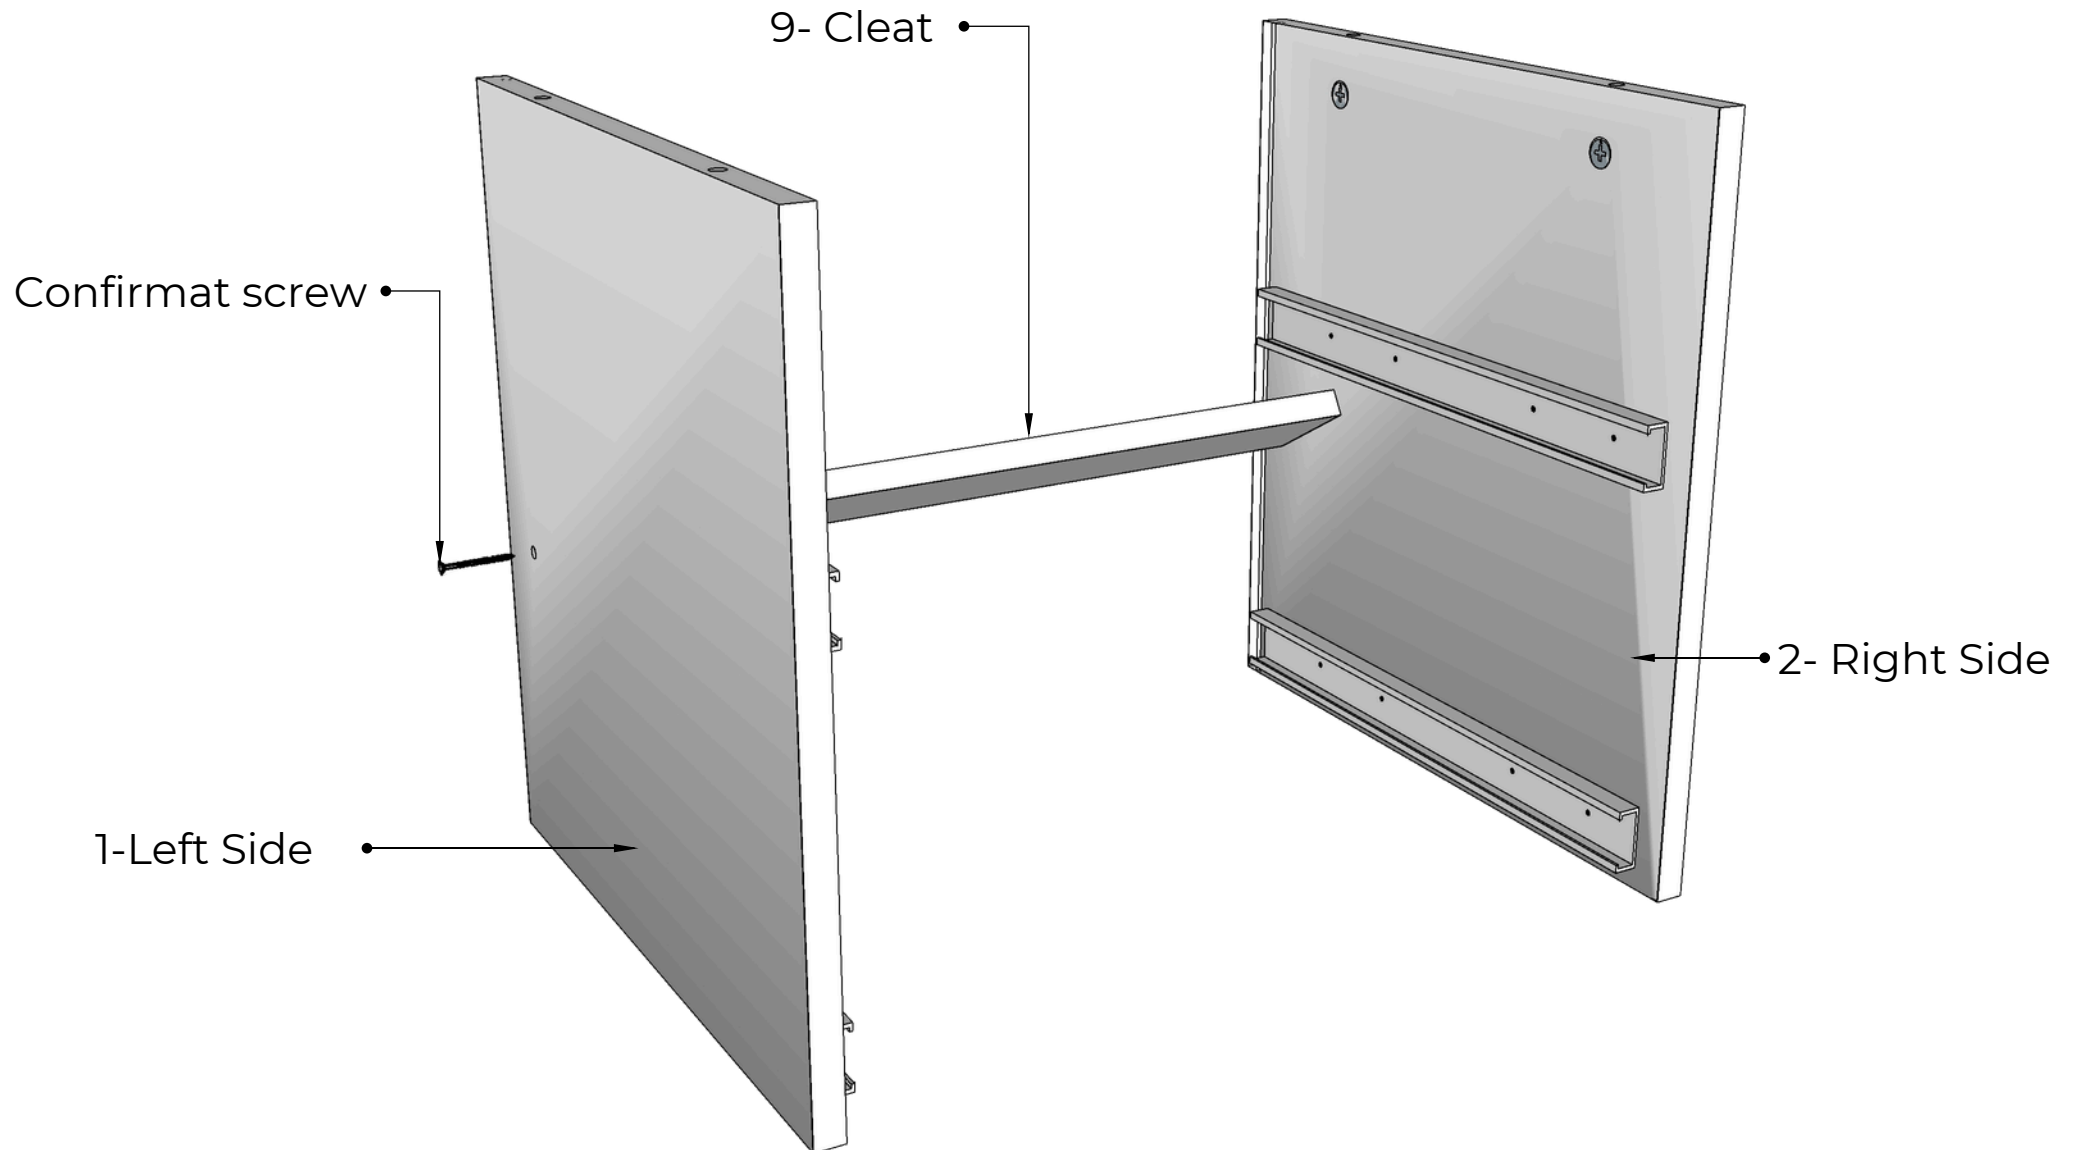

OLIVIA BEDSIDE TABLE CABINET ASSEMBLY




ASSEMBLY INSTRUCTIONS

Step 4

Turn assembly upside down and position assembly over the top **(4)**

Line up the cam pins **(C)** on the top panel **(4)** with the holes in the sides and fasten the cams **(B)**

Line up the grooves on sides **(1,2)** with groove in the top.

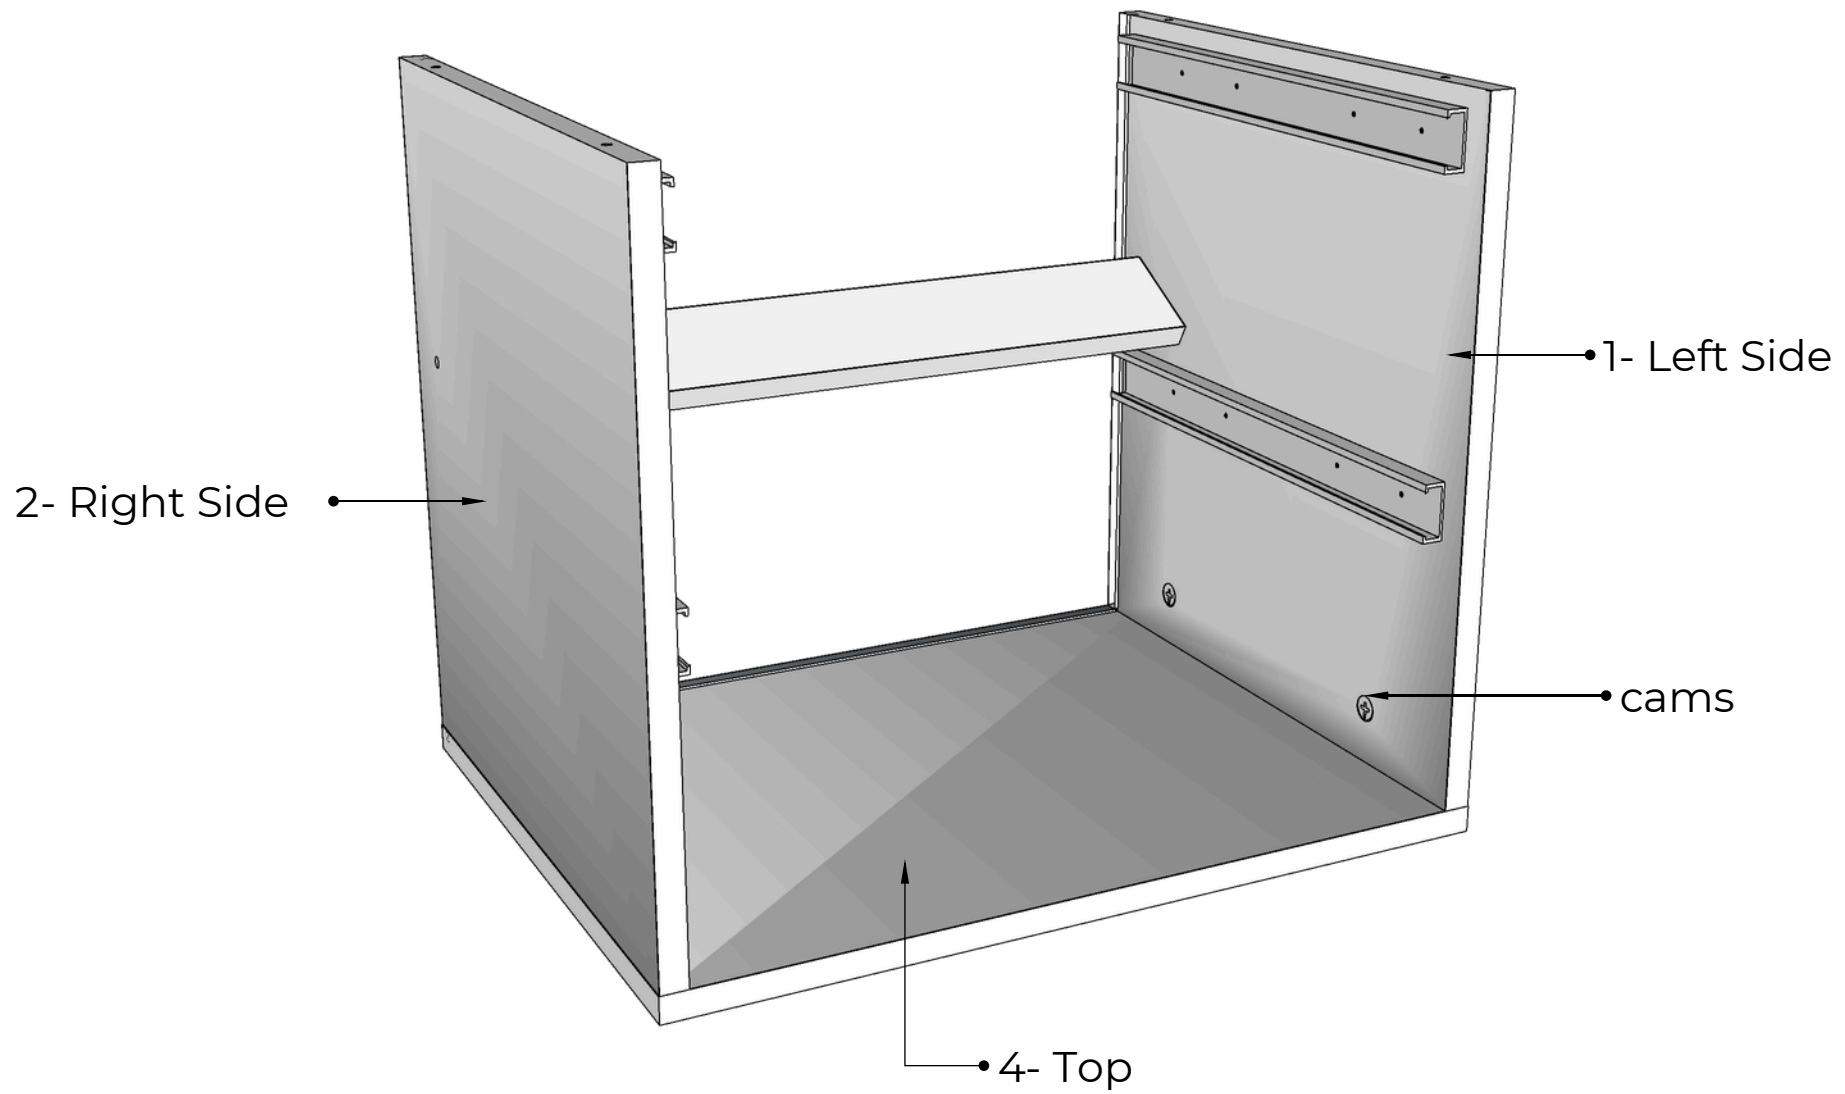




ASSEMBLY INSTRUCTIONS

Step 5

Slide backing **(5)** into grooves on sides **(1,2)** and top **(4)**

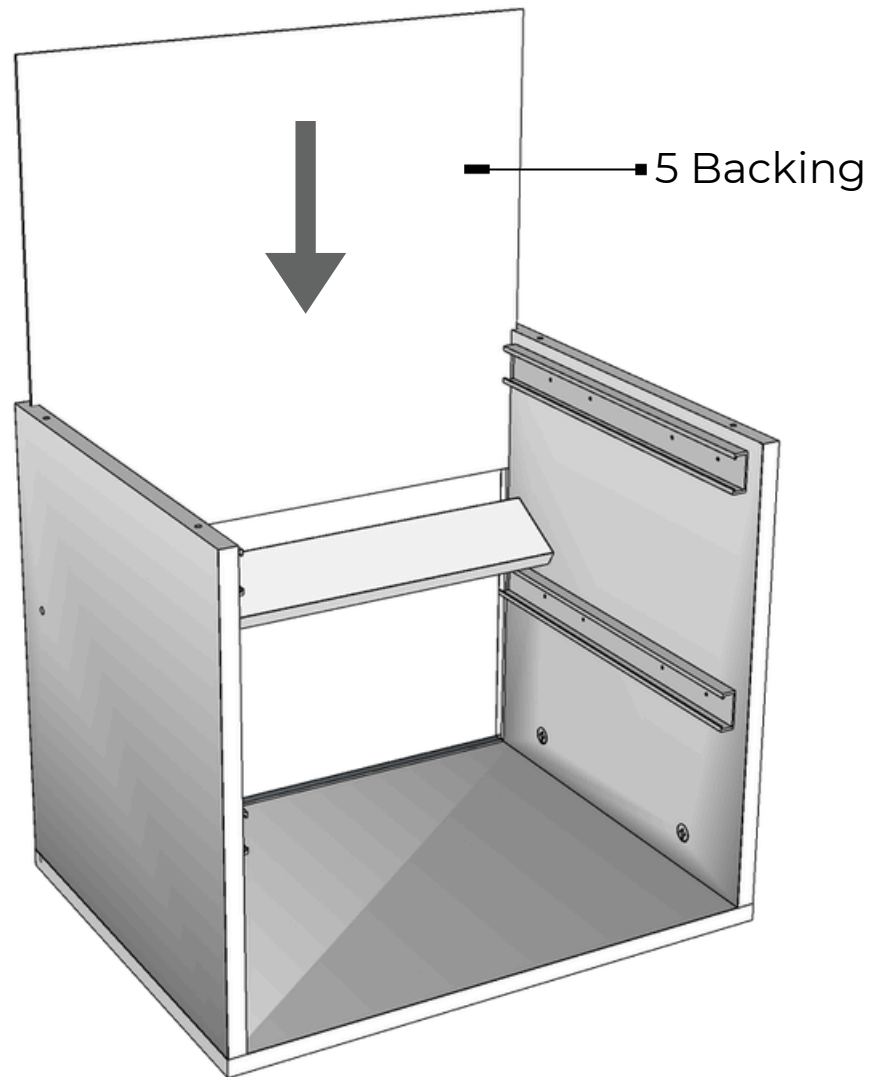




ASSEMBLY INSTRUCTIONS

Step 6

Attach Bottom **(3)** to assembly with Confirmat screws **(A)**

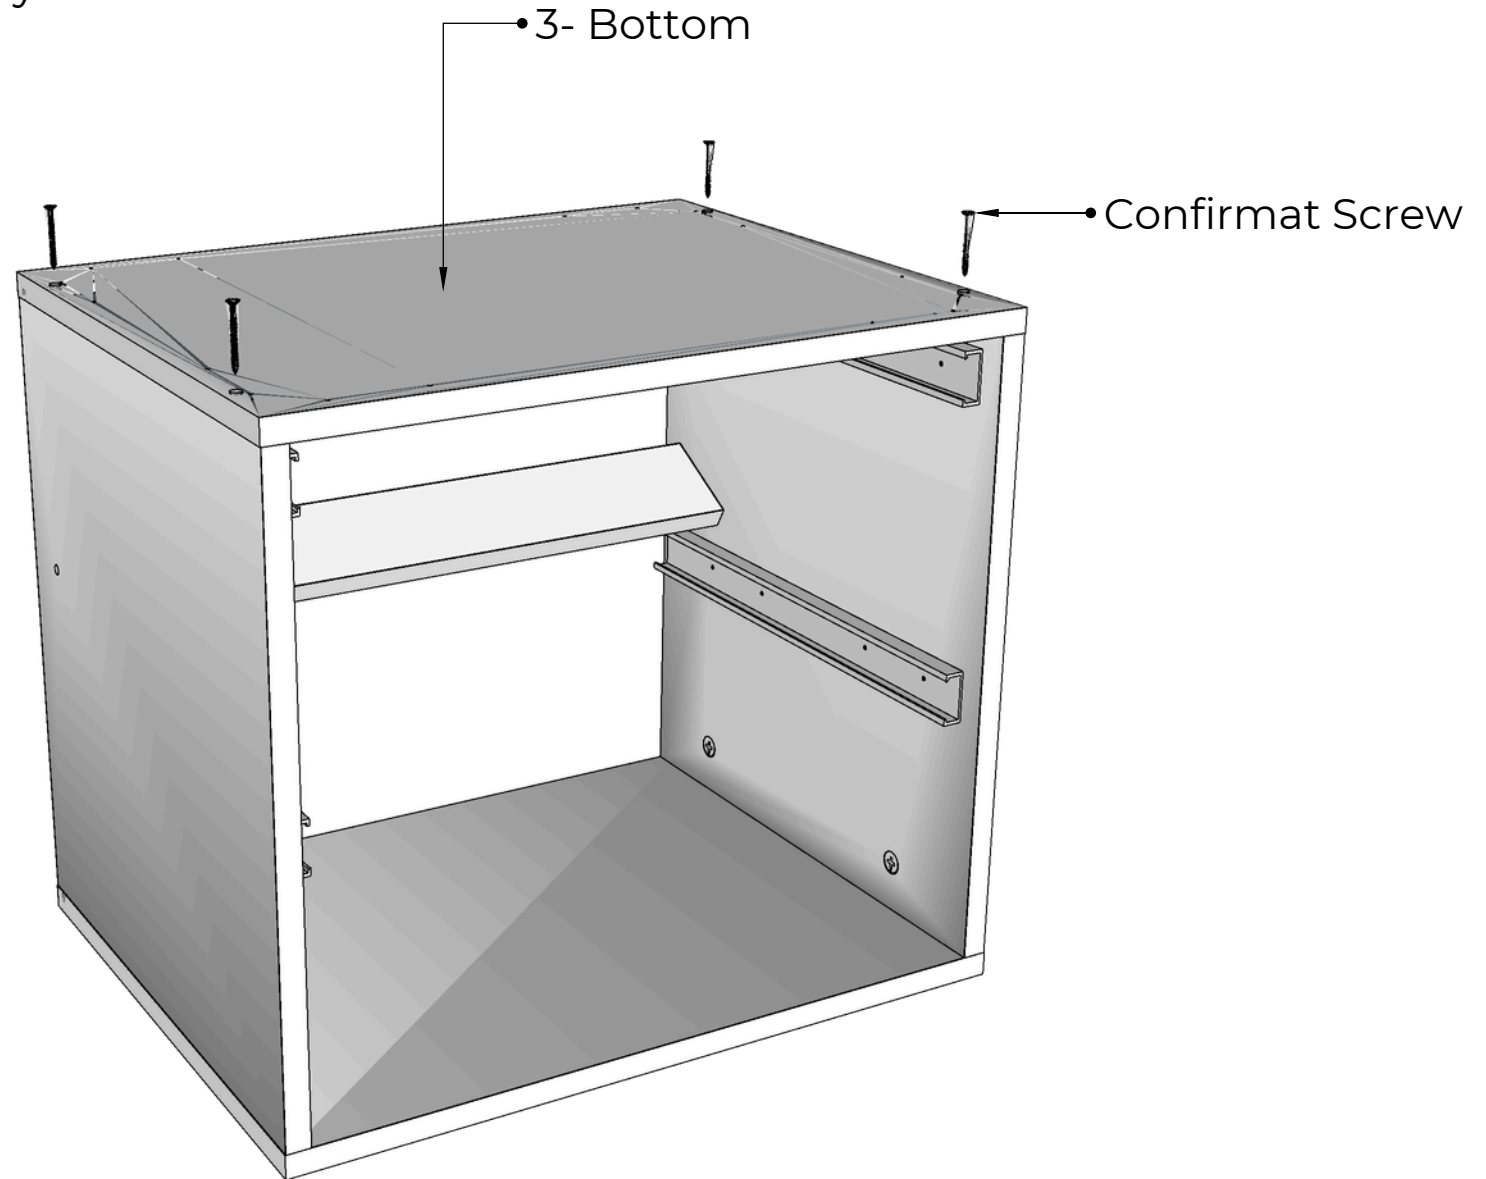


OLIVIA BEDSIDE TABLE CABINET ASSEMBLY



ASSEMBLY INSTRUCTIONS

Step 7

Attach legs(**E**) to assembly using pre-drilled holes in bottom(**3**) and supplied screws

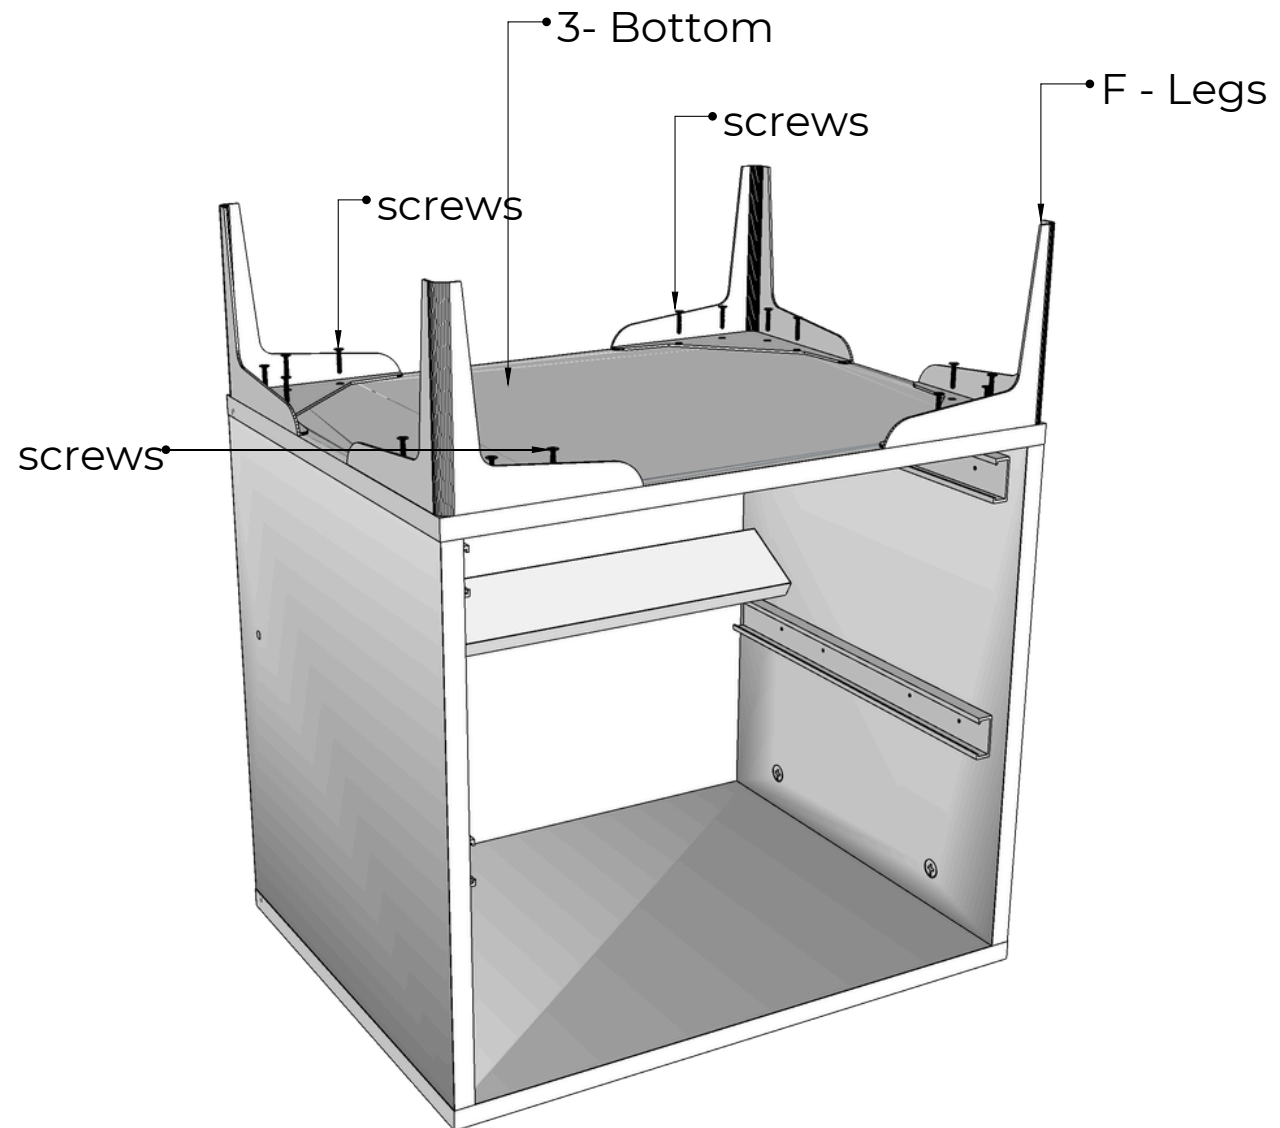




ASSEMBLY INSTRUCTIONS

Step 8

Slide Drawers into main body by aligning the metal runner mountings and pressing it in slowly. It may seem tight while you press it in. After it is fully inserted it will move freely.

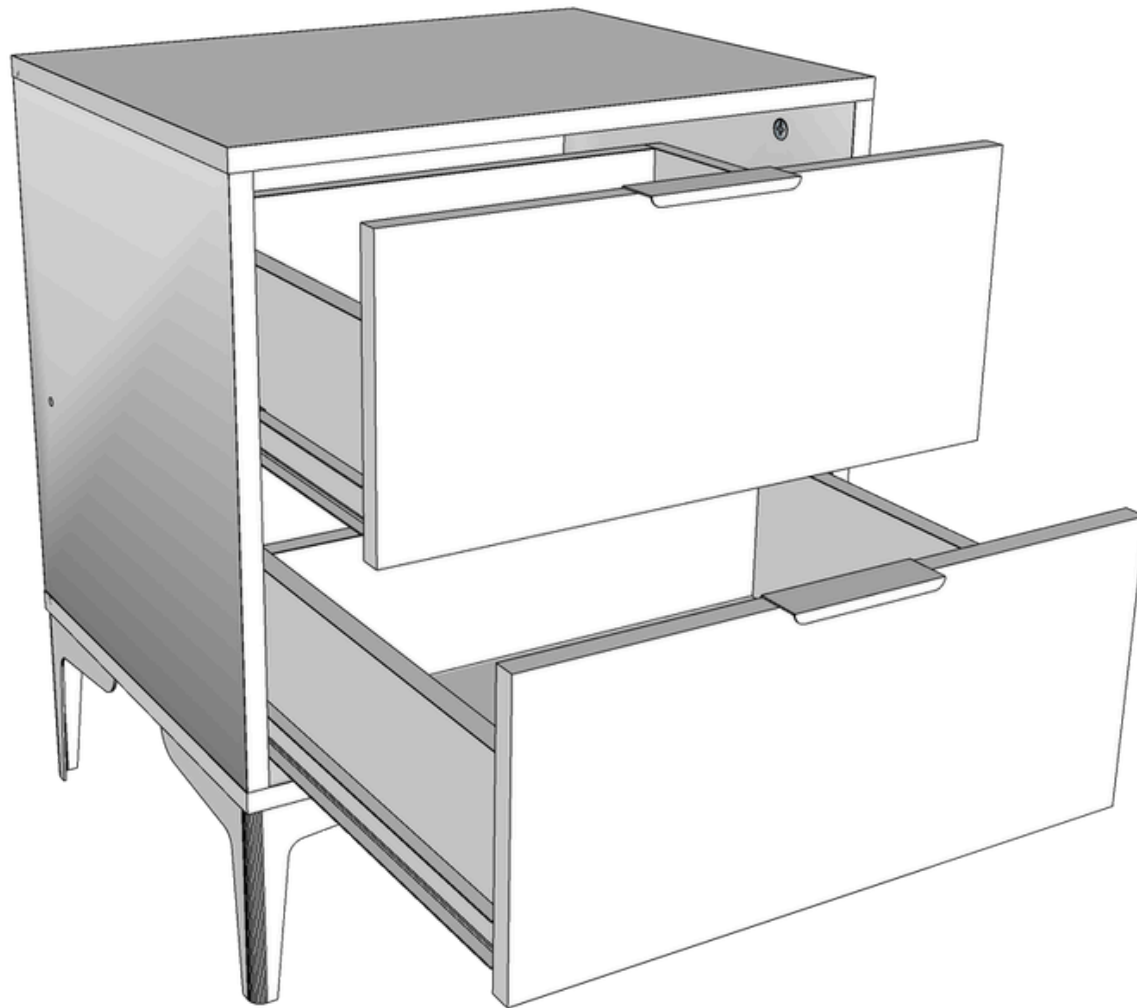

OLIVIA BEDSIDE TABLE CABINET ASSEMBLY



ASSEMBLY INSTRUCTIONS

Assembled Product



OLIVIA BEDSIDE TABLE DRAWER ASSEMBLY




ASSEMBLY INSTRUCTIONS

Step 1

Insert and tighten cam pins(**C**) in drawer front(**6**)

Attach handle(**D**) to drawer front(**6**) with supplied screws in pre-drilled holes

Insert Cams(**B**) in big holes in drawer sides(**7**) ensuring arrow on cam(**B**) faces nearest edge

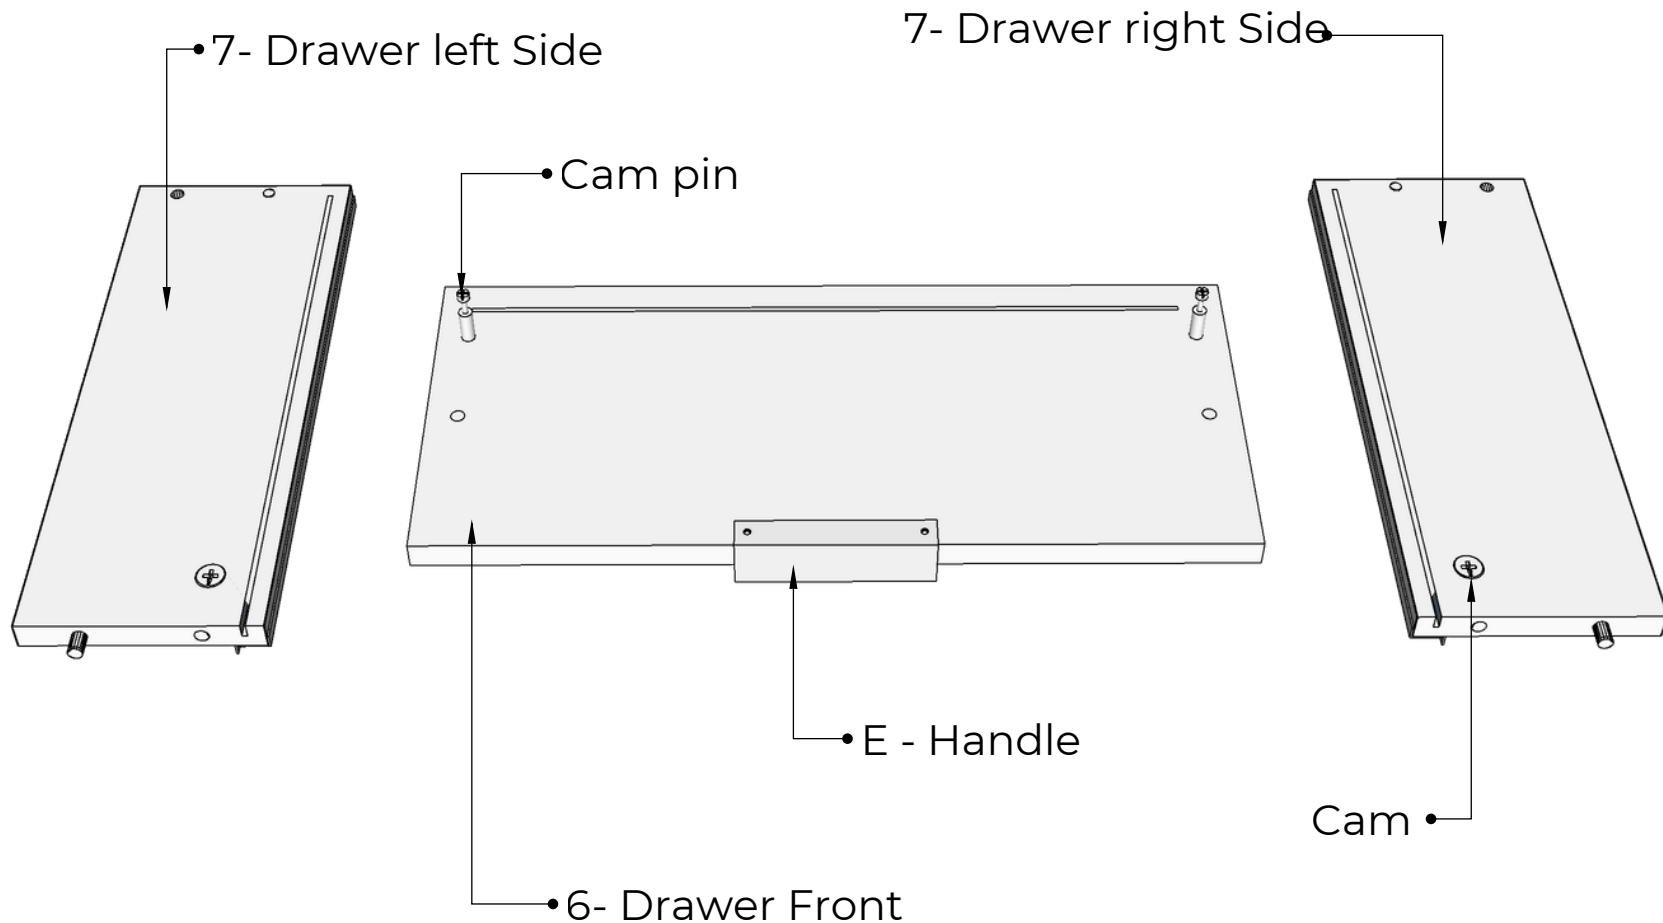


OLIVIA BEDSIDE TABLE DRAWER ASSEMBLY



ASSEMBLY INSTRUCTIONS

Step 2

Attach Drawer sides**(7)** to drawer rear**(8)** using confirmat screws**(A)**

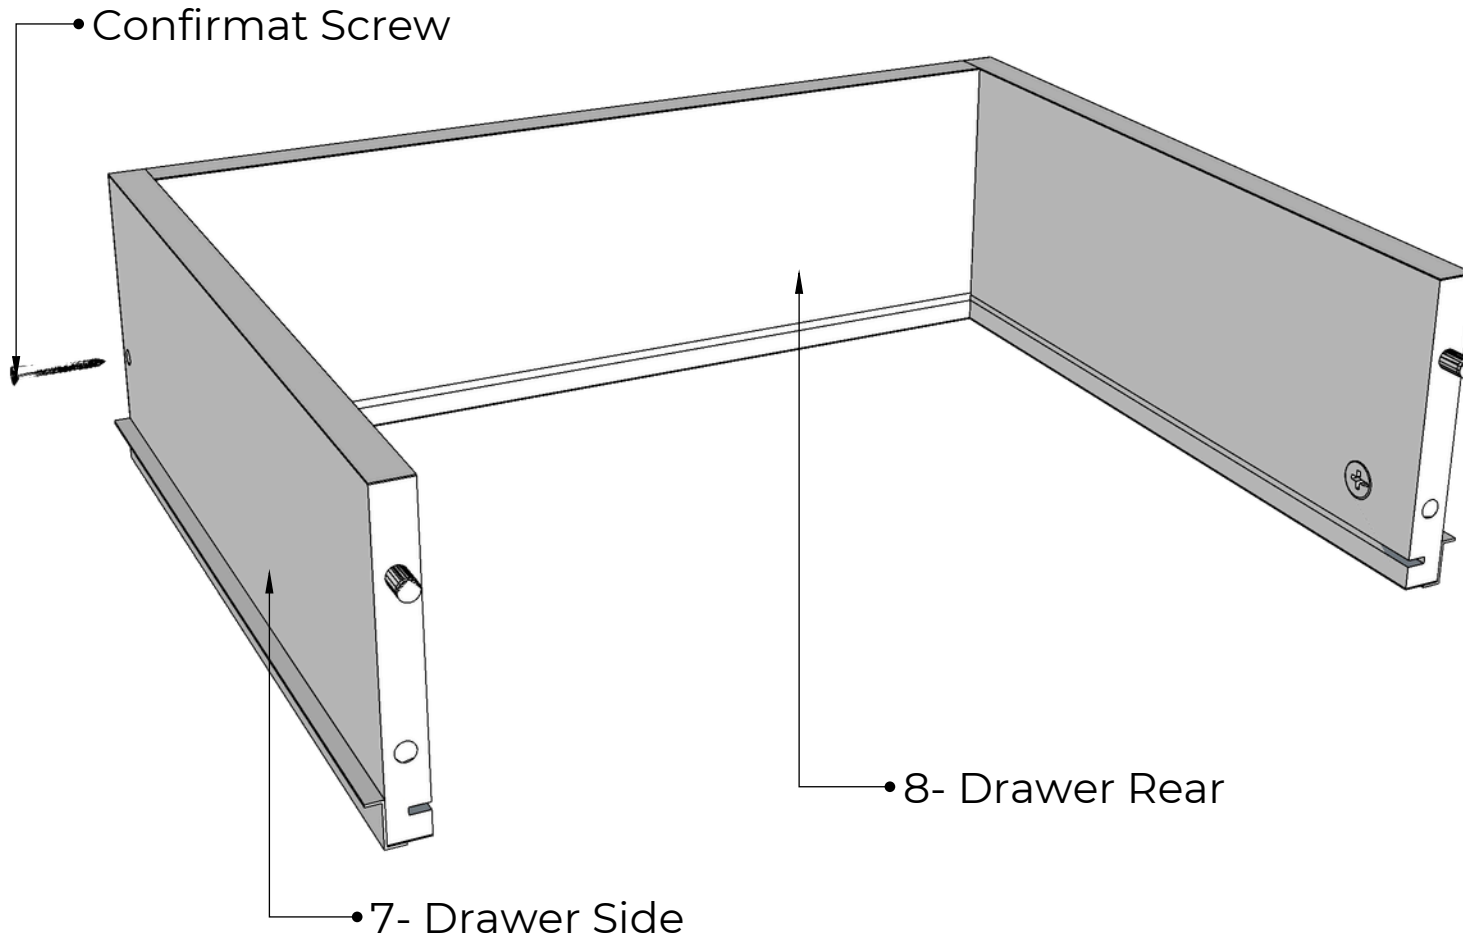


OLIVIA BEDSIDE TABLE DRAWER ASSEMBLY



ASSEMBLY INSTRUCTIONS

Step 3

Slide drawer bottom **(3)** into the grooves on the drawer sides **(7)** and drawer rear **(8)**

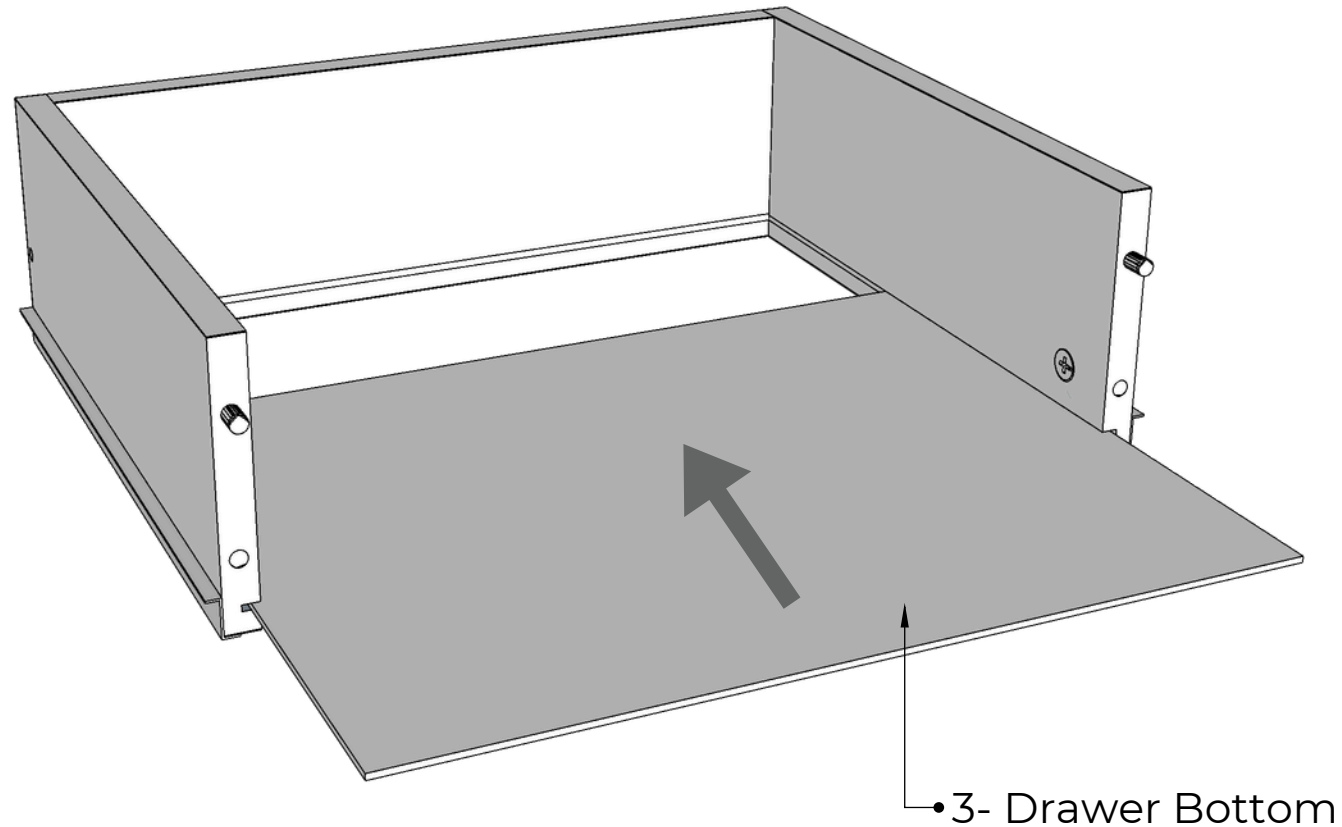

OLIVIA BEDSIDE TABLE DRAWER ASSEMBLY



ASSEMBLY INSTRUCTIONS

Step 4

Attach drawer front**(6)** to drawer assembly by sliding the cam pins**(C)** into the holes on the drawer sides**(7)** and tightening the cams**(B)**

Ensure that the drawer bottom fits into the groove in the drawer front**(6)**

