OLIVIA WARDROBE ASSEMBLY

Thank you for supporting us.

We believe design belongs toeveryone. From materials and processes to saftey testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create a beautifully space to feel comfortable in.

Here are a few assembly tips before you get started:



Make Time

The first step to all seamless assembly is taking a moment to carfully read through the instructions- you are already on your way to create a beautifully functional space!



Set The Mood

Put on your favourite playlist, order a pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You Did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging.

Creating your home

Time to assemble 30 min - People needed 1 - Difficultylevel6/10 - Toolsneeded - Phillips scredriver - allen key (supplied)

OLIVIA WARDROBE ASSEMBLY

Parts List

1.	Top x 1	**5.**	Shelf x 2	**9.**	Door x 3	**13.**	Drawer Side Left x 2
2.	Bottom x 1	**6.**	Bottom Shelf x 1	**10.**	Small Division x 1	**14.**	Drawer Side Left x 2
3.	Side Right x 1	**7.**	Cleat x 3	**11.**	Large Division x 1	**15.**	Drawer Rear x 2
4.	Side Left x 1	**8.**	Backing 3mm x 1	**12.**	Drawer Front x 2	**16.**	Drawer Bottom x 2

Hardware

A
Confirmat Screws
(use supplied Allen Key)



x 16

B
Cam



x 26

C
Cam Pins

x 26

D
Oval Tubing Brackets
4 x 16) Screws x8



x 2

E
Oval Tubing 628mm



x 1

F
Sofa Y- Leg Black
G-Screw (10 x16) x16



x 4

G
Overlay Hinge
18 xFerrari Screws (8 x 16)



x 3

H
Inset Hinge
36x Ferrari Screws (8 x 16)



x 6

I
Pull Handle Gold
8x Screws 4 x 16



x 4

J
Magnetic Catch
4x Screws (4 x 20)



x 2

K
Cover Stickers



x 6


L
Saftey Bracket
Hilti x4
8x 16 Screw x4



x 2



WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake.
Accordingly, we recommend that all furniture is anchored to a wall.




Saftey Bracket

Phillips screwdrivers required. For quicker assembly, we recommend the use of a power drill on a low-speed setting.


Step 1

Insert and tighten cam pins**(C)** into small holes in left side**(4)**, right side**(3)** and large division**(11)**

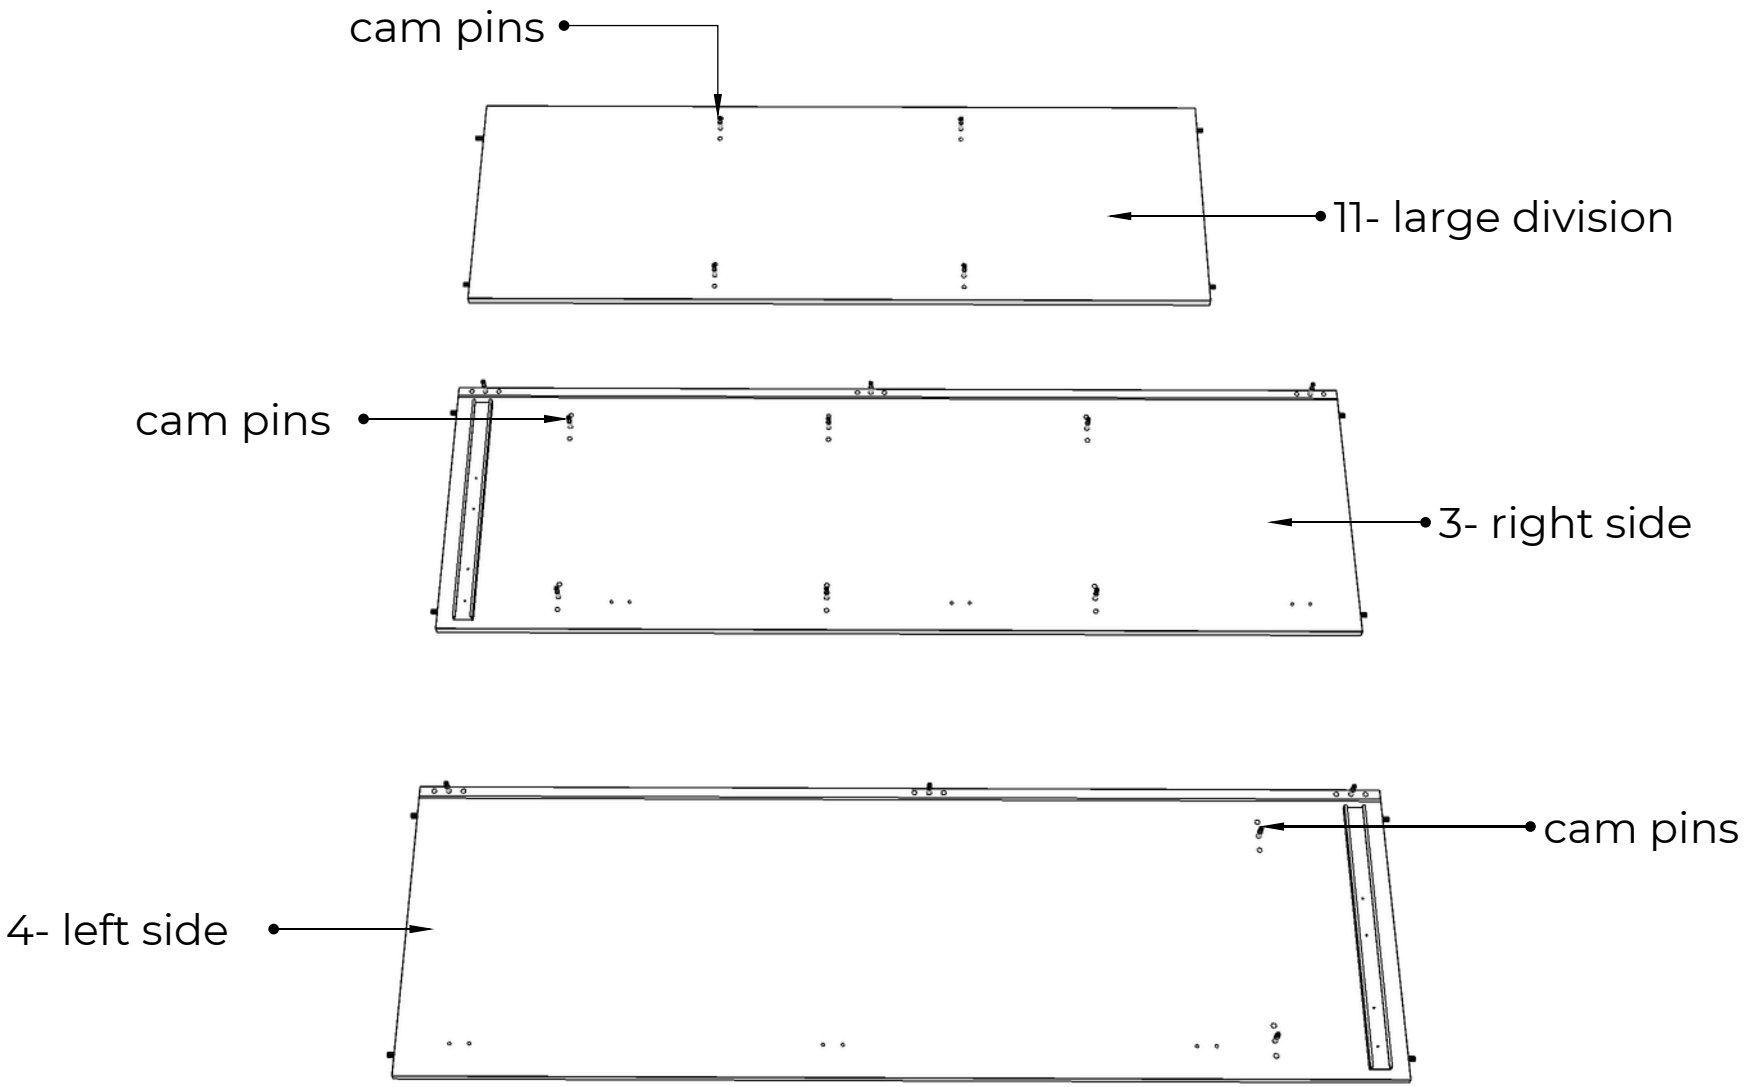


Step 2

Insert cams**(B)** into big holes in bottom shelf**(6)**, shelves**(5)** and cleats**(7)** ensuring arrow on cam**(B)** faces nearest edge

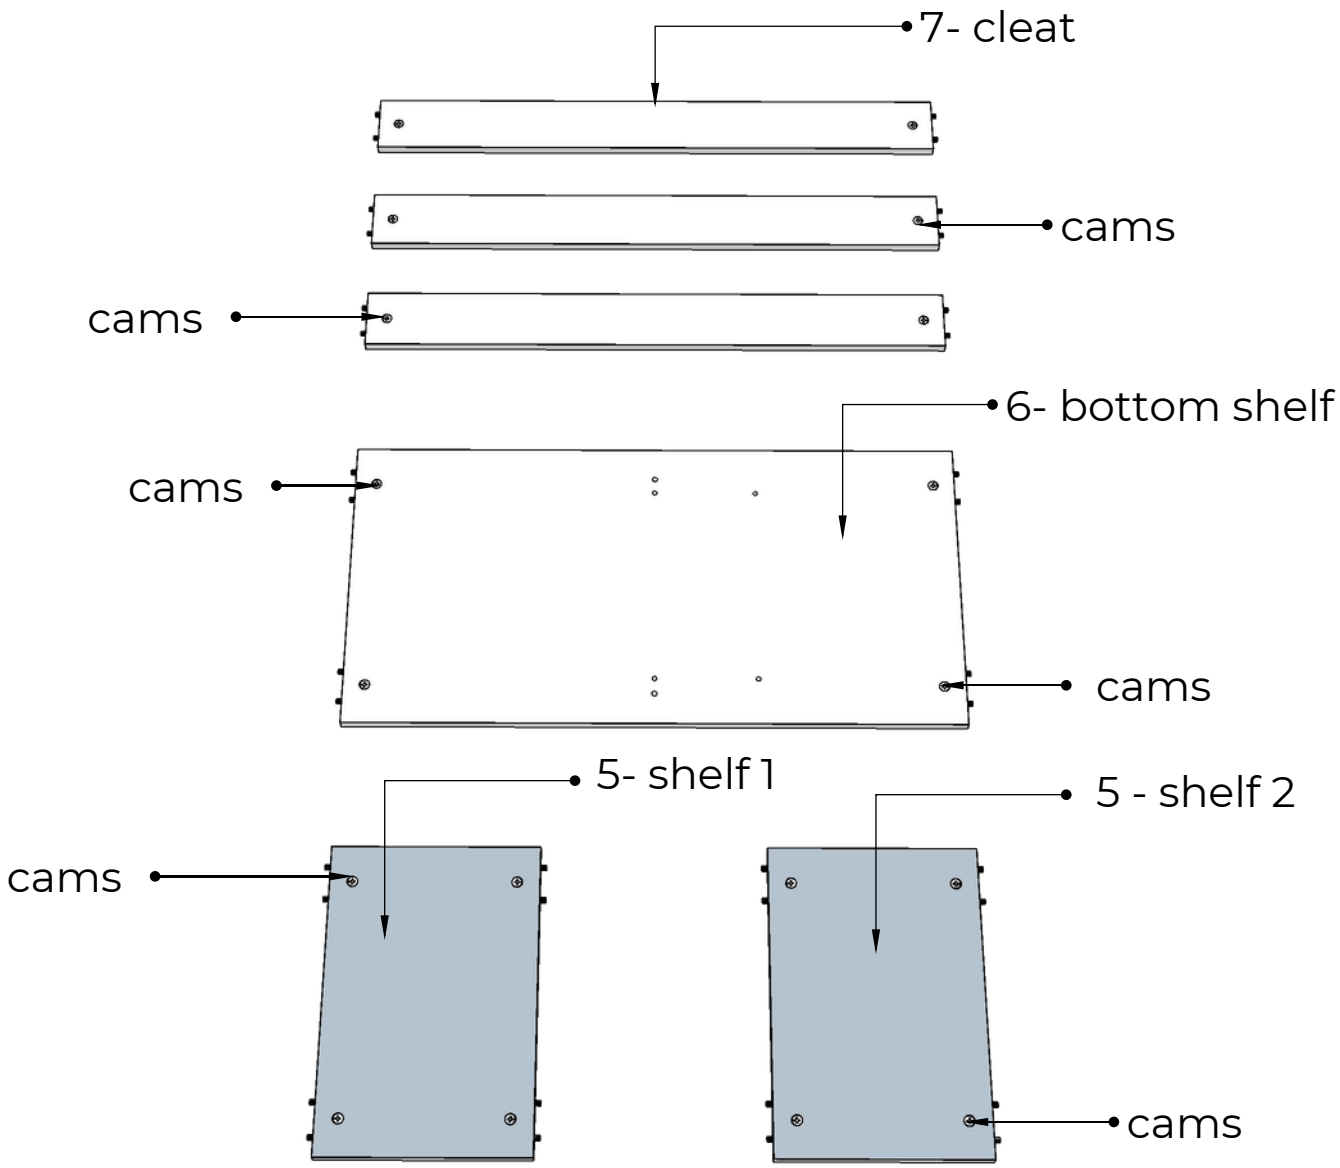


Step 3

Attach the bottom shelf**(6)** and the 3x cleats**(7)** to left side**(4)** by sliding the cam pins**(C)** into the holes in the edge of the bottom shelf**(6)** and cleats**(7)**. Tighten cams in bottom shelf**(6)** and the cleats**(7)**

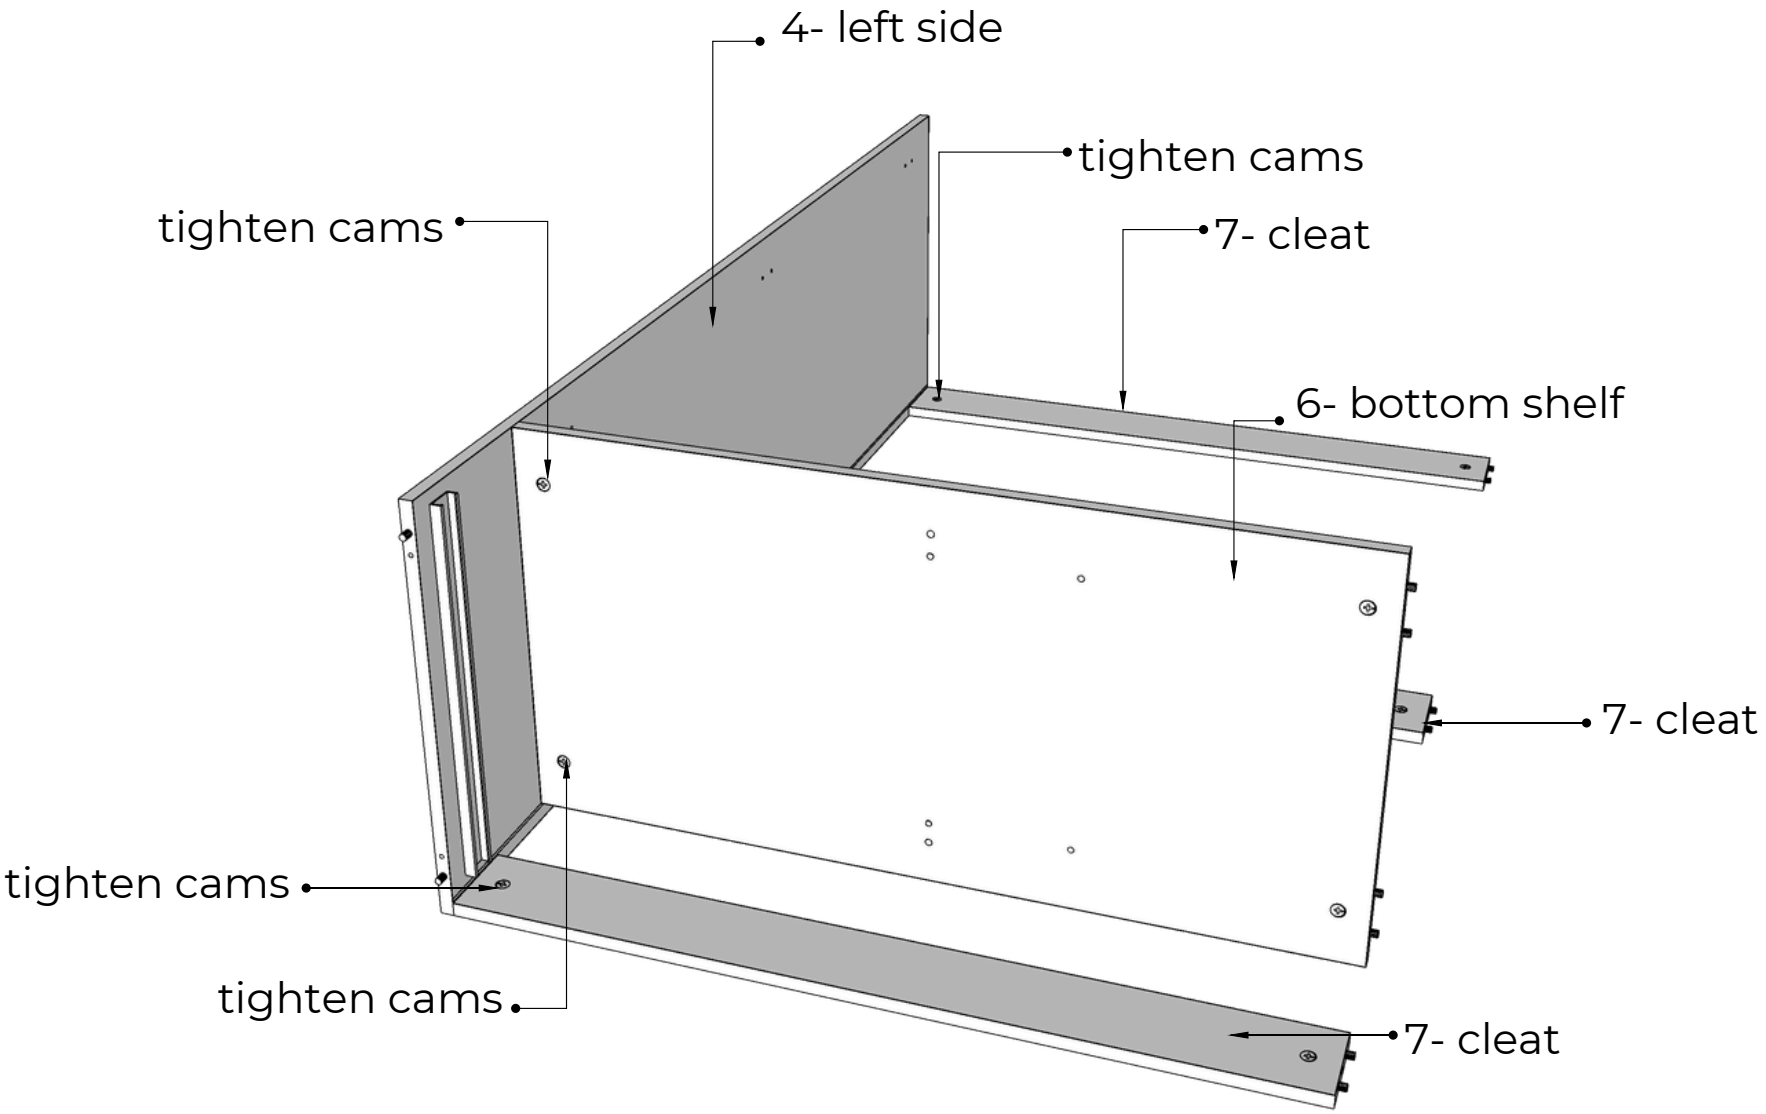


Step 4

Align the dowels in the small division**(10)** with the holes in the bottom shelf**(6)** and attach the small division**(10)** to the bottom with confirmat screws**(A)** through the bottom shelf**(6)**

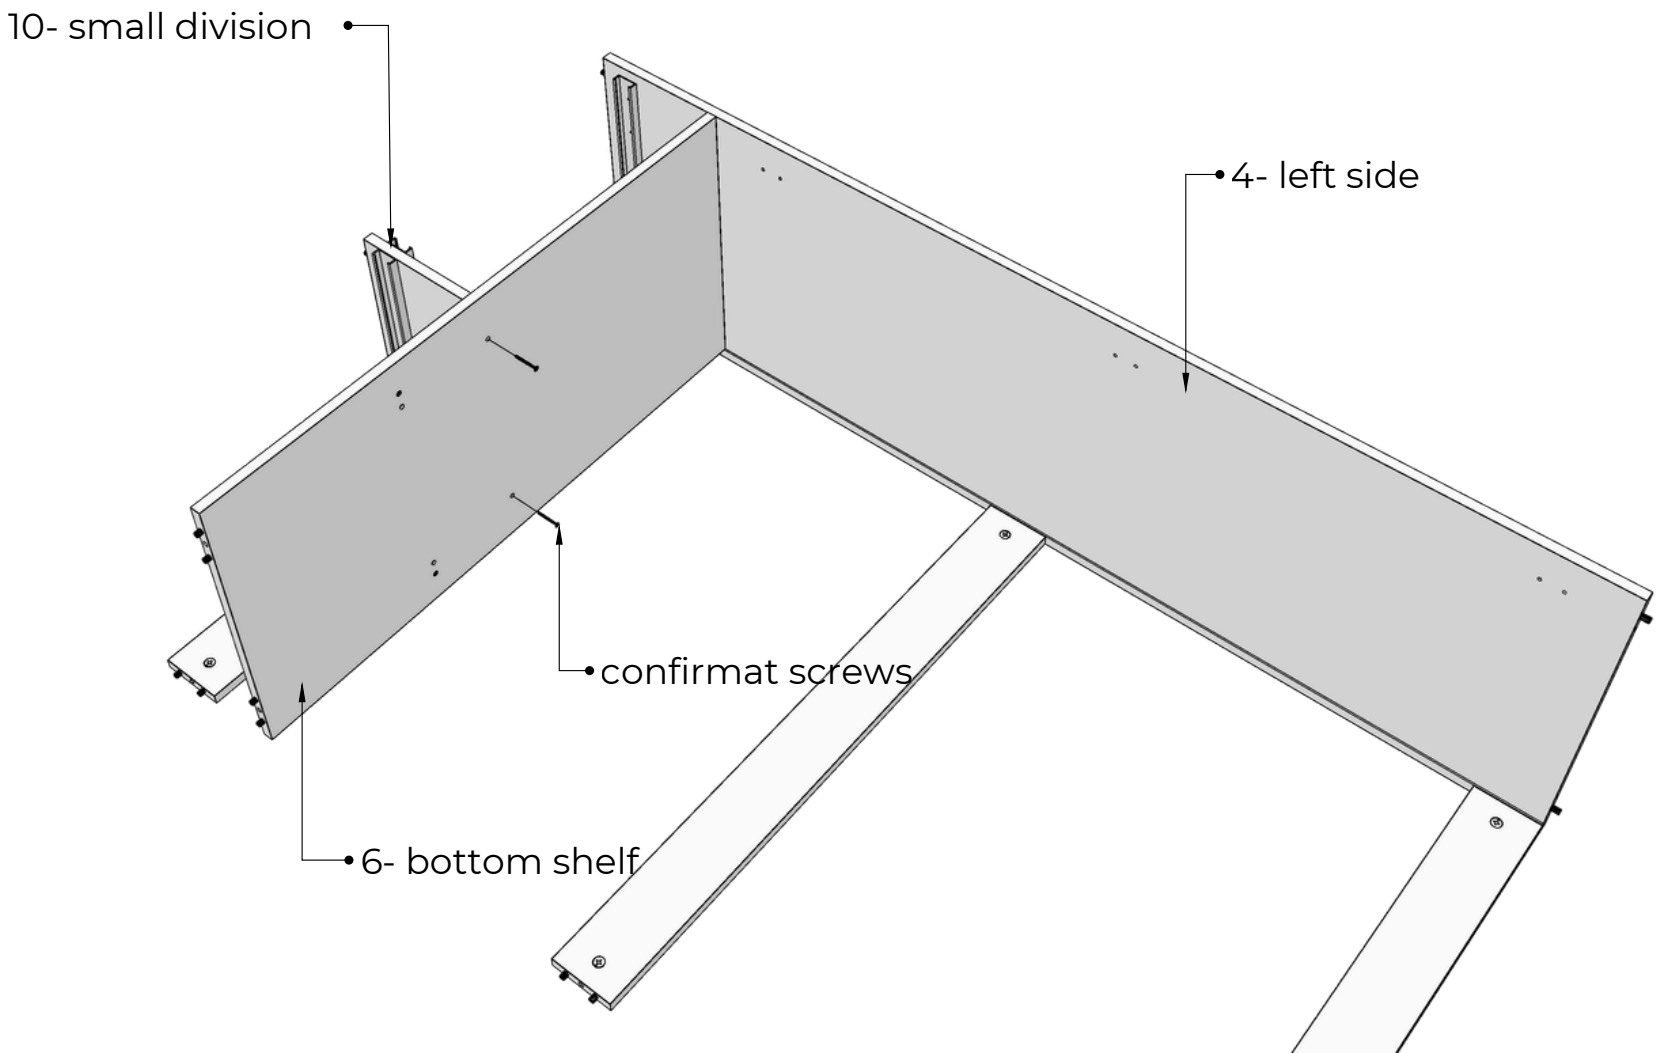


Step 5

Align the dowels in the large division**(11)** with the holes in the bottom shelf**(6)** and attach the large division**(11)** to the bottom with confirmat screws**(A)** through the bottom shelf**(A)**

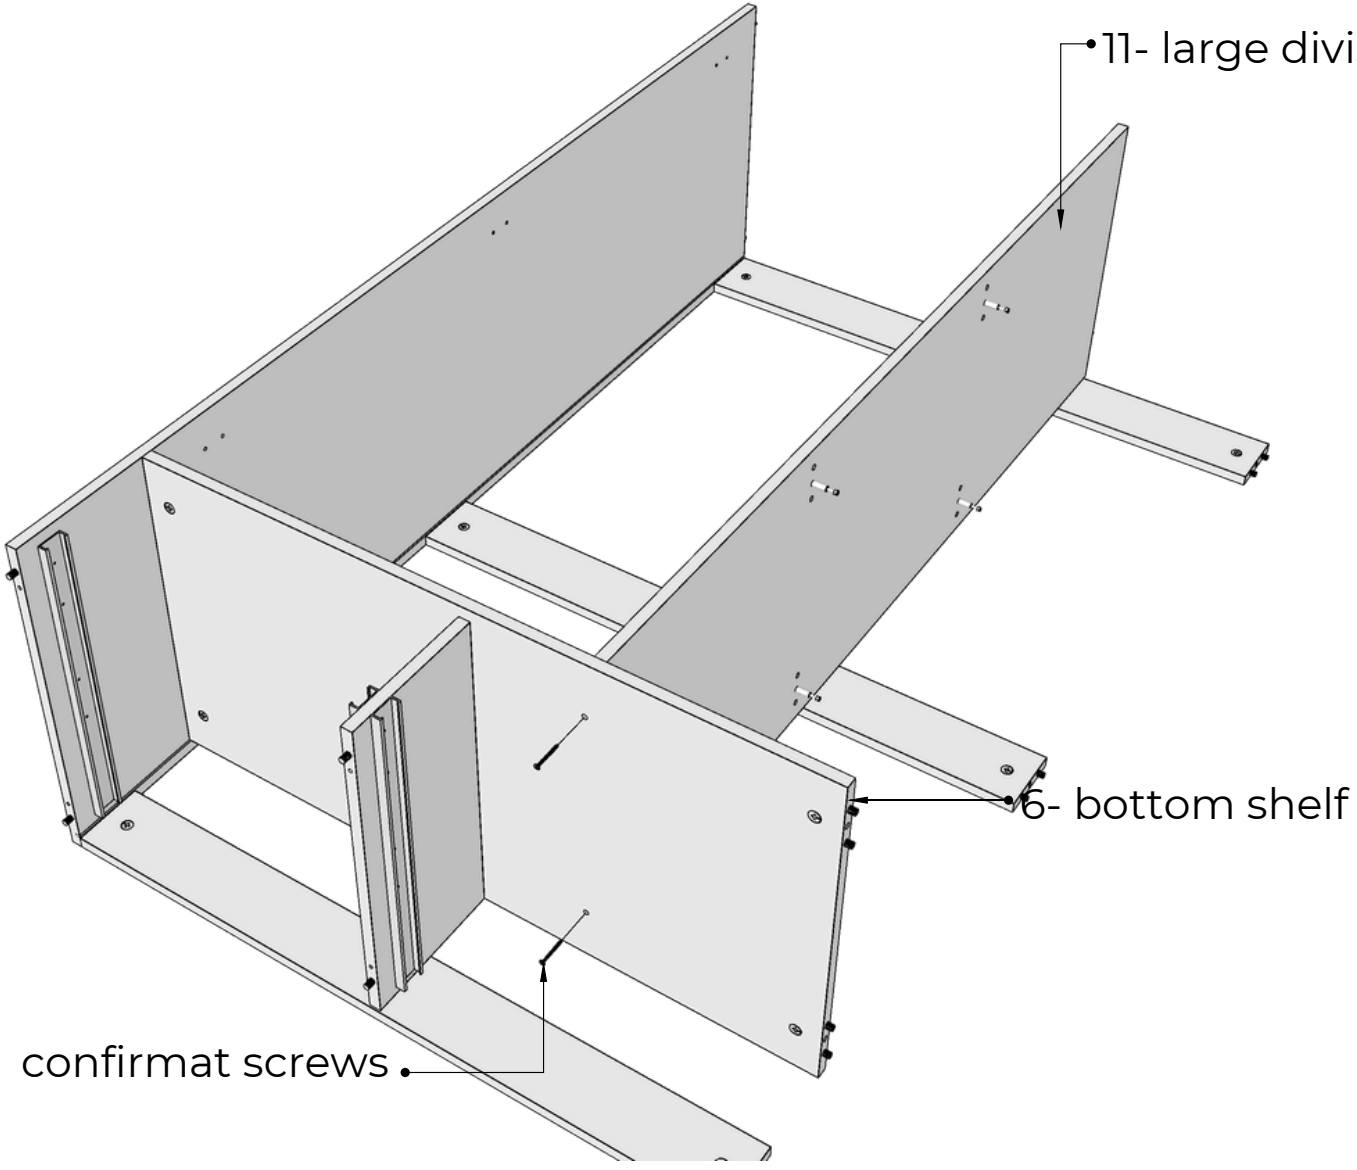


Step 6

Attach the shelves**(5)** to large division**(11)** by sliding the cam pins**(C)** into the holes in the edge of the shelves**(5)**. Tighten cams**(C)** in shelves**(5)**

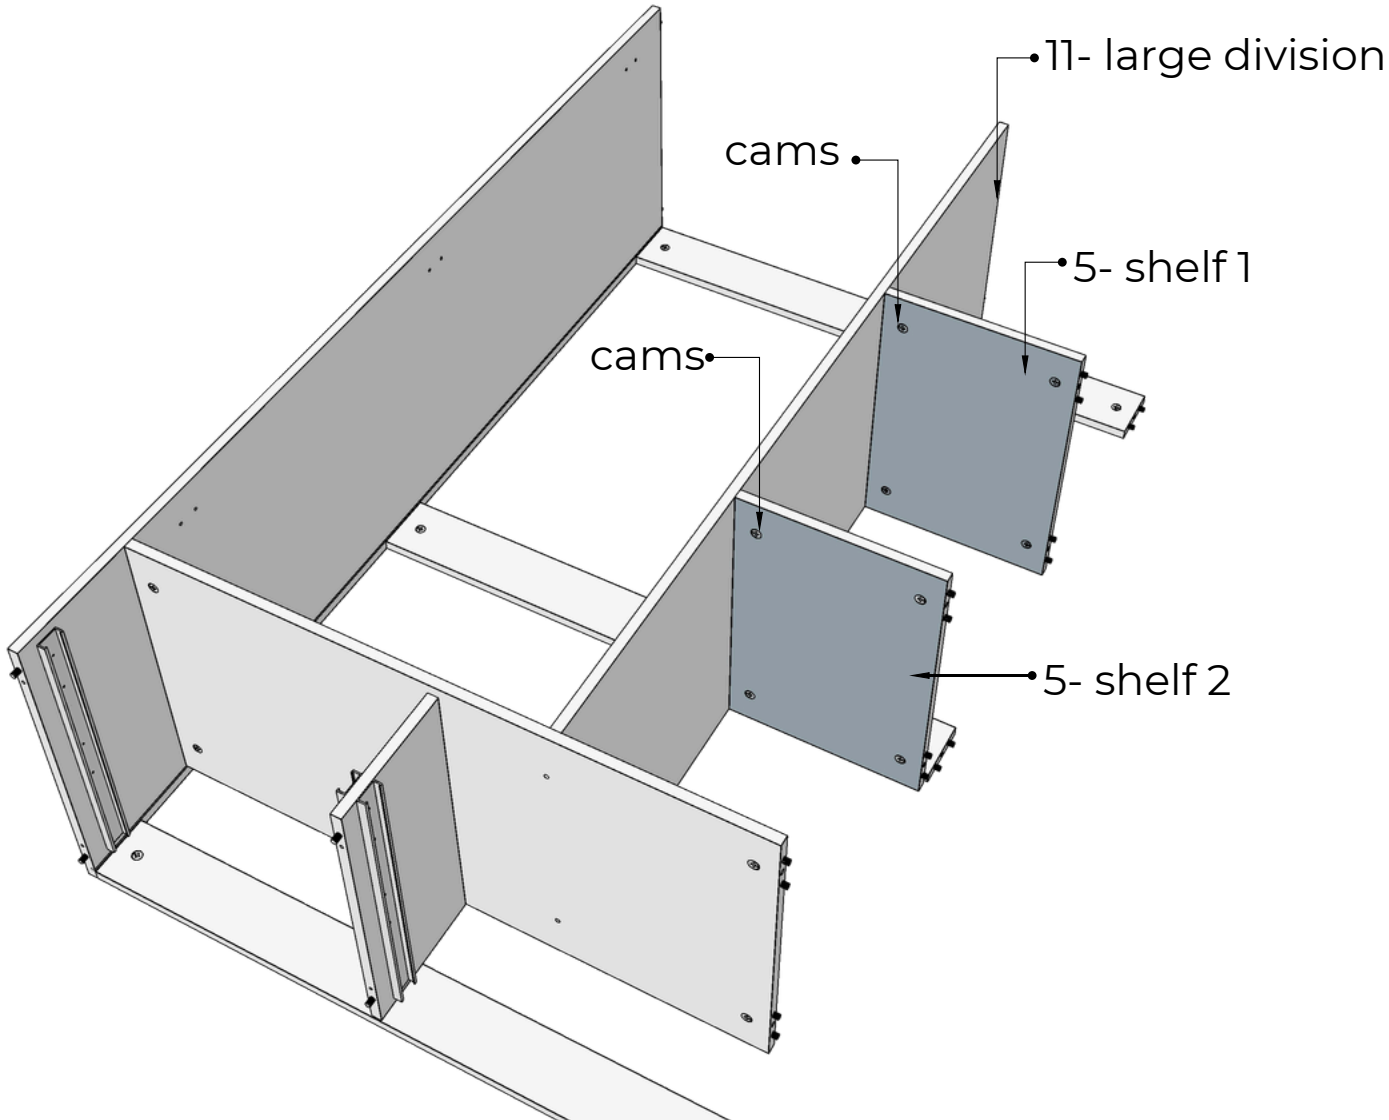


Step 7

attach the right side**(3)** to the shelves**(5)**, bottom shelf**(6)** and cleats**(7)**
By sliding the cam pins**(C)** into the holes in the edges
of the shelves**(5)** and cleats**(7)**. Tighten cams**(C)** in shelves**(5)**, bottom shelf**(6)** and cleats**(7)**

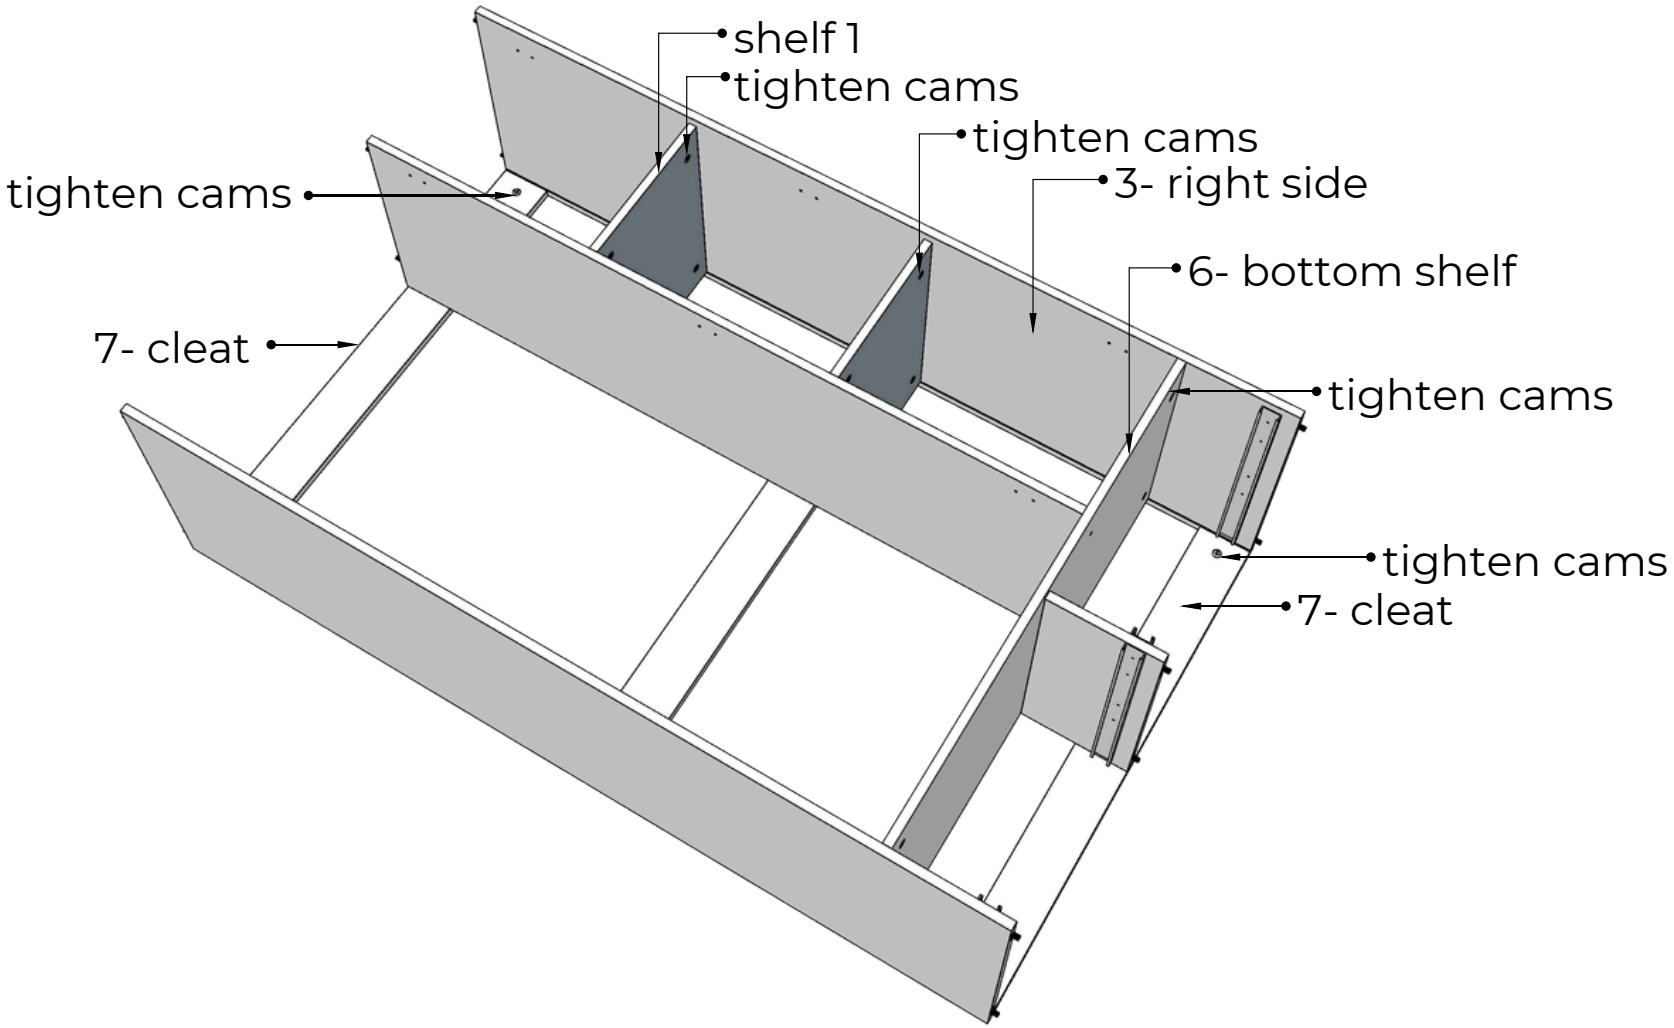


Step 8

Position bottom**(2)** over assembly so that all the dowel holes line up Fasten with confirmat screws**(A)** into the sides**(1,2)** and small division**(10)**

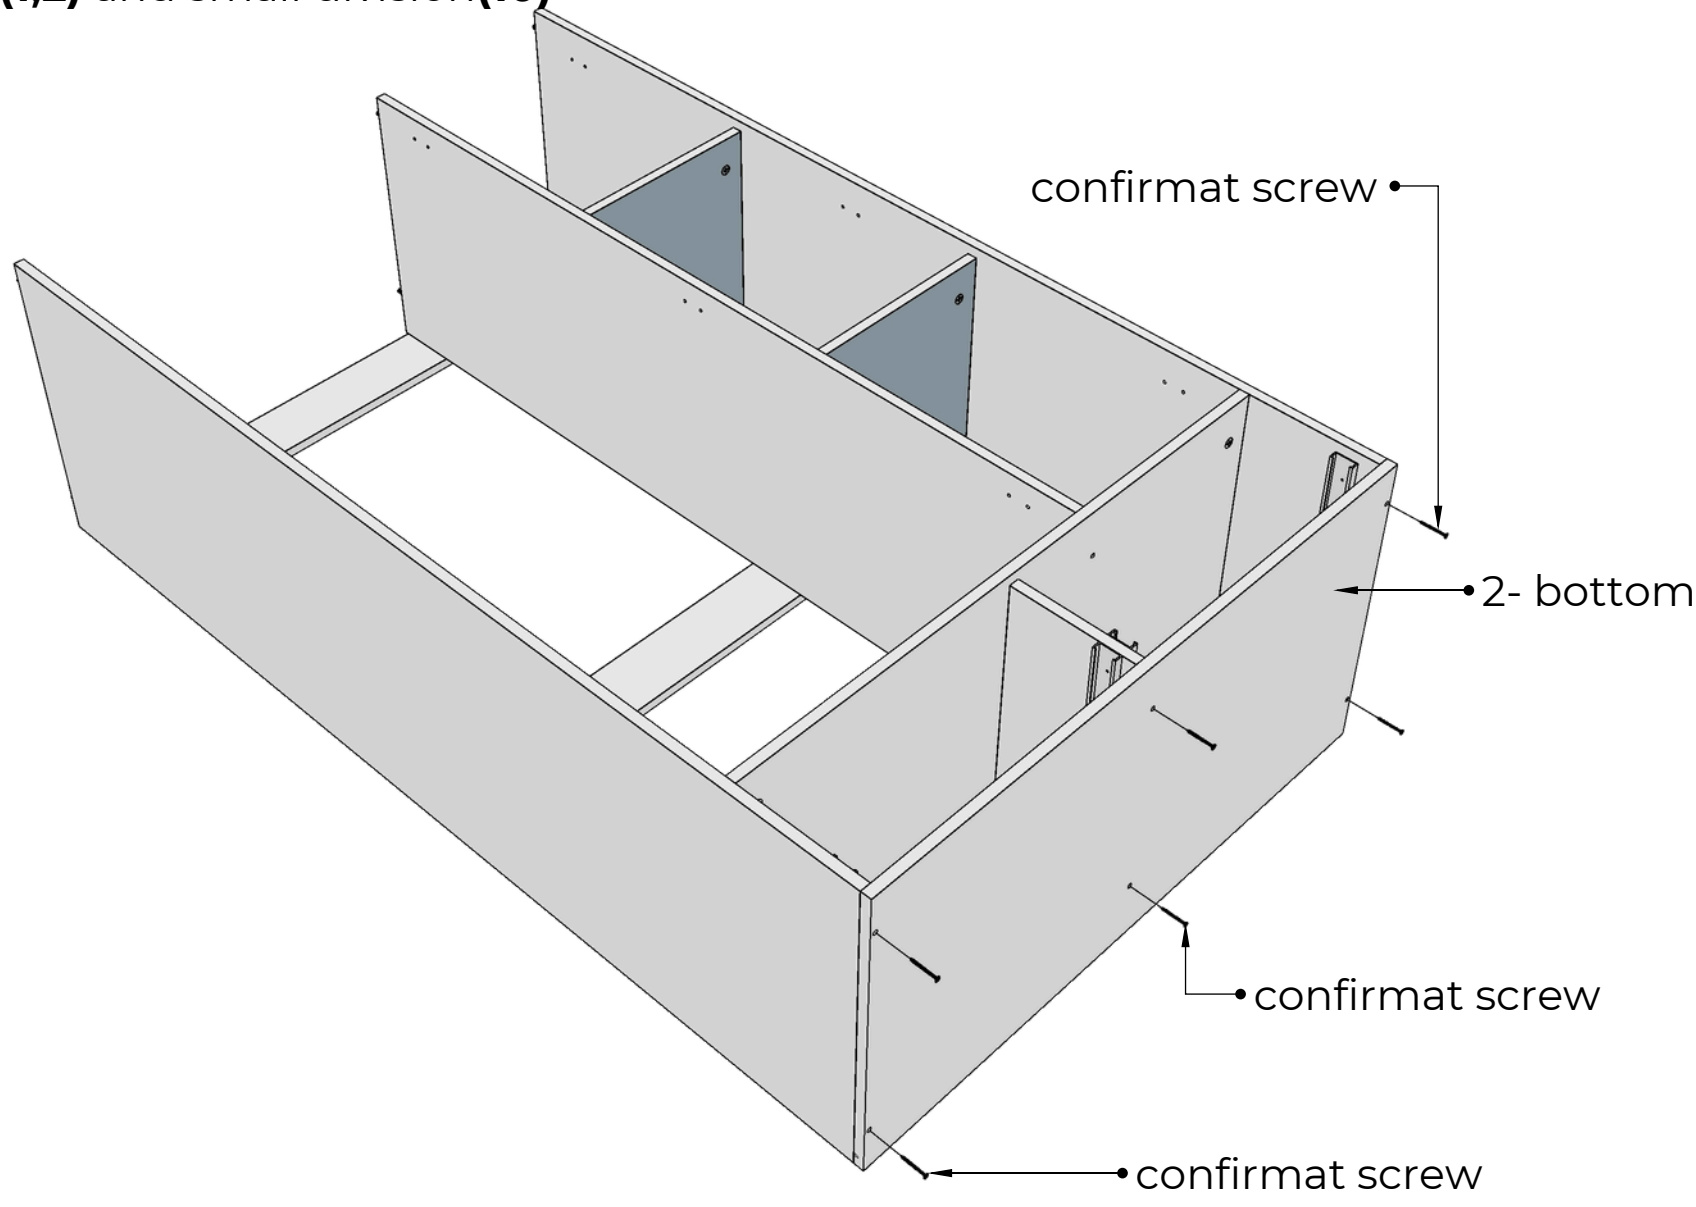


Step 9

Position legs**(F)** over pre drilled holes in bottom**(2)** and fasten with supplied screws

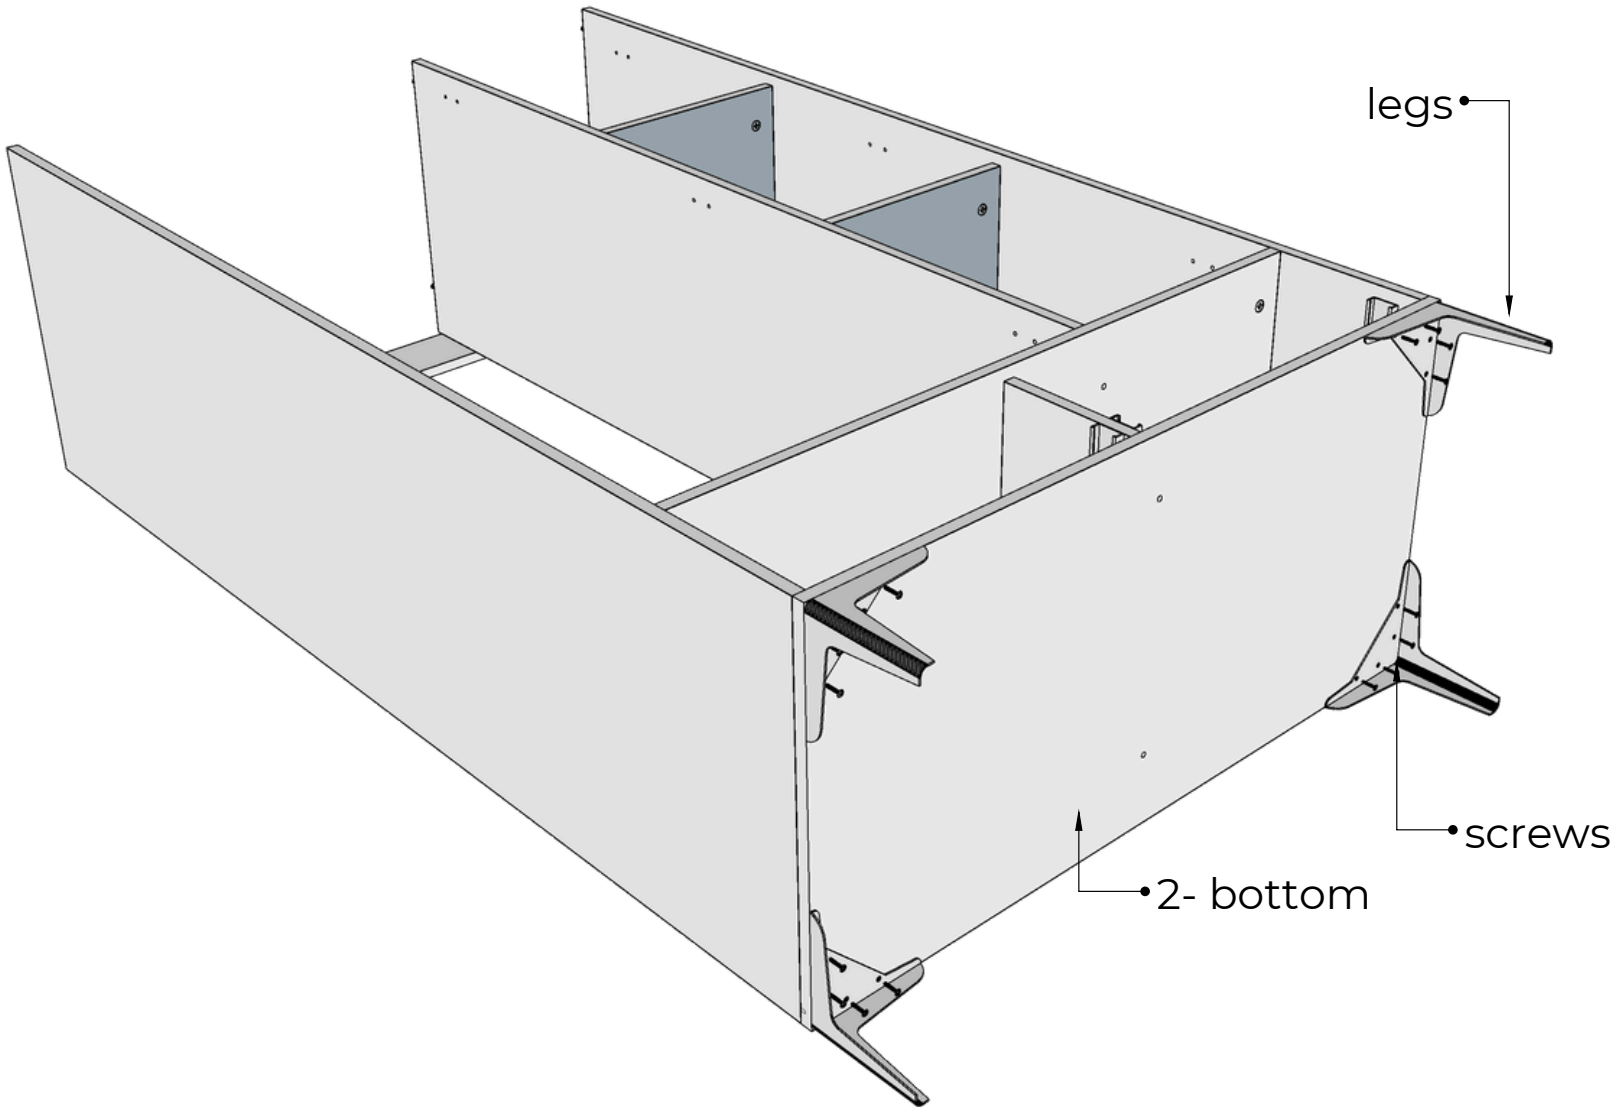


Step 10

Slide in cabinet backing**(8)** into grooves on sides**(3,4)** ensuring it also fits into the groove in the bottom**(2)**

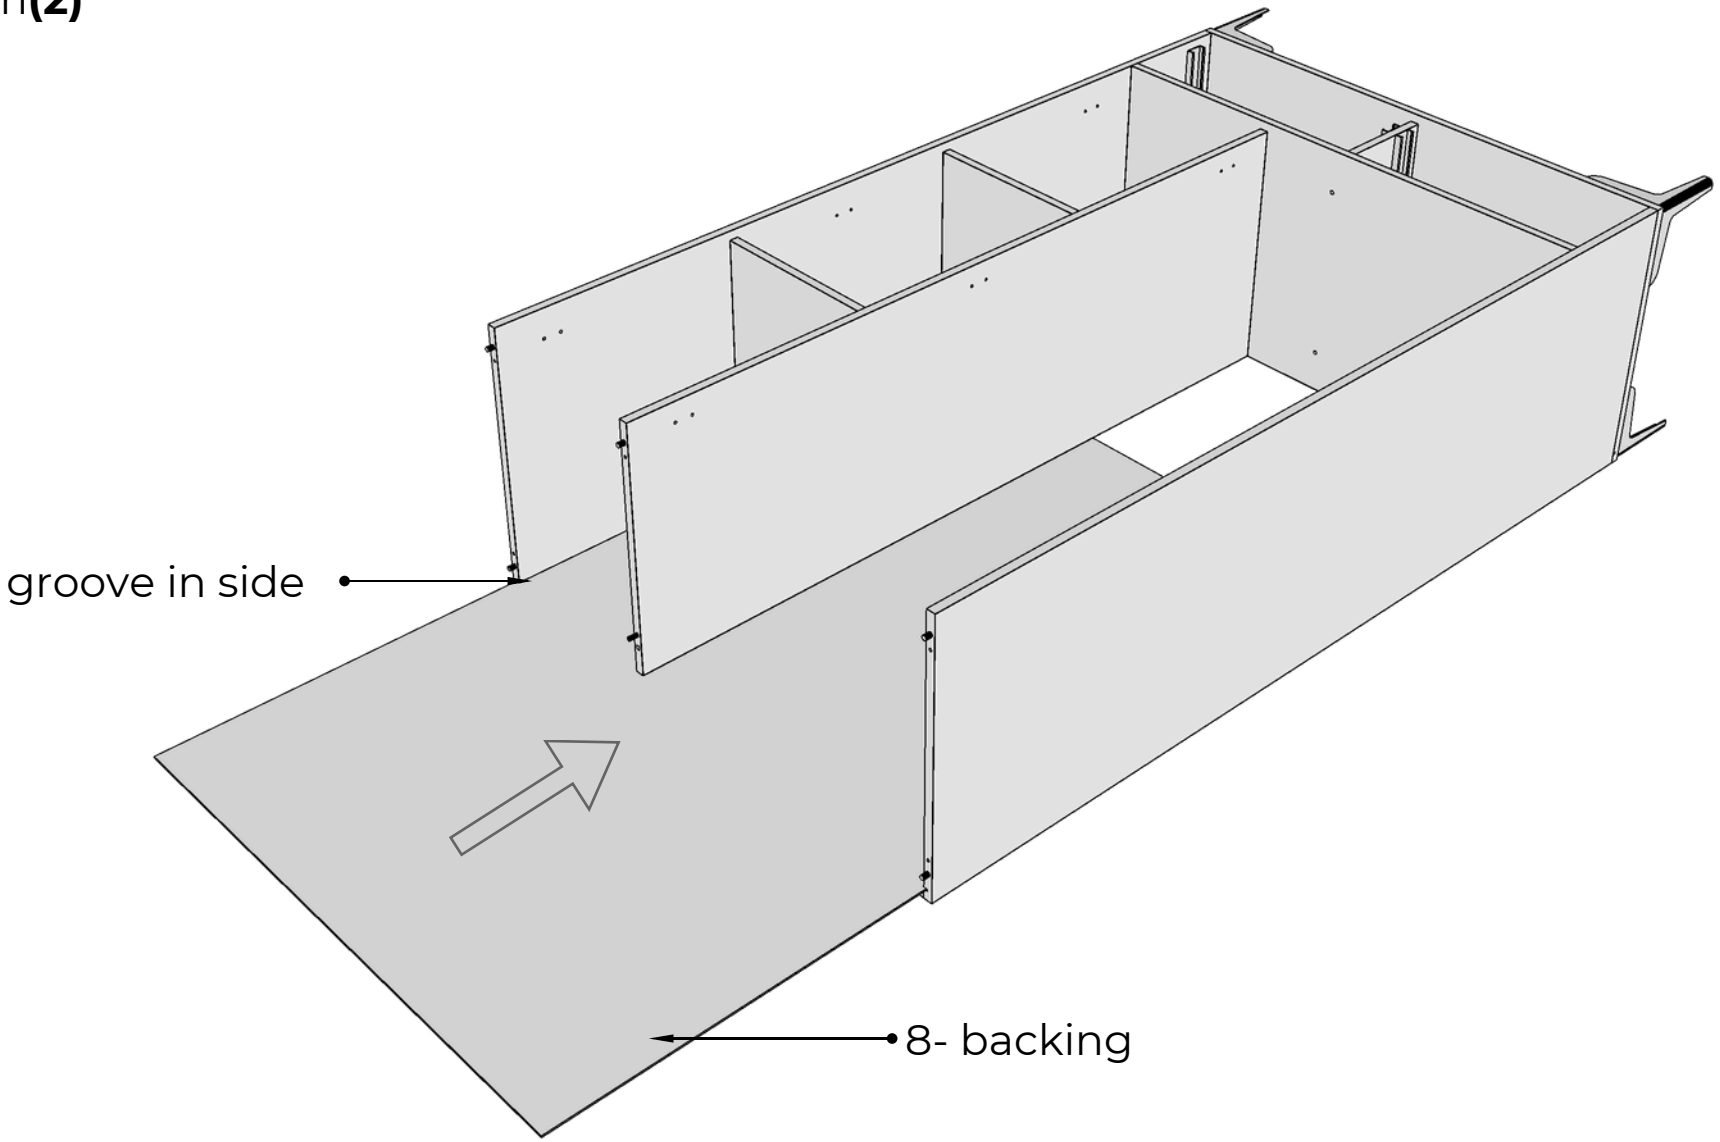


Step 11

Position top**(1)** over assembly so that all the dowel holes line up as well as the backing**(8)** into the groove in the top**(1)**
Fasten with confirmat screws**(A)** into the sides**(3,4)** and large division**(11)**

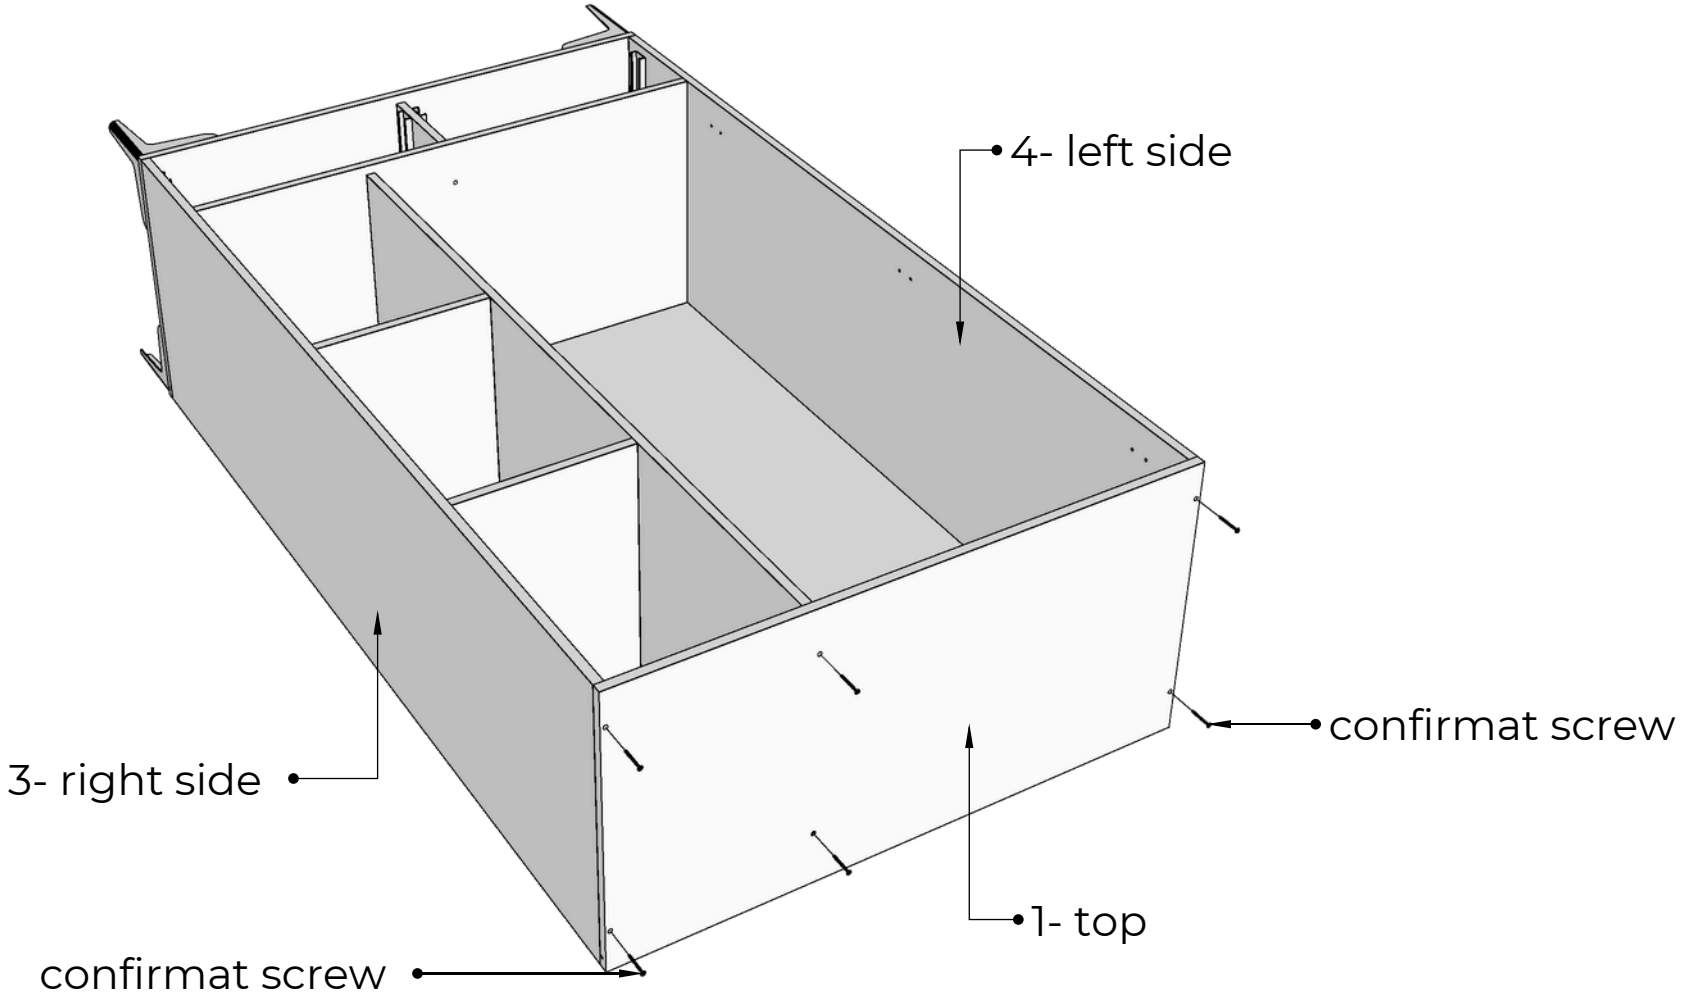


Step 12

Attach oval rail brackets**(D)** to side**(3,4)** and large division**(11)** with supplied screws and lower the hanging rail**(E)** into the brackets**(D)**

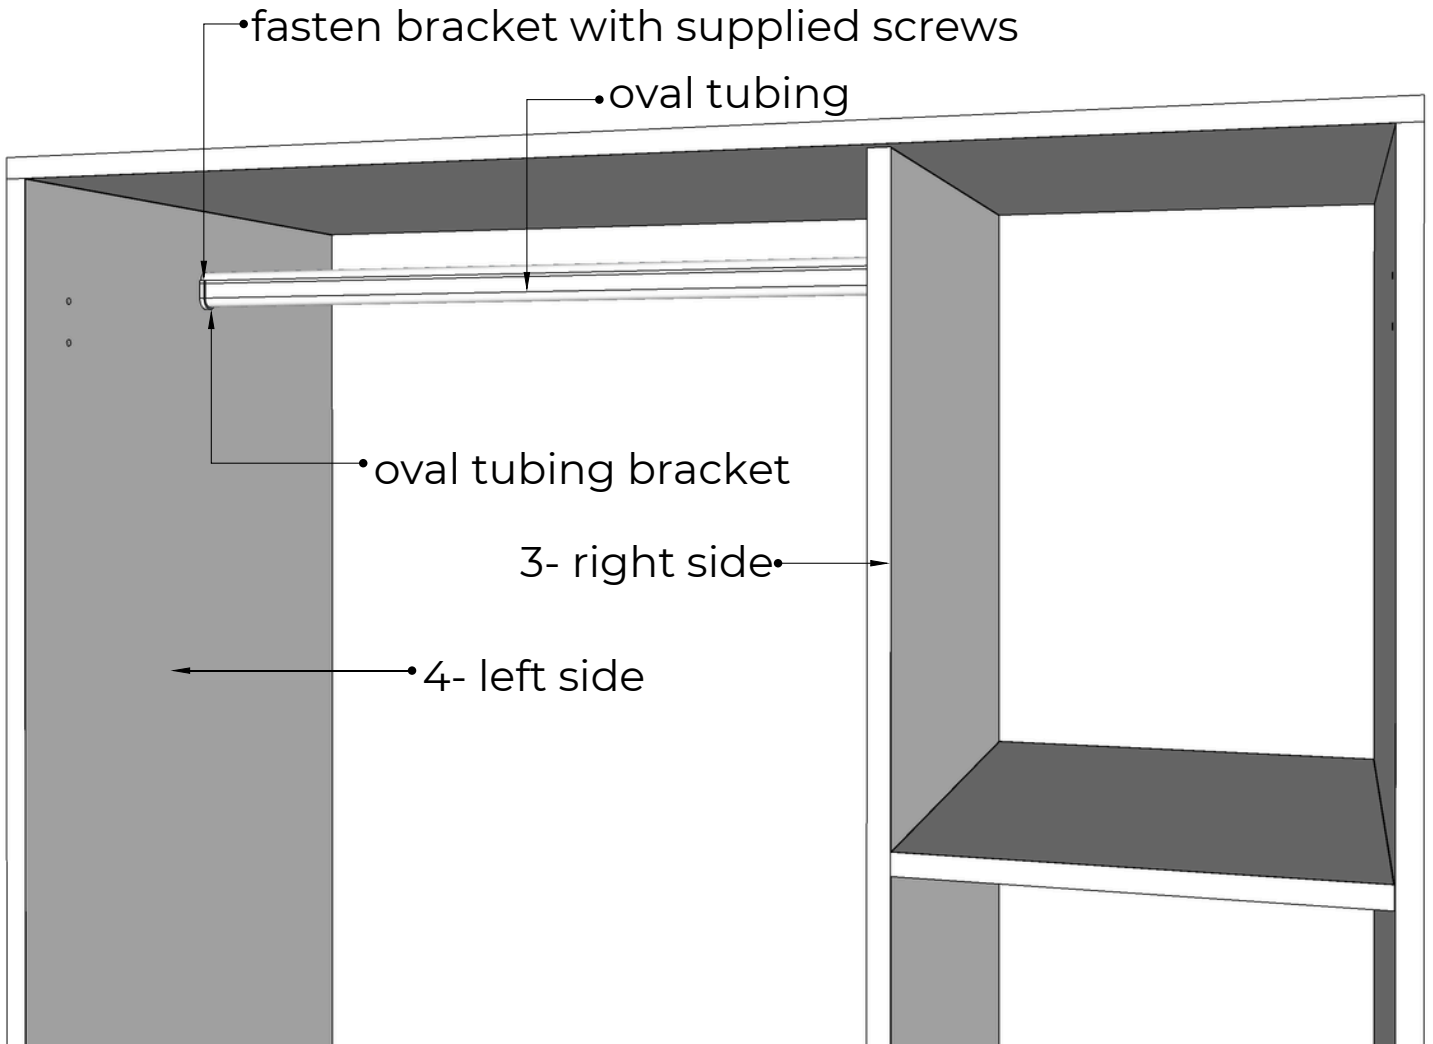


Step 13

Attach hinges**(G,H)** to doors**(9)** with supplied silver screws
Attach handle**(I)** to door**(9)** with supplied screws taking note that only 2 doors**(9)** get handles**(I)**
Pay attention to the different Hinges**(G,H)** on the middle door**(9)**

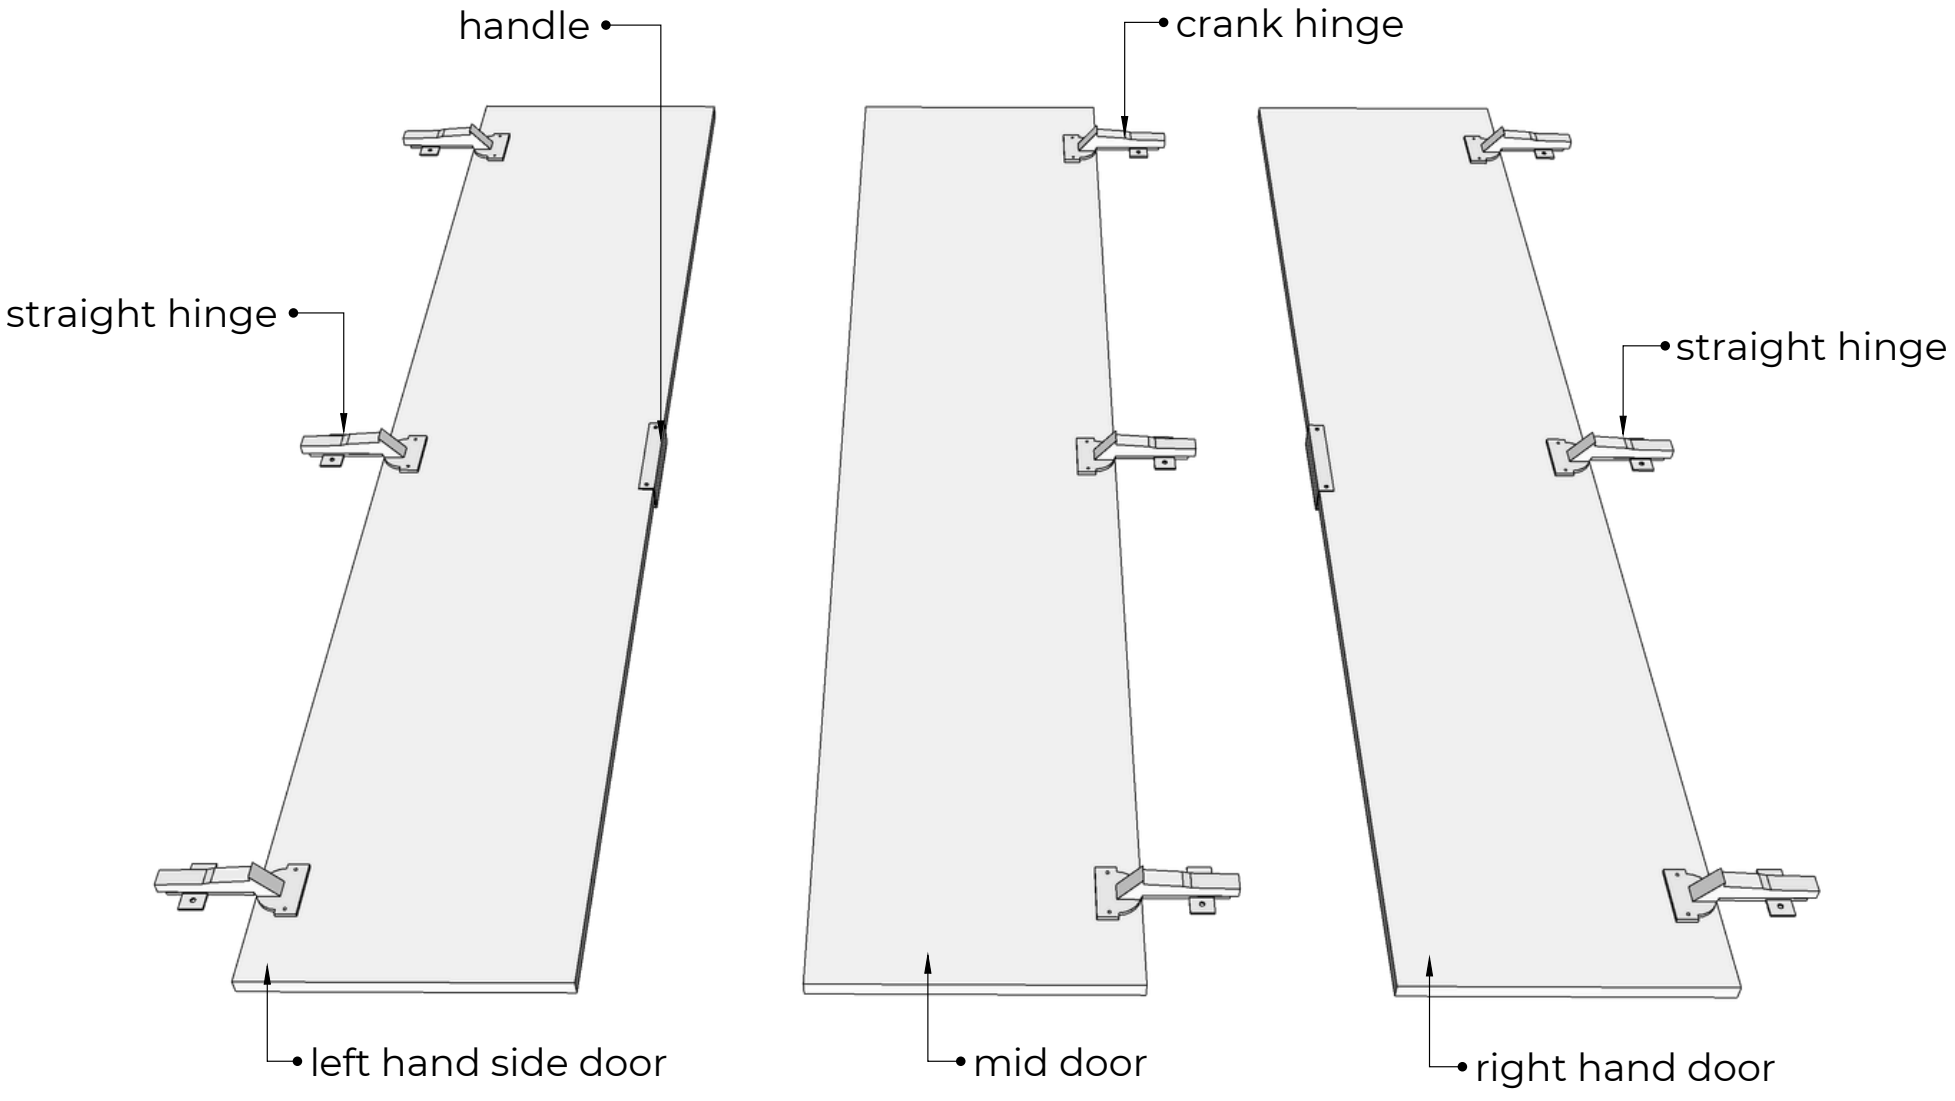


Step 14

Attach doors**(9)** to cabinet sides**(3,4)** and division by aligning it with the pre-drilled holes and fastening with supplied screws

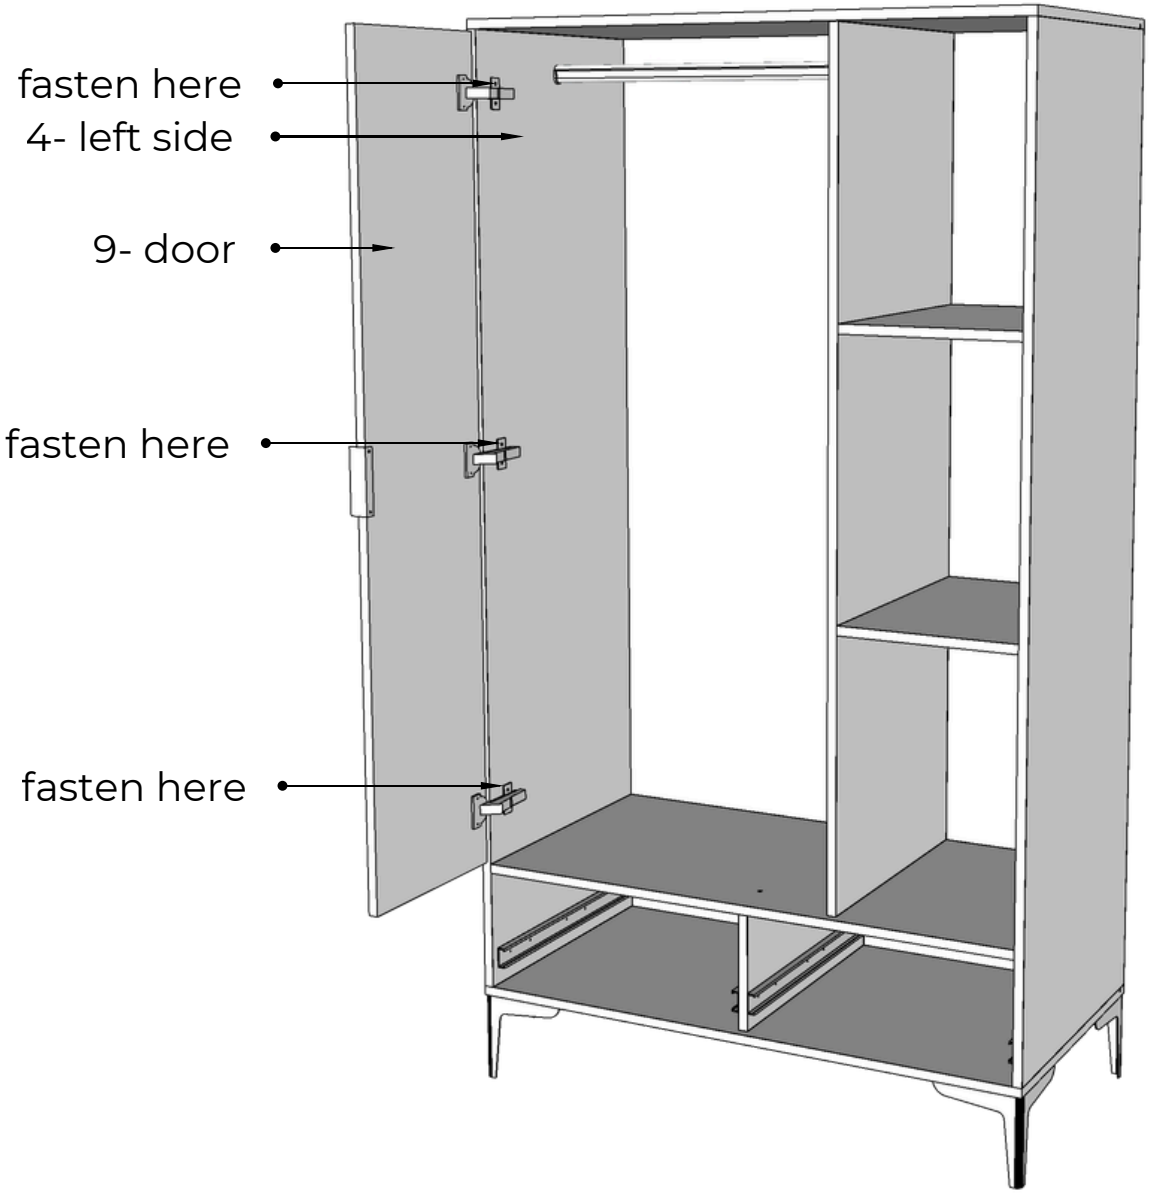


Step 15

Slide Drawer into main body by aligning the metal mountings and pressing it in slowly. It may seem tight while you press it in. After it is fully inserted it will move freely.

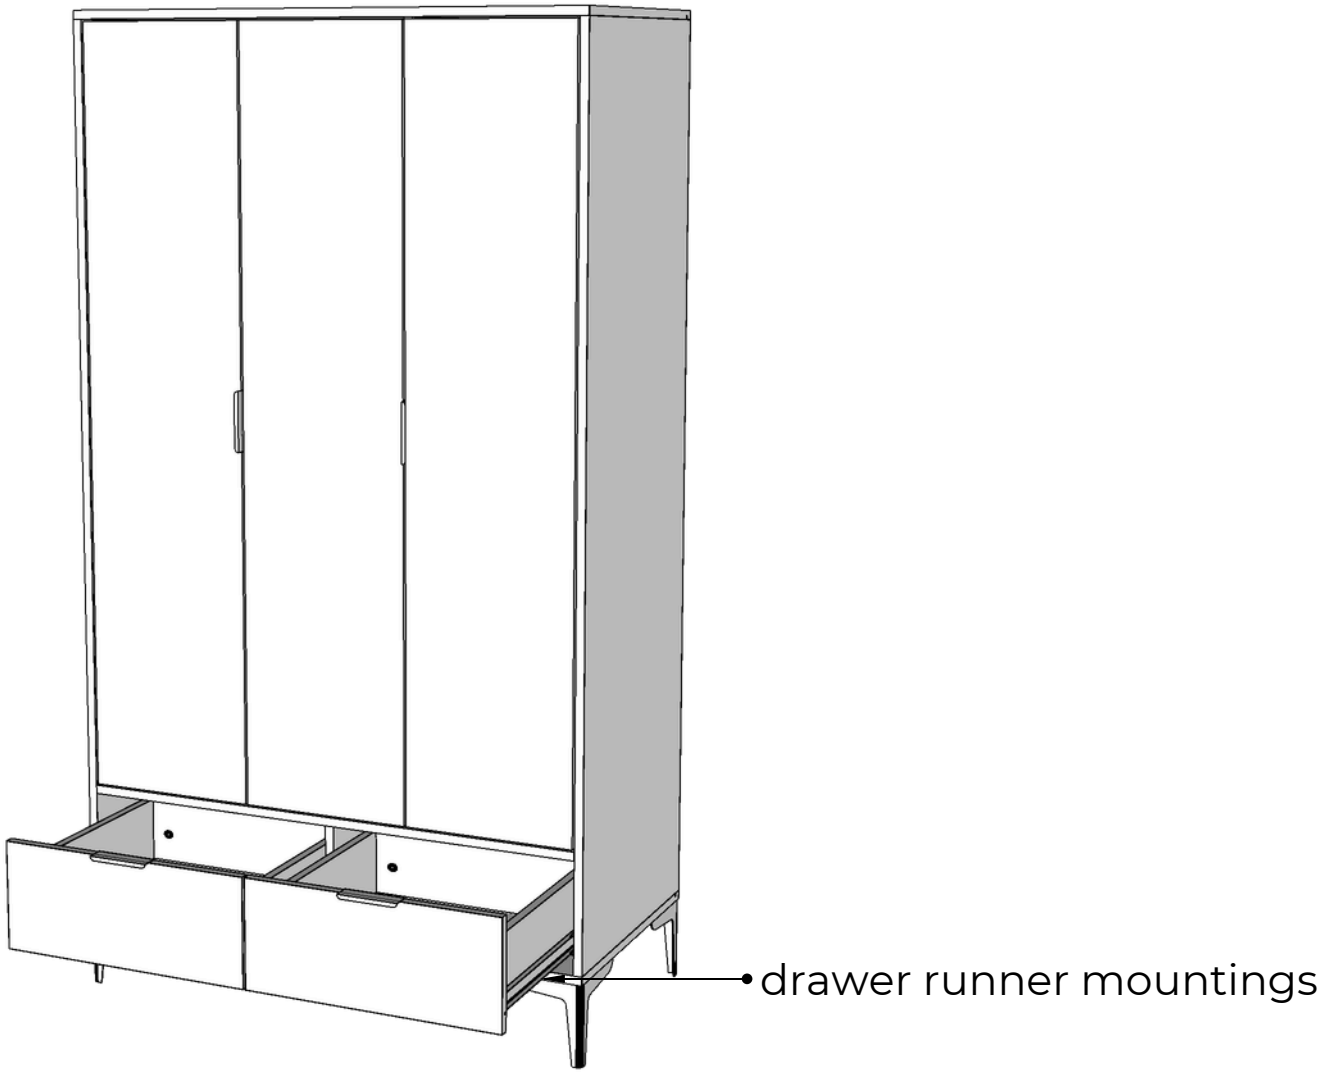

OLIVIA WARDROBE CABINET ASSEMBLY


Assembled unit

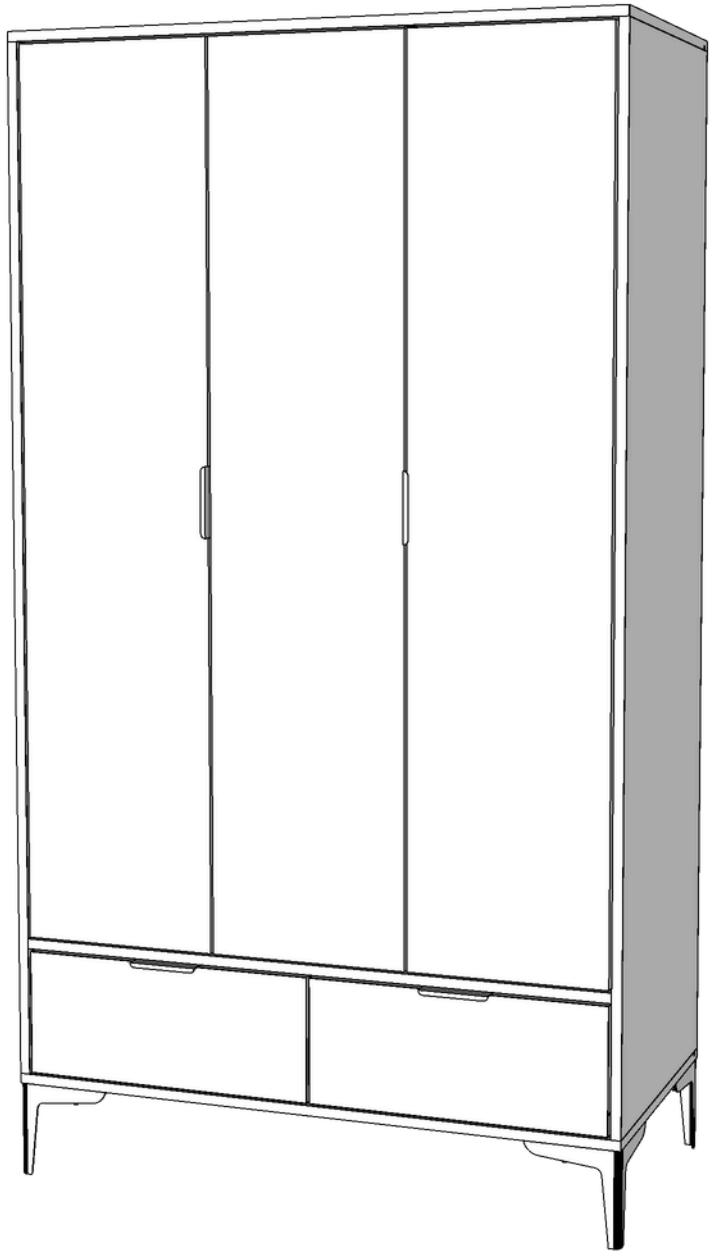

OLIVIA WARDROBE DRAWER ASSEMBLY


Step 1

Insert cam pins**(C)** into drawer front**(12)** and drawer sides**(13,14)**
attach handle**(I)** to the back of the drawer front**(12)** with supplied screws

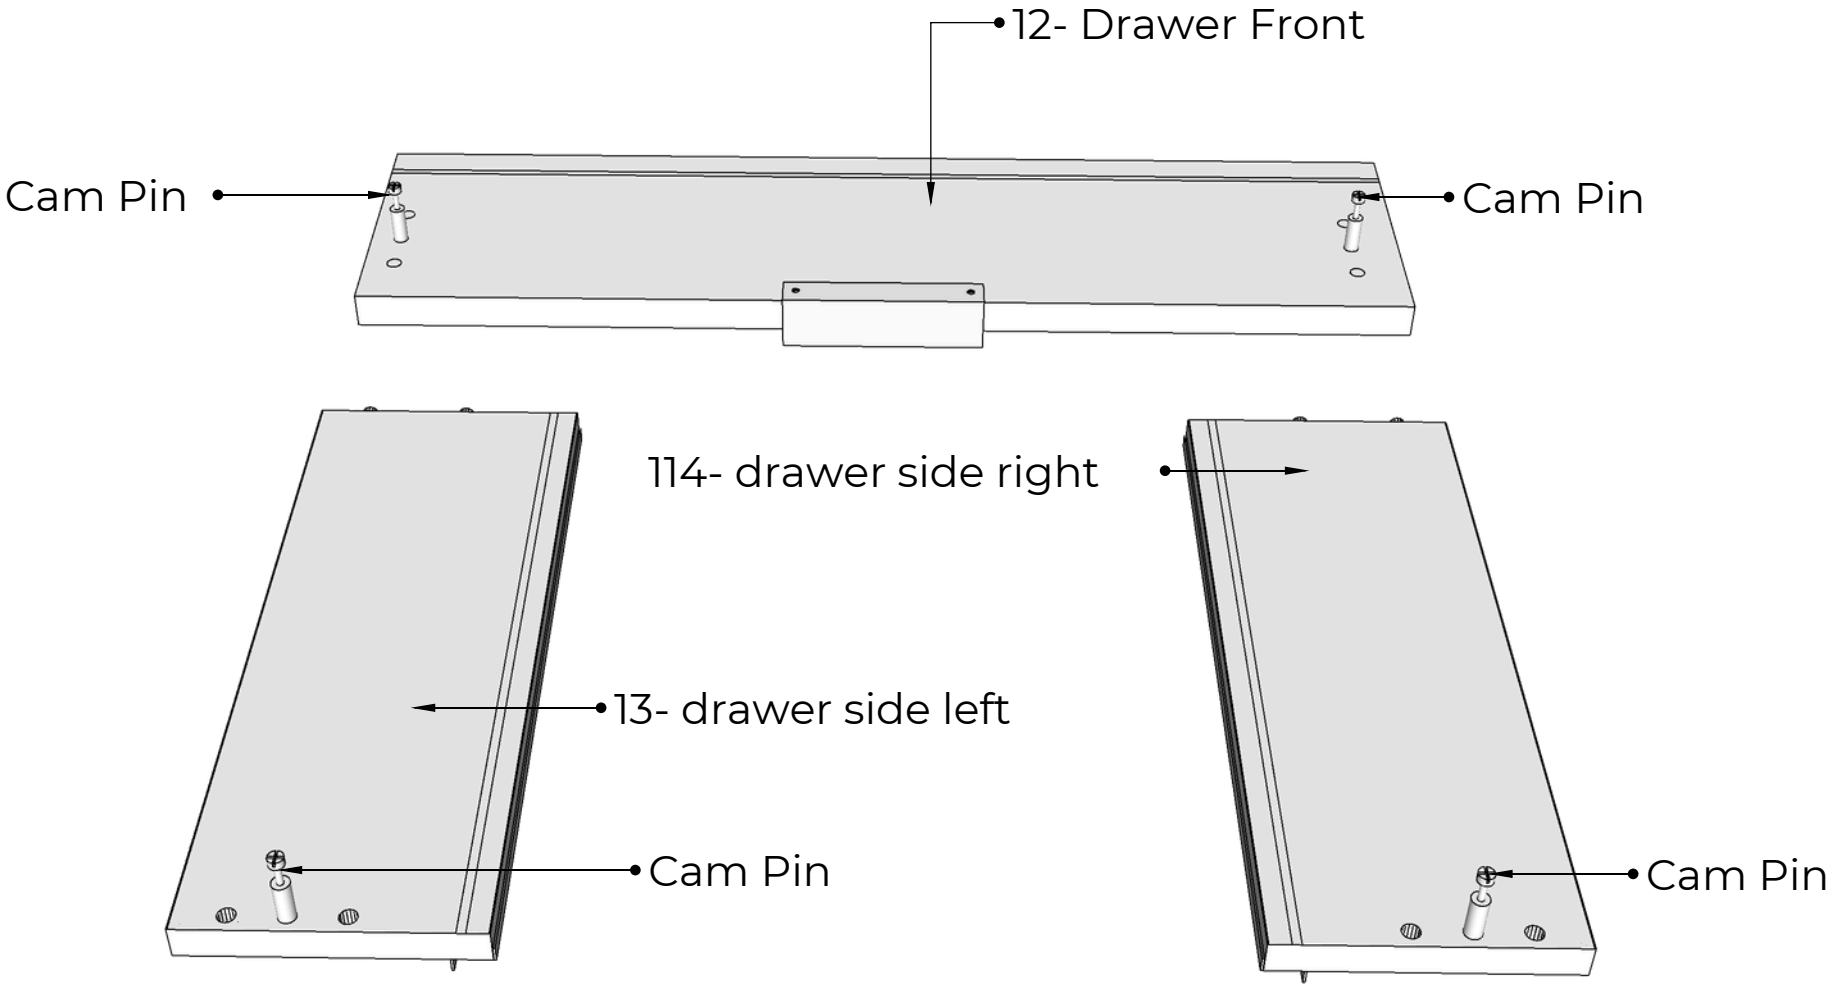


Step 2

Insert cams**(C)** into large holes in drawer sides**(13,14)** and drawer rear**(15)**, ensuring the arrow on the cam**(C)** faces nearest edge

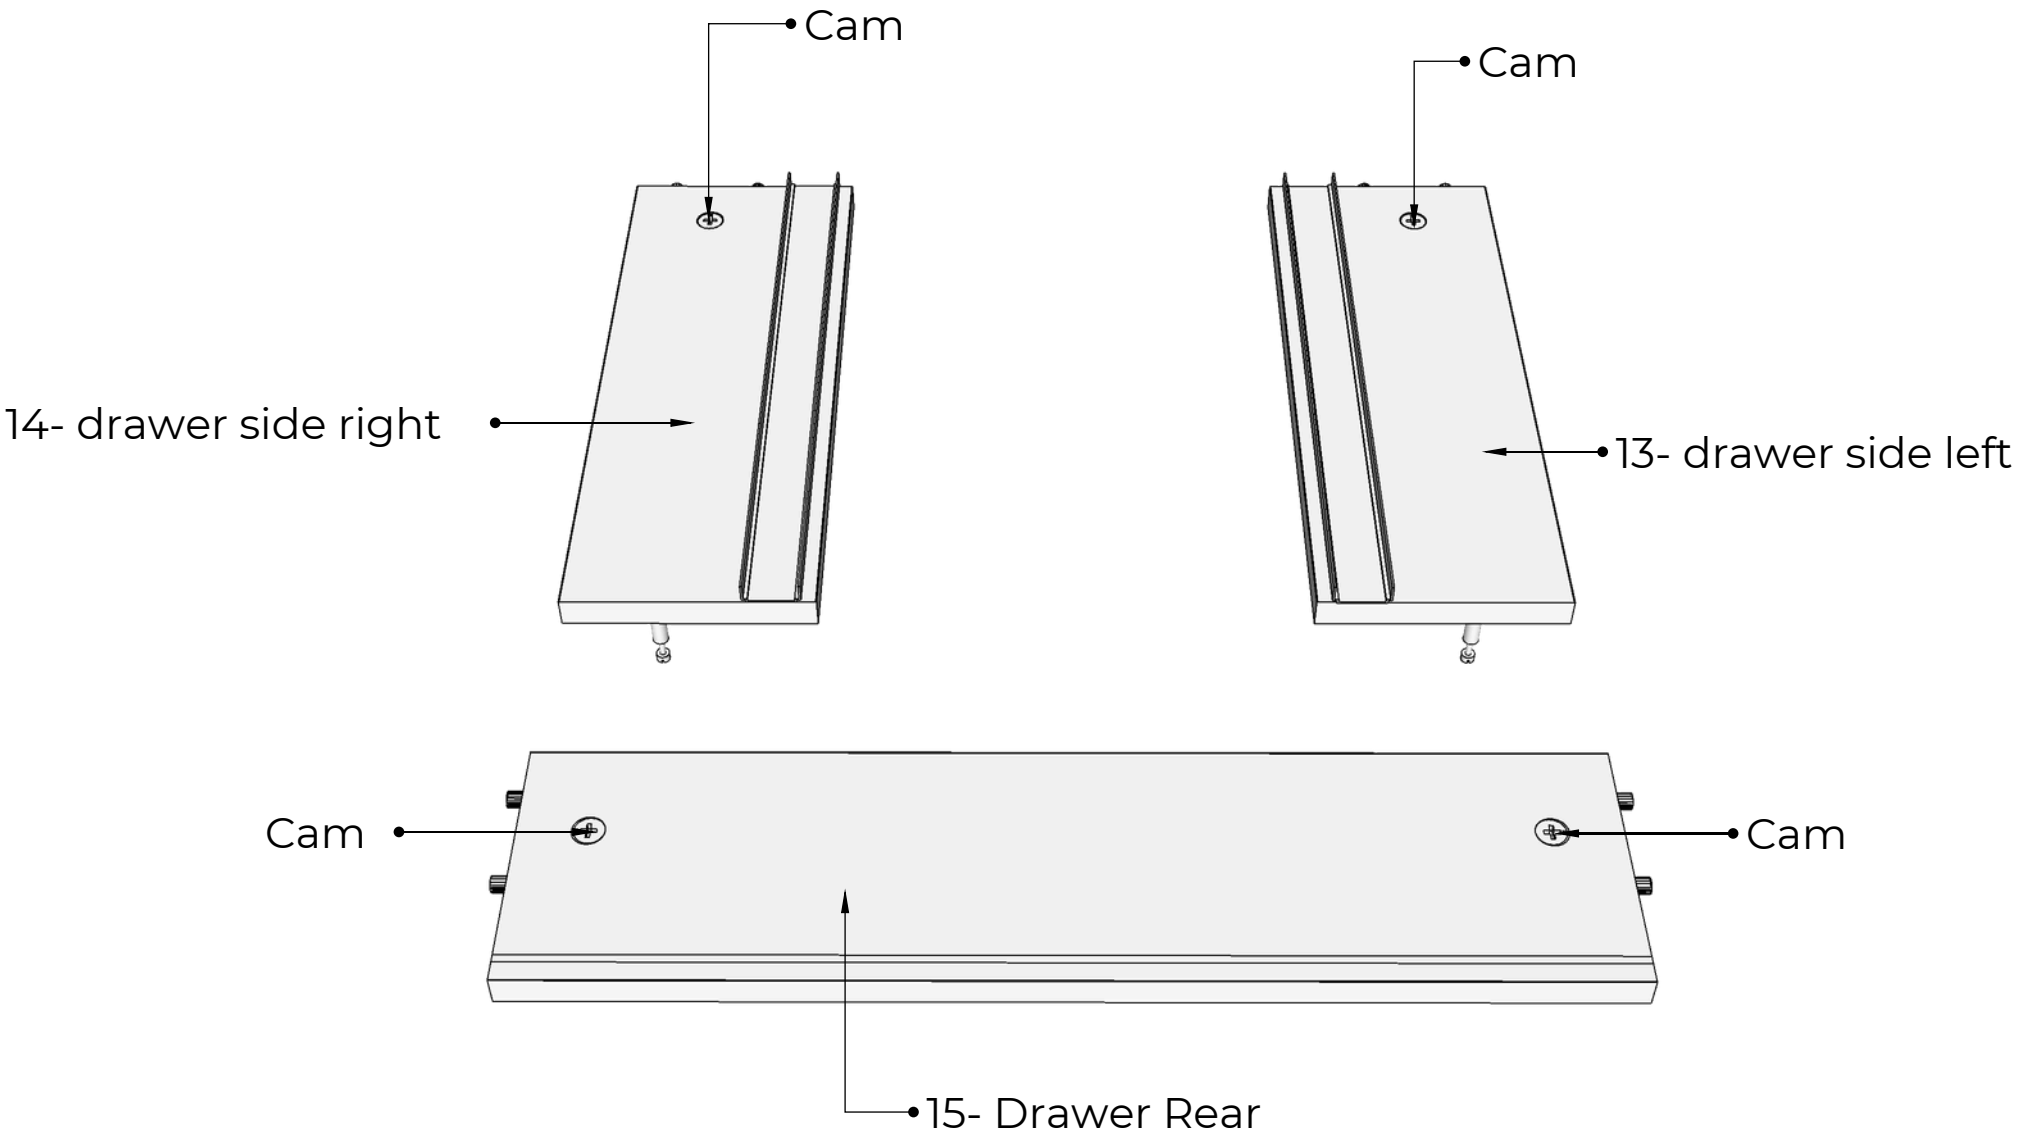


Step 3

Attach drawer sides**(13,14)** to drawer rear**(15)** and tighten cams**(B)**

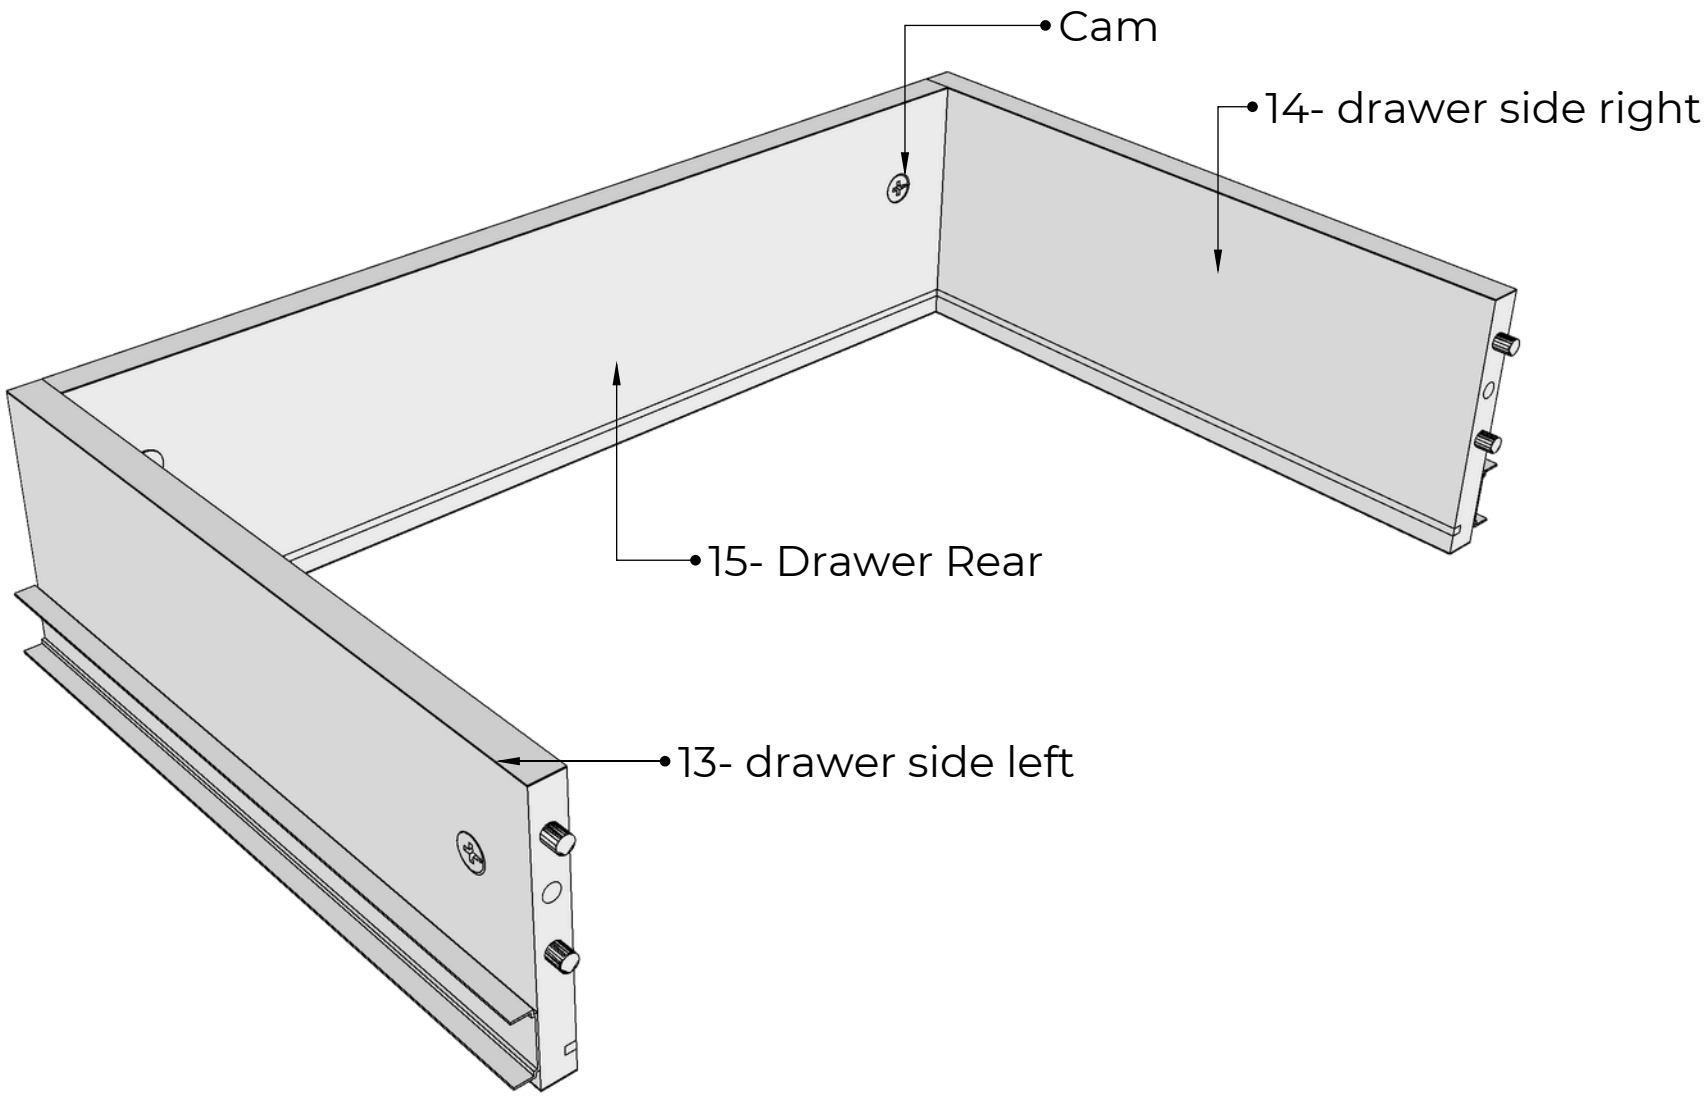

Step 4

Slide drawer bottom**(16)** into the grooves on the drawer sides**(13,14)** and drawer rear**(15)**

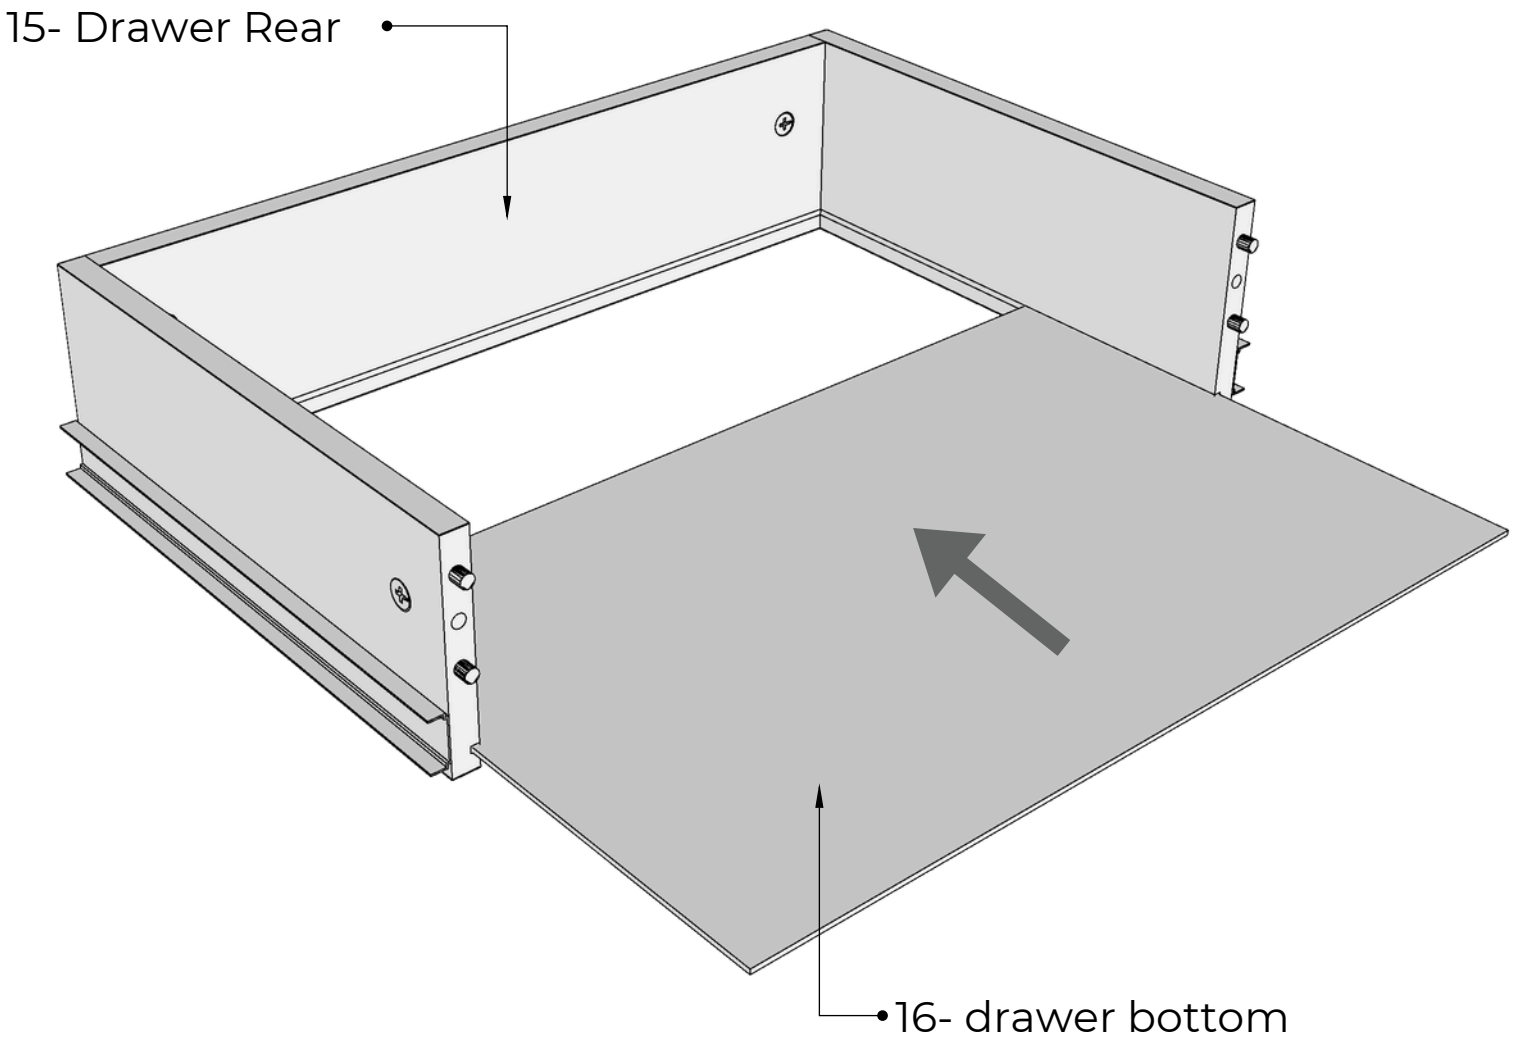

Step 5

Attach drawer front**(12)** to drawer assembly by sliding the cam pins**(C)** into the holes on the drawer sides**(13,14)** and tightening the cams**(B)**
Ensure that the drawer bottom**(16)** fits into the groove in the drawer front**(12)**

