



me&co
QUALITY, AFFORDABLE FURNITURE

ASSEMBLY INSTRUCTIONS



OPTIMA COFFEE TABLE


Parts List (18 parts)

1. Top	x 1	9. Long Leg Strip Back & Front Skirting	x 2
2. Bottom	x 1	10. Short Leg Strip Side Skirting	x 2
3. Side Left	x 1	11. Drawer Front	x 1
4. Side Right	x 1	12. Drawer Side Left	x 1
5. Division Middle Panel	x 1	13. Drawer Side Right	x 1
6. Cleat	x 2	14. Drawer Rear	x 1
7. Fake Front	x 1	15. Drawer Bottom 3mm	x 1
8. Rear Back Panel	x 1		

Hardware

A	Confirmat Screws (use the supplied Allen Key)	x 19	
B	Allen Key	x 1	
C	Cams	x 13	
D	Cam Pins	x 13	
E	Touch Release Piston Screws (4 x 16)	x 1 x 2	
F	Drawer Runner Set 350mm Screws (6 x 16)	x 1 x 6	
G	Cover Stickers)	x 4	

Before you begin, make sure you have all the parts listed in the assembly guide and organise them by type and size. You will also need a star or Philip's screwdriver, and an allen key will be provided

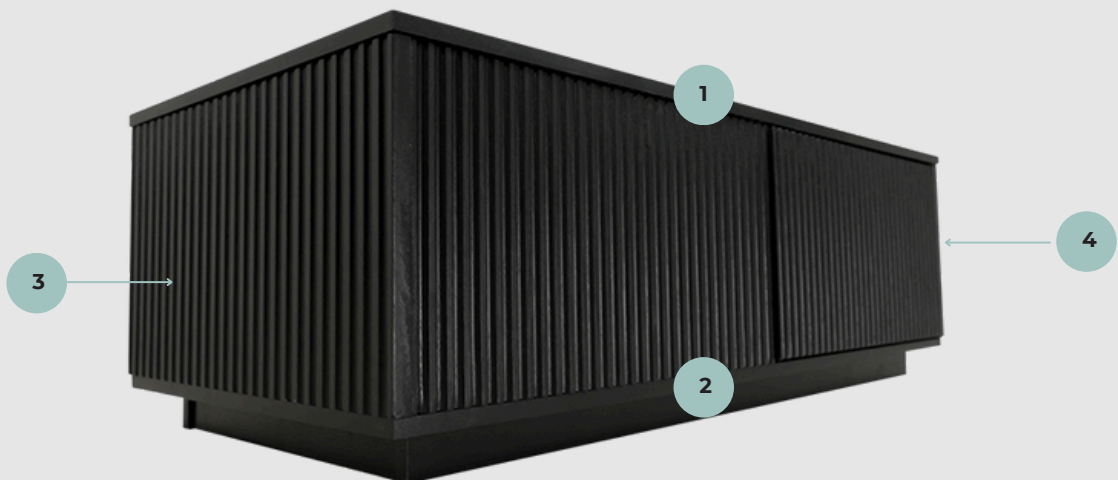

CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.



Scan QR Code - Follow video for precise assembly

1. Lay the top panel (1) upside down and screw in cam pins (D).
2. Lay down the middle panel (Division (5)), attach the drawer runners (F) and insert cams (C) into the provided holes. Make sure the arrows face the nearest side.
3. Carefully slide the middle panel (Division(5)) over the top panel (1), ensuring the cam pins (D) slide into the holes. Then tighten the cams.
4. Attach runners (F) and touch release piston (E) to the right side panel (4), and insert cams (C).
5. Screw in a cam pin (D) into the right side panel (4).
6. Slide the right cleat (6) into the middle panel (Division (5)), ensuring the wooden dowel fits into the hole, and insert a cam (C).
7. Attach the right side panel (4) by carefully sliding the cam pins (D) into the designated holes. Lift the right cleat (6) slightly so the cam pin and wooden dowel slides into the right side panel (4) first.
8. Tighten the cams on the right side panel and the right cleat .
9. Slide the left cleat (6) into the middle panel (Division (5)), ensuring the wooden dowel fits into the hole, and insert a cam (C).
10. Secure both cleats (6) to the middle panel (Division (5)) with confirmat screws (A).
11. Lay the left side panel (3) upside down, insert cams (C) and screw in a cam pin (D).
12. Attach the left side panel by carefully sliding the cam pins into the designated holes. Lift the left cleat (6) slightly so the cam pin and wooden dowel slides into the left side panel first.
13. Tighten the cams (C) on the left side panel and the left cleat.
14. Lay the front panel (7) upside down and insert a cam (C).
15. Slide the front panel (7) onto the top panel (1), ensuring the cam pins and the wooden dowel fit into the hole.
16. Tighten the cam on the inside of the front panel.
17. Lay the back panel (8) upside down and insert cams (C).
18. Slide the back panel (8) onto the top panel (1), ensuring the cam pins and the wooden dowel fit into the hole.
19. Tighten the cams (C) on the inside of the back panel.
20. Lay the top panel (1) upside down and attach the front skirting (9) with confirmat screws (A).
21. Slide both side skirtings (10) into the front skirting (9), ensuring the wooden dowels fit into the holes, then secure them to the bottom panel (2) with confirmat screws (A).
22. Slide in the back skirting (9), ensuring the wooden dowels fit into the holes, then attach it to the bottom panel (2) with confirmat screws (A).
23. Place the bottom panel (2) over the assembled unit, aligning the edges perfectly, then secure it with confirmat screws (A).
24. Lay the drawer front (11) upside down and screw in cam pins (D).
25. Prepare the drawer sides (12,13) by inserting cams (C).
26. Place the drawer sides (12,13) over the drawer front (11), ensuring the cam pins and the wooden dowels fit into the holes, then tighten the cams.
27. Slide the drawer bottom 3mm (15) into the grooves.
28. Slide the drawer rear (14) into the drawer sides (12,13) and secure it with confirmat screws (A).
29. Slide in the drawer into the main body by tilting at an upwards angle.

There we go, setup is complete. Remember to use a damp cloth when cleaning. Avoid using excessive water as this may cause damage and void the warranty.

Thank you for choosing me&co!



SCAN TO WATCH VIDEO

