



**me&co**  
QUALITY, AFFORDABLE FURNITURE

# ASSEMBLY INSTRUCTIONS



## OPTIMA SIDEBOARD


### Parts List (28 parts)

|                |     |                       |     |
|----------------|-----|-----------------------|-----|
| 1. Top         | x 1 | 9. Top Cleat          | x 1 |
| 2. Bottom      | x 1 | 10. Door              | x 2 |
| 3. Side Right  | x 1 | 11. Drawer Front      | x 3 |
| 4. Side Left   | x 1 | 12. Drawer Side Left  | x 3 |
| 5. Division    | x 1 | 13. Drawer Side Right | x 3 |
| 6. Shelf       | x 1 | 14. Drawer Rear       | x 3 |
| 7. Large Cleat | x 1 | 15. Drawer Bottom 3mm | x 3 |
| 8. Small Cleat | x 1 | 16. Small Backing 3mm | x 1 |
|                |     | 17. Large Backing 3mm | x 1 |

### Hardware

|          |   |             |  |
|----------|---|-------------|--|
| <b>A</b> | Confirmat Screws<br><i>(use the supplied Allen Key)</i> | x 24        |  |
| <b>B</b> | Allen Key   | x 1         |  |
| <b>C</b> | Cams  | x 12        |  |
| <b>D</b> | Cam Pins  | x 12        |  |
| <b>E</b> | Touch Release Piston<br>Screws (4 x 16)                 | x 3<br>x 6  |  |
| <b>F</b> | Overlay Door Hinge<br>Ferrari Screws                    | x 4<br>x 24 |  |
| <b>G</b> | T-Legs 150mm<br>G- Screws                               | x 5<br>x 20 |  |
| <b>H</b> | Drawer Runner Set 350mm<br>Screws (6 x 16)              | x 3<br>x 18 |  |
| <b>I</b> | Half Moon Handle  | x 2         |  |
| <b>J</b> | Cover Stickers  | x 14        |  |

Before you begin, make sure you have all the parts listed in the assembly guide and organise them by type and size. You will also need a star or Philip's screwdriver, and an allen key will be provided

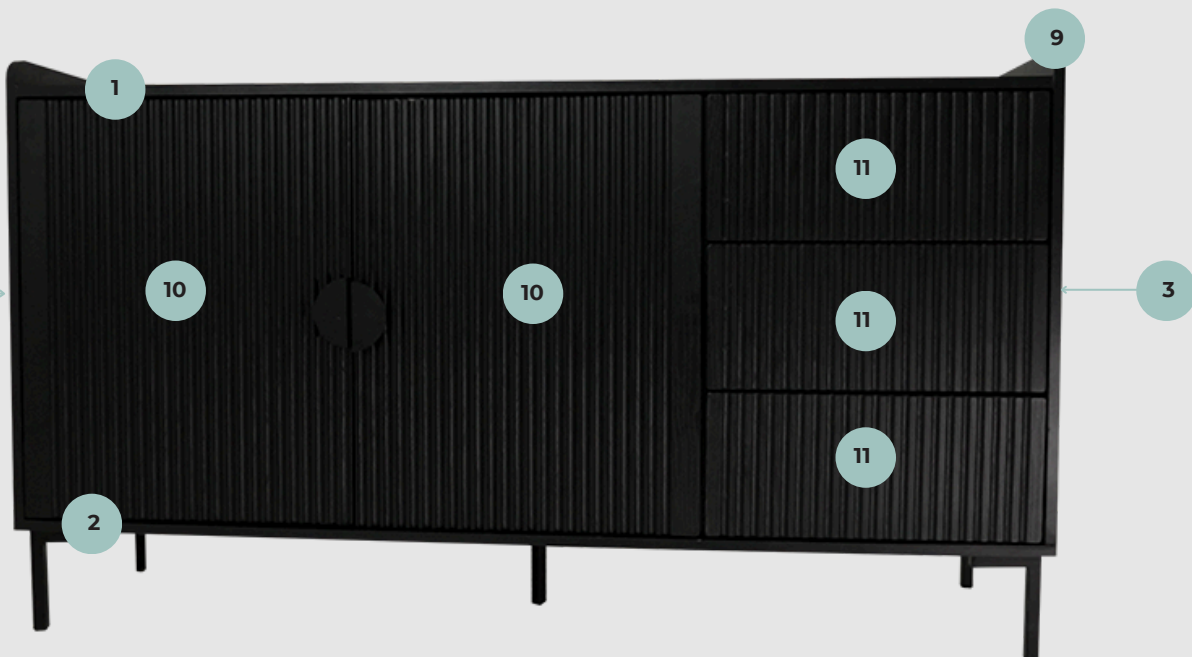

### CLEANING INSTRUCTIONS

**NB: Clean with a damp cloth only.**

Excessive water will cause damage, voiding the warranty.



## Scan QR Code - Follow video for precise assembly

1. Lay the side left (4) down and screw in cam pins (D) in the provided holes.
2. Lay down the right side panel (3) and attach the touch release pistons (E) and drawer runners (H).
3. Lay down the middle panel (Division(5)), attach the drawer runners (H) and insert cams (C), ensuring the arrows face the nearest side.
4. Flip over the middle panel (Division(5)) and screw in cam pins (D).
5. Place the bottom panel (2) against the left side panel (4) and secure it with confirmat screws (A) on its thin side.
6. Attach the large cleat (7) to the left side panel (4), ensuring the wooden dowel fits into the hole, and secure it with a confirmat screw (A).
7. Lay down the shelf panel (6) and insert cams (C). Slide the shelf panel (6) into the left side panel (4), ensuring the cam pins (C) fit into the holes, then tighten the cams (C).
8. Slide the middle panel (Division(5)) into the shelf panel (6) and bottom panel (2), ensuring the cams and wooden dowels fit into the holes.
9. Tighten the cams (C) on the middle panel (Division(5)) and secure it to the bottom panel (2) with confirmat screws (A).
10. Secure the large cleat (7) to the middle panel (Division(5)) with a confirmat screw (A).
11. Slide the small cleat (8) into the middle panel (Division(5)), ensuring the wooden dowel fits into the hole, then secure with a confirmat screw (A).
12. Attach the right side panel (3) to the bottom panel (2) and small cleat (8) with confirmat screws (A). Make sure the wooden dowel on the cleat fits into the hole.
13. Slide the backing panels (16,17) into the designated grooves. **Tip:** If needed, slightly loosen the confirmat screws (A) on the side panels to allow easier insertion of the backing. Be sure to re-tighten the screws once the backing is in place.
14. Lay the top panel (1) upside down and screw in cam pins (D).
15. Attach the top trimming (9) to the top panel (1) using confirmat screws (A).
16. Place the top panel (1) over the unit, ensuring the cam pins (D) fit into the holes and tighten the cams. **Tip:** If necessary, slightly loosen the confirmat screws (A) on the side panels to help align the top panel. Tighten again once the panel is properly seated.
17. Secure the top panel (1) to the side panels (3,4) with confirmat screws (A).
18. Flip the unit upside down and attach the legs (G) using the provided screws.
19. Lay the door panels (10) upside down and attach the door hinges (F) to the inside of each panel.
20. Attach the door panels (10) to the inside of the unit by securing the hinges to the side panels (3,4). Attach the handles (I) to the outside of both doors (10).
21. Lay the drawer front (11) upside down and screw in cam pins (D).
22. Insert cams (C) into the drawer side panels (12,13).
23. Place the drawer side panels (12,13) onto the drawer front (11), ensuring the cam pins (D) and wooden dowels slide into the holes. Then tighten the cams.
24. Slide the drawer bottom (15) into the designated grooves.
25. Slide the drawer back panel (14) between the two drawer side panels (12,13), ensuring the wooden dowels fit into the holes on both sides. Then secure it with confirmat screws (A). Slide the drawer into the main body by tilting it at an upwards angle.

There we go, setup is complete. Remember to use a damp cloth when cleaning. Avoid using excessive water as this may cause damage and void the warranty.

Thank you for choosing me&co!



SCAN TO WATCH VIDEO