PARIS DRAWER UNIT ASSEMBLY INSTRUCTIONS

Thank you for supporting us.

We believe design belongs to everyone. From materials and processes to saftey testing, production and delivery, we are passionate and committed to bringing you the best possible product so you can create a beautifully space to feel comfortable in.

Here are a few assembly tips before you get started:



Make Time

The first stem to all seamless assembly is taking a moment to carfully read through the instructions- you are already on your way to create a beautifully functional space!



Set The Mood

Put on your favourite playlist, order a pizza and pour yourself a drink to get in the mood!



Tool Check

Layout the instructions, screws and panels to check you have everything you need. A blanket or soft floor rug will help protect your new favourite item from scratches and a drill will speed up the assembly too!



Room Reveal

You Did it! Take a step back and enjoy the moment. Don't forget to recycle any packaging.

Creating your home

PARIS DRAWER UNIT ASSEMBLY INSTRUCTIONS

Parts List

1.	Left Side	X 1	**6.**	Drawer Front	X 3
2.	Right Side	X 1	**7.**	Drawer Sides	X 6
3.	Bottom	X 1	**8.**	Drawer Rear	X 3
4.	Top	X 1	**9.**	Cleat	X 1
5.	Backing 3mm	x 3	**10.**	Backing 3mm	X 1

Hardware

A
Confirmat Screws
(use supplied Allen Key)



x 12

B
3 x Sets Drawer Runners
with 18 x Flat Screws



x 3

C
Cam



x 10

D
Cam Pins



x 10

E
Handle & Screws



x 3

F
T - Legs & 4 G-Screws




x 4

G
Cover Stickers




x 2

H
Saftey Bracket

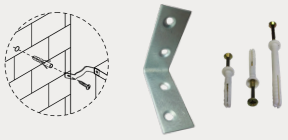

x 2

WARNING: Any furniture that is not anchored to a wall has the potential to tip over in certain circumstances, i.e. if a child attempts to climb up on the furniture or in the event of an earthquake. Accordingly, we recommend that all furniture is anchored to a wall.

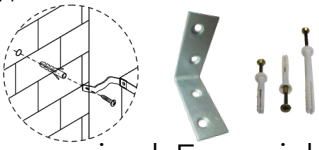

Saftey Bracket

Phillips screwdrivers required. For quicker assembly, we recommend the use of a power drill on a low-speed setting.


Time to assemble 30 min - People needed 1 - Difficulty level 6/10 - Tools needed - Phillips scredriver - allen key (supplied)

PARIS DRAWER UNIT ASSEMBLY INSTRUCTIONS

CABINET ASSEMBLY


Step 1:

Work on a soft non-scratching surface
Place top upside down
Insert Cam Pins in small holes

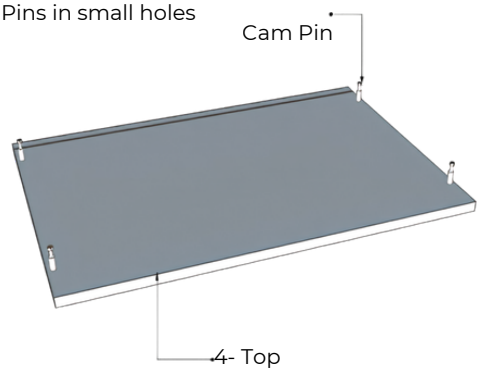


Step 2:

Insert Cams into holes with arrow on cam facing nearest edge
Attach Drawer Runners with supplied screws

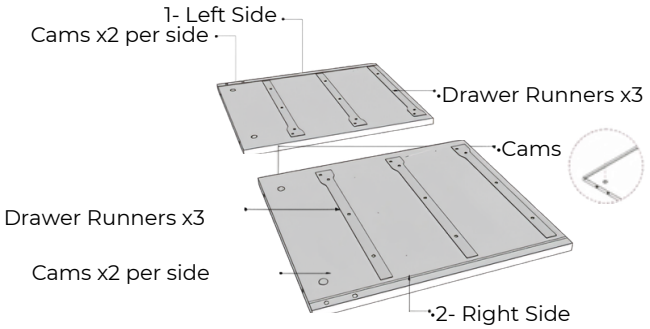


Step 3:

Attach cleat to sides using Confirmat Screws

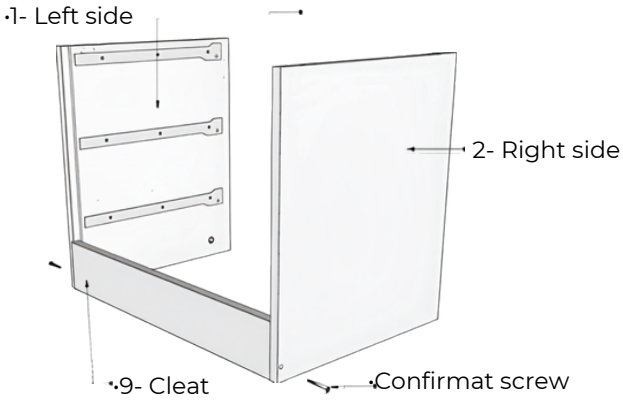


Step 4:

Attach top to previous assembly by sliding the holes in sides over cam pins in top and tightening the Cams clockwise

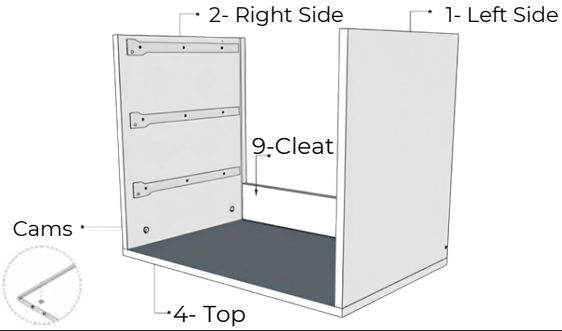


Step 5:

Slide backing into grooves on sides and top

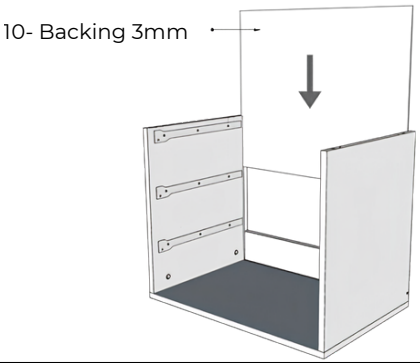

Step 6:

Attach Bottom to assembly
with Confirmat screws

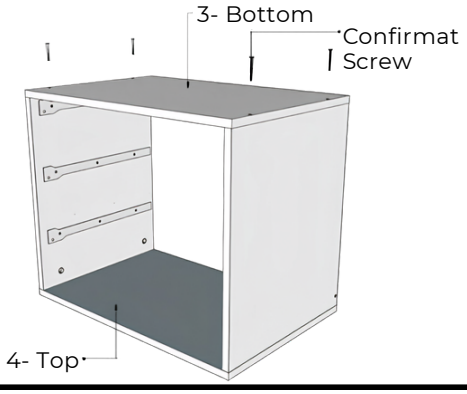


PARIS DRAWER UNIT ASSEMBLY INSTRUCTIONS

CABINET ASSEMBLY

There we go! You are all done. Congratulations !

Step 7:

Attach legs to assembly using pre-drilled holes in bottom and supplied screws

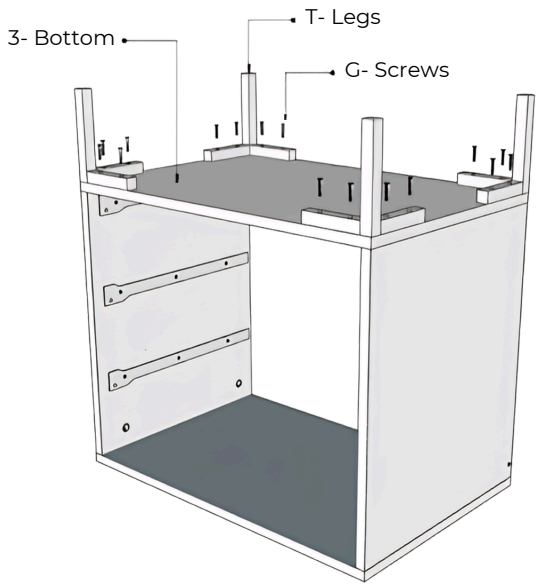


Assembled Product




Step 8:

after drawer assembly:
Insert drawers into cabinet assembly

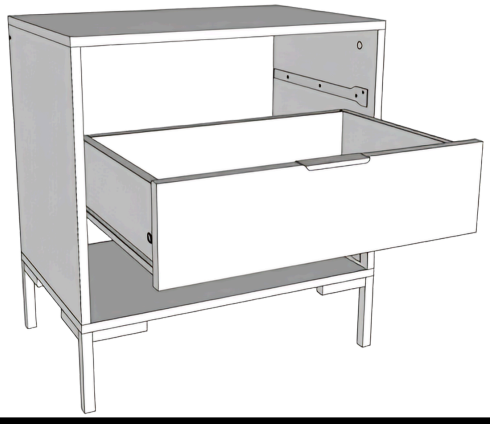

How to install Cam

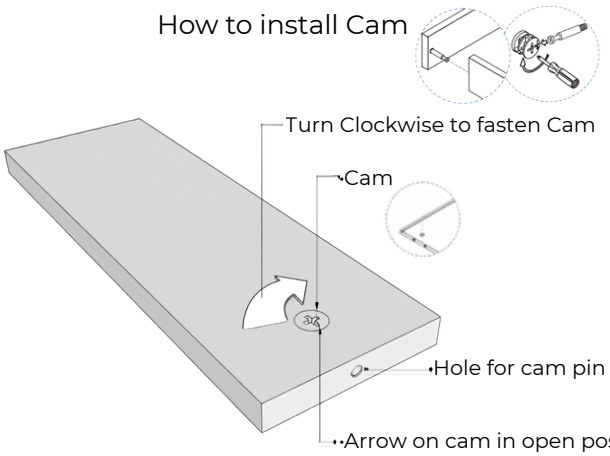

Cam installation instructions
Arrow of cam should point to hole in edge to accept Cam pin. Turn Cam clockwise to fasten

CLEANING INSTRUCTIONS
NB: Clean with a damp cloth only.
Excessive water will cause damage, voiding the warranty.




PARIS DRAWER UNIT ASSEMBLY INSTRUCTIONS

DRAWER ASSEMBLY


Step 1:

Insert cam pins into small holes in draw front

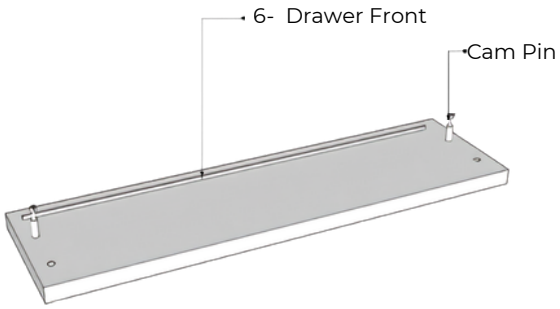


Step 2:

Insert Cams into holes on drawer sides with arrow on cam facing nearest edge

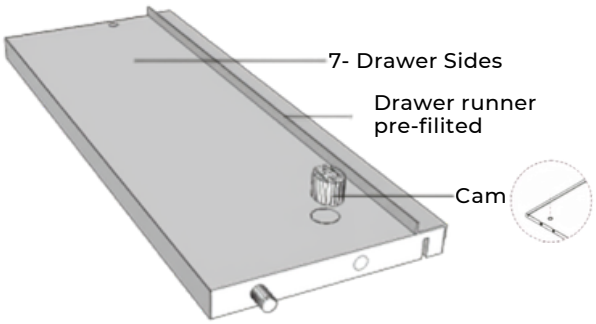


Step 3:

Attach Drawer sides to drawer rear using confirmat screws

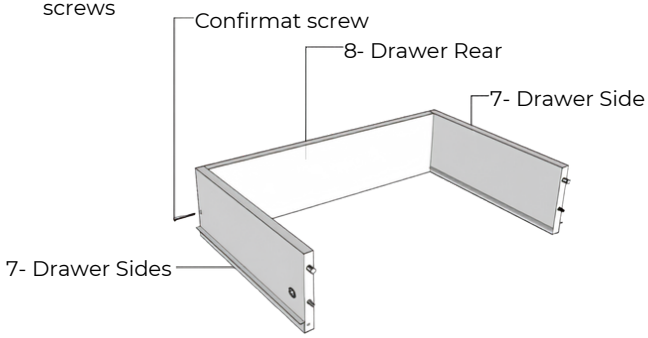


Step 4:

Slide drawer backing into drawer assembly grooves

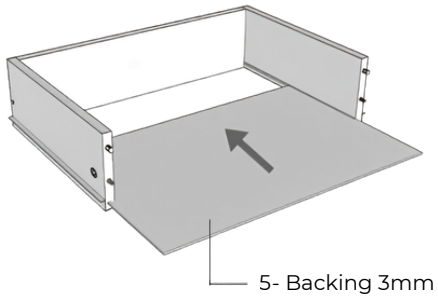


Step 5:

Attach drawer front to drawer assembly by sliding the cam pins into the holes on the drawer sides and tightening the cams

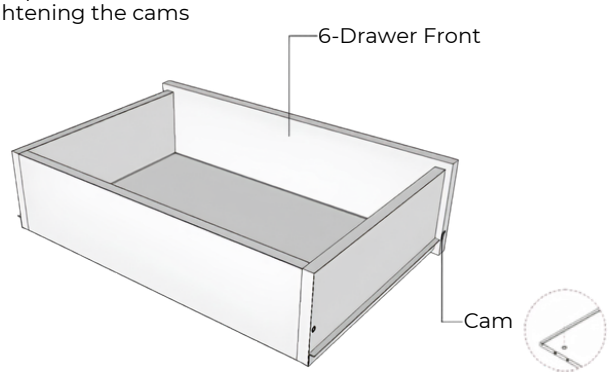


Step 6:

Attach handle to the back of the drawer front by using the supplied screws

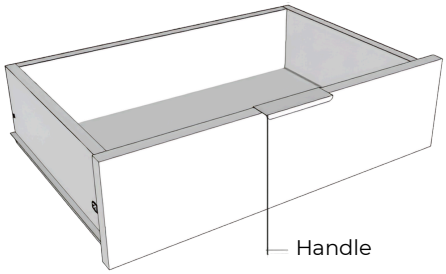

Cam installation instructions

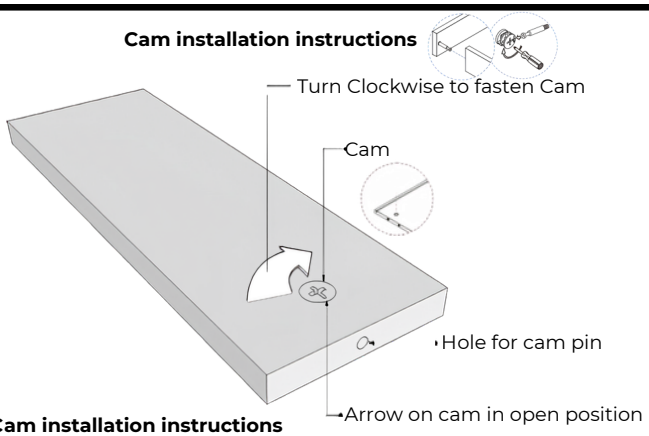

Cam installation instructions

Arrow of cam should point to hole In edge to accept Cam pin
Turn Cam clockwise to fasten