



## SABLE WARDROBE

### Parts List (26 parts)


<b>1.</b> Top	x 1	<b>9.</b> Door	x 3
<b>2.</b> Bottom	x 1	<b>10.</b> Small Division	x 1
<b>3.</b> Side Right	x 1	<b>11.</b> Large Division	x 1
<b>4.</b> Side Left	x 1	<b>12.</b> Drawer Front	x 2
<b>5.</b> Shelf	x 2	<b>13.</b> Drawer Side Left	x 2
<b>6.</b> Bottom Shelf	x 1	<b>14.</b> Drawer Side Right	x 2
<b>7.</b> Cleat	x 3	<b>15.</b> Drawer Rear	x 2
<b>8.</b> Backing 3mm	x 1	<b>16.</b> Drawer Bottom	x 2

Make sure you have all the parts listed and organize them by type and size. You will also need a Phillips or star screwdriver.



### Hardware

<b>A</b>	Confirmat Screws (Use the supplied Allen Key)	x 16	
<b>B</b>	Allen Key	x 1	
<b>C</b>	Cam	x 26	
<b>D</b>	Cam Pin	x 26	
<b>E</b>	Oval Tubing Brackets Screw (4 x 16)	x 2 x 4	
<b>F</b>	Oval Tubing 628mm	x 1	
<b>G</b>	Cone Leg H150 Black G-Screws (10 x 16)	x 4 x 16	
<b>H</b>	Overlay Hinge Ferrari Screws (8 x 16)	x 3 x 18	
<b>I</b>	Inset Hinge Ferrari Screws (8 x 16)	x 6 x 36	
<b>J</b>	Pull Handle Black Screws 4 x 16	x 4 x 2	
<b>K</b>	Magnetic Catch Screws (4 x 20) Screws (4 x 16)	x 2 x 4	
<b>L</b>	Runner Sets 450mm Screws (6 x 16)	x 2 x 12	
<b>M</b>	Cover Stickers	x 6	

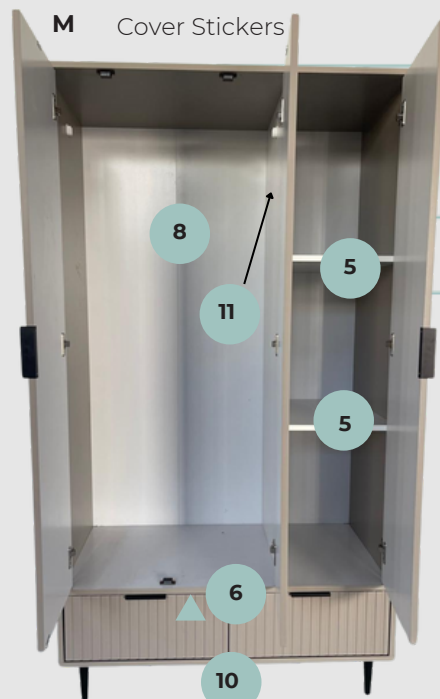

### CLEANING INSTRUCTIONS

**NB: Clean with a damp cloth only.**

Excessive water will cause damage, voiding the warranty.



**me&co**  
QUALITY, AFFORDABLE FURNITURE



# SABLE WARDROBE



## Cupboard Assembly

- ▶ Place Side Right (3) Side Left (4) and Large Division (11) on a soft surface with holes facing up. Screw Cam Pins (D) into all small holes on the sides (3,4) and Division (11). *(18 x Cam Pins in Total)*
- ▶ Fix the Drawer Runners (L) to the Sides (3,4) and both Sides of Small Division (10)
- ▶ Start with the Bottom (2) and Side Left (4) in a "L-Shape" with the groove closest to the surface you are building on. Screw in 2 x Conformat Screws (A) through the bottom into the left side.
- ▶ Place Cams (C) into the big holes on the Bottom Shelf (6) and the 3 x Cleats (7) with the small arrows facing towards the outside hole.
- ▶ Fit the Bottom Shelf (6) to the Left Side (4) by sliding them onto the Cam Pins and Wooden Dowel. Tighten the Cams with a Screwdriver. Do the same with 3 x Cleats (7) onto the 3 x Cam Pins closest to the groove.
- ▶ Fit the Small Division (10) between the Bottom (2) and the Bottom Shelf (6) and fix in place with 4 x Conformat Screws (A). Fit the Large Division (11) above the Bottom Shelf and fix in place with 2 x Conformat Screws (A) through the shelf into the Division.
- ▶ Fit 2 x Shelves (5) to the Large Division (11) by sliding them onto the Cam Pins and Wooden Dowel and tightening the Cams with a screwdriver.
- ▶ Fit Side Right (3) by fitting its Cam Pins (D) into the Shelves and Tighten Cams. Using 2 x Conformat Screws (A), screw through the bottom into the right side. Attach the 4 x Legs (G) to the bottom using the supplied screws and pre-drilled holes.
- ▶ Slide in the backing (8) between the sides into the groove. Make sure that it is fully seated in the groove on the bottom panel (2).
- ▶ Place the Top (1) onto the sides (3,4) making sure the Backing fits into the Groove. Screw in 6 x Conformat Screws (A) through the Top (1) into the Sides (3,4) and Large Division (11)



## Fit Doors

- ▶ Attach the Hinges (I) to the Doors (9) using the provided screws. Secure the Doors to the Sides by following the special markings (two mini holes for each hinge). Utilize the adjustable holes (larger holes on the slide plate) to attach the door to the wardrobe. Once the door is positioned and correctly adjusted to the desired height, secure it in place using the remaining two holes on the slide plate. The hinges can be adjusted in four directions by using the set screws on them. Finally, attach the Handles (J) to the Doors.
- ▶ Install the Magnetic Catch (K) using the supplied 4 x 20mm screws to secure it at the marked holes on the Top Panel (1). Attach the Tubing Bracket (E) to the Left Side (4) and the Division with the provided screws, then slide the oval rail into place.



## Drawer Assembly

- ▶ Place Drawer Front (12) upside down on a soft surface.
- ▶ Screw Cam Pins (D) into the small holes on Front (12) and Sides (13,14) using a screwdriver. Insert Cams on Drawer Sides (13,14) and Drawer Rear (15)
- ▶ Fit Drawer Sides to Front using Cams (C) - do not over tighten. Slide Drawer Bottom (16) into groove. Slide Drawer Rear (15) over Cam Pins (D) on sides (13,14) and tighten Cams.
- ▶ Fix handle (J) with supplied screws.
- ▶ Slide Drawer into main body by tilting on a downward angle - Make sure wheels are running INSIDE the guides on the sides of the body.

**REPEAT PROCESS FOR ALL DRAWERS**

There we go! You are all done. Congratulations!