




## SCOTTY WARDROBE 3 DOOR







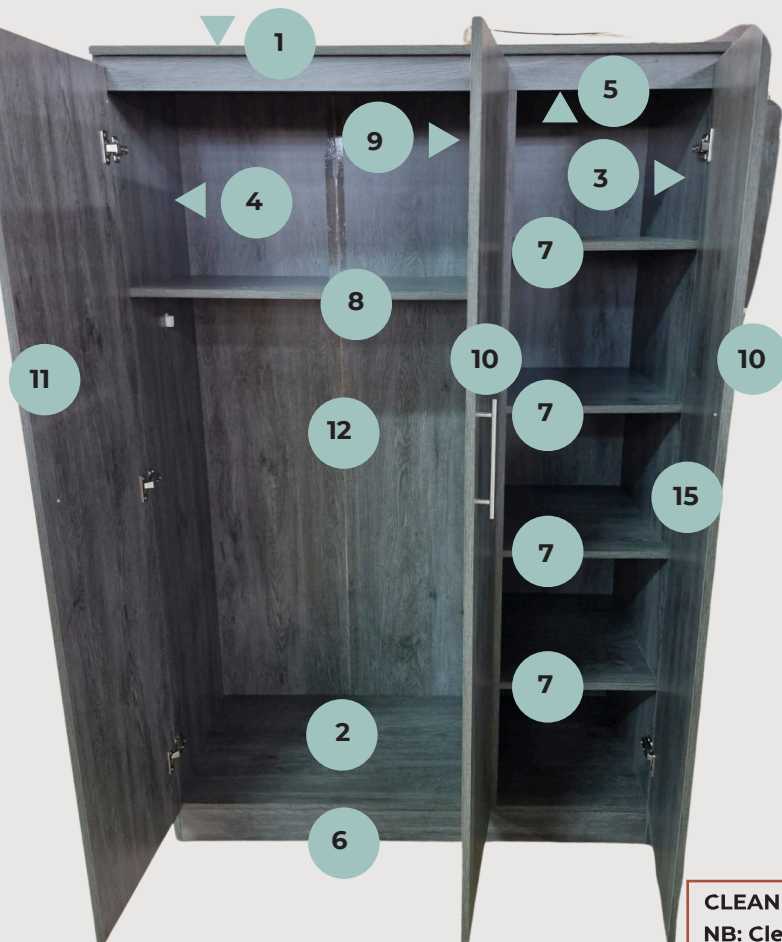



### Parts List (23 parts)

1. Top	x 1	8. Top Shelf	x 1
2. Bottom	x 1	9. Divider	x 1
3. Side Right	x 1	10. Side Door	x 2
4. Side Left	x 1	11. Mid Door	x 1
5. Cleat 782	x 3	12. Backing	x 3
6. Skirting	x 2	13. Cleat 60	x 1
7. Shelf	x 4	14. Cleat 378	x 1

Make sure you have all the parts listed and organize them by type and size. You will also need a Phillips or star screwdriver.



### Hardware

<b>A</b>	Confirmat Screws (use the supplied Allen Key)	x 36	
<b>B</b>	Allen Key	x 1	
<b>C</b>	Cam	x 8	
<b>D</b>	Cam Pin	x 8	
<b>E</b>	Oval Brackets (4 x Screws)	x 2	
<b>F</b>	Oval Tubing	x 1	
<b>G</b>	Pothole Hinges (54 Screws)	x 9	
<b>H</b>	Handles (6 Screws)	x 3	
<b>I</b>	Backing Screws	x 10	
<b>J</b>	Brown Glides (Attached to parts - no action needed)	x 4	

There we go! You are all done. Congratulations!

#### CLEANING INSTRUCTIONS

**NB: Clean with a damp cloth only.**

Excessive water will cause damage, voiding the warranty.



**me&co**  
QUALITY, AFFORDABLE FURNITURE



# SCOTTY WARDROBE 3 DOOR



## Cupboard Assembly

- ▶ Place Side Right (3) on a soft surface with holes facing up. Screw Cam Pins (D) into small holes - make sure they are straight. Place Cam (C) into holes on Shelves (7) with small arrow on the cams facing the nearest side. Fit Shelves (7) over pins (D) on Side Right (3) and tighten.
- ▶ Place Divider (9) <sup>+</sup> over shelves (7) and short Cleat (5) of 378mm, slide into correct position and use Confirmat Screws (A) and supplied Allen Key to lock it to the shelves - the screws go through the Divider (9)
- ▶ Fit Bottom (2) , Top Shelf (8) and Top (1) to Side Right (3) using Confirmat Screws (A) - they go through Side Right (3), so you will have to move the cupboard to hang over table side. Do the same with Cleats (782mm) and Skirting (6) - tighten with Allan Key (B).
- ▶ Screw the Divider (9) to the Bottom(2) and Top Shelf (8) using Confirmat Screws (A) Place Side Left (4) on top of all the parts, line up with guided dowels and screw to rest of body using Confirmat Screws.(A)
- ▶ Slide the Backing 3mm (12) from the Top, between the Cleats and the Shelves until locked into groove in the Bottom - make sure it is seated (check if Cover is level with Top and Small Holes in Backing is nearest to the top end. Use supplied screws (J) to attach Backing to Body through small holes.
- ▶ Attach Ferrairi Hinges (G) to Side Doors (10) using silver screws. Attach Half Overlay Hinges (H) to Mid Door.(11) Flip the cupboard to upright position and screw doors to sides and Divider with Silver Screws - see special markings (4 mini holes for each hinge). Hinges can be adjusted in 4 directions by using set screws on hinges. Screw Handles (I) to Doors
- ▶ Fit plastic Tubing Bracket(G) to Side Left and Divider using screws and Slide Alluminium Tubing in place to hang clothes.



There we go! You are all done. Congratulations !

made in south africa