




SCOTTY WARDROBE 1 DRAWER







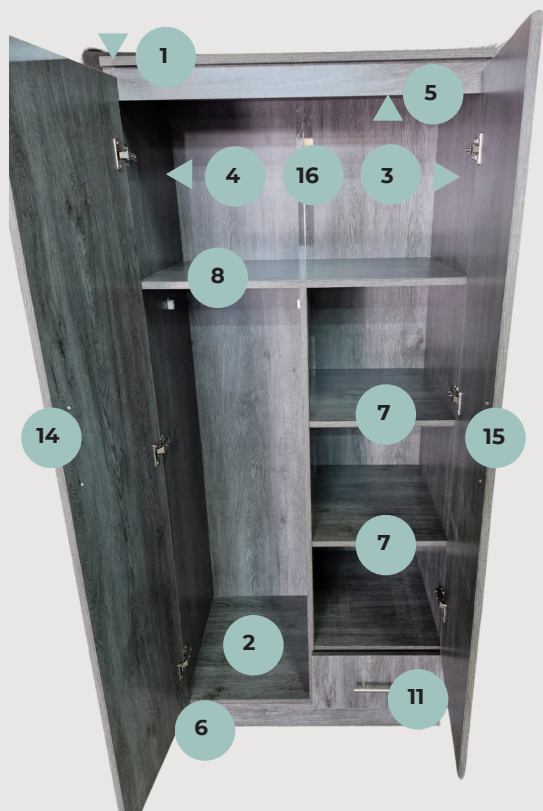





Parts List (21 parts)

1. Top	x 1	8. Top Shelf	x 1
2. Bottom	x 1	9. Division	x 1
3. Side Right	x 1	10. Drawer Bottom 3mm	x 1
4. Side Left	x 1	11. Drawer Front	x 1
5. Cleats	x 3	12. Drawer Sides	x 2
6. Skirting	x 1	13. Drawer Rear	x 1
7. Shelf	x 3	14. Door Left	x 1
		15. Door Right	x 1
		16. Backing 3mm	x 1

Make sure you have all the parts listed and organize them by type and size. You will also need a Phillips or star screwdriver.



Hardware

A	Confirmat Screws (use the supplied Allen Key)	x 34	
B	Allen Key	x 1	
C	Brown Glides (Attached to parts - no action needed)	x 4	
D	Cam	x 8	
E	Cam Pin	x 8	
F	Oval Tubing Brackets	x 2	
G	Oval Tubing	x 1	
H	Set 350 Runner with 6 Screws	x 1	
I	Pothole Hinge(36 Screws)	x 6	
J	Handles 160mm (4 Screws)	x 2	
K	Backing Screws	X 4	
L	Handles 96mm (2 Screws)		

CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.



me&co
QUALITY, AFFORDABLE FURNITURE



SCOTTY WARDROBE 1 DRAWER



Cupboard Assembly

- ▶ Place Side Right (3) on a soft surface with holes facing up. Screw Cam Pins (E) into small holes - make sure they are straight. Place Cam Screw (D) into small holes on Shelves (7) with small arrow on cam facing the nearest side. Fit Shelves (6) over pins and tighten.
- +
- ▶ Place Divider (9) over shelves and slide into correct position and use Conformat Screws (A) and supplied Allen Key (B) to lock it to the shelves - the screws go through the Divider (9)
- ▶ Fit Bottom (2), Top Shelf (8) and Top (1) to Side Right (3) using Conformat Screws (A) - they go through Side Right (3), so you will have to move the cupboard to hang over table side. Do the same with Cleats (5) and Skirting (6) - tighten with Allan Key (B).
- ▶ Screw the Divider (9) to the Bottom(2) and Top Shelf (8) using Conformat Screws (A) Place Side Left (4) on top of all the parts, line up with guided dowels and screw to rest of body using Conformat Screws.(A)
- ▶ Slide the Backing 3mm (16 from the Top, between the Cleats and the Shelves until locked into groove in the Bottom - make sure it is seated (check if Cover is level with Top and Small Holes in Backing is nearest to the top end. Use supplied screws (J) to attach Backing to Body through small holes.
- ▶ Attach Ferrairi Hinges (I) to Side Doors (14 & 15) using silver screws. Flip the cupboard to upright position and screw doors to sides and Divider with Silver Screws - see special markings (4 mini holes for each hinge). Hinges can be adjusted in 4 directions by using set screws on hinges. Screw Handles (I) to Doors
- ▶ Fit plastic Tubing Bracket(F) to Side Left(4) and Divider using screws and Slide Alluminium Tubing in place to hang clothes.



Drawer Assembly

1. Drawer Front Setup:

- ▶ Lay the Drawer Front (11) on a soft surface.
- ▶ Screw 2 Cam Pins (E) into the small holes.

2. Drawer Sides & Backing Installation:

- ▶ Insert Cams (D) into Drawer Sides (12) and place Drawer Sides into Drawer Front (11) ensuring dowels fit into the holes. Then tighten Cams (D).
- ▶ Slide the Drawer Bottom (10) into the grooves.

3. Drawer Rear Attachment:

- ▶ Slide Drawer Rear (13) into the sides ensuring the dowels fit into the holes. Then secure with Conformat Screws(A).
- ▶ Fit handles (J) with supplied screws.

REPEAT PROCESS FOR ALL DRAWERS

- ▶ Slide the assembled Drawers into the main body at a downward angle ensuring the wheels run **inside** the guides on the sides of the body.

There we go! You are all done. Congratulations !