








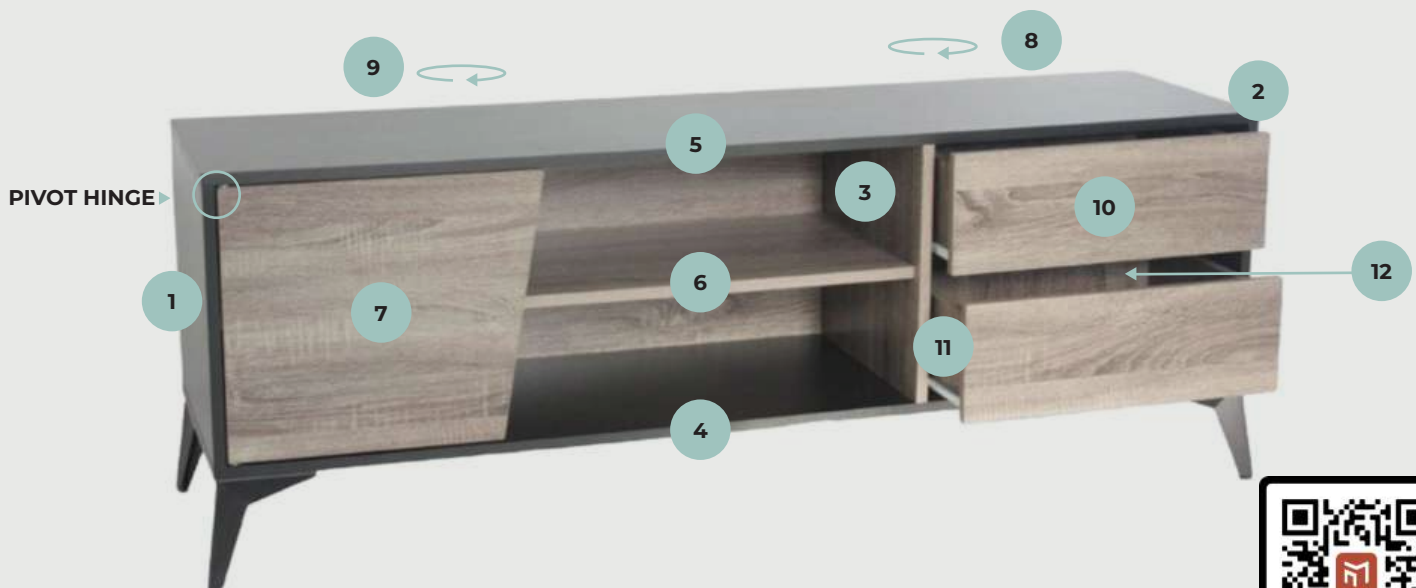
SWEDEN TV STAND

Parts List (18 parts)

| | | | |
|------------------------|----|------------------------------|----|
| 1. Left Side | x1 | 7. Door | x1 |
| 2. Right Side | x1 | 8. Drawer Backing 3mm | x2 |
| 3. Divider | x1 | 9. Unit Backing 3mm | x1 |
| 4. Bottom Panel | x1 | 10. Drawer Front | x2 |
| 5. Top Panel | x1 | 11. Drawer Sides | x4 |
| 6. Large Shelf | x1 | 12. Drawer Rear | x2 |

Hardware

| | | | |
|----------|---|--------|---|
| A | Confirmat Screws (use the supplied Allen Key) | x 10 |  |
| B | Allen Key | x 1 |  |
| C | Sofa Legs | x 4 |  |
| D | G-Screws | x 16 |  |
| E | Cams | x 14 |  |
| F | Cam Pins | x 14 |  |
| G | Drawer Runners | 2 sets |  |
| H | Flat Runner Screws | x 12 |  |
| I | 4x16 Screws | x 18 |  |
| J | Magnetic Catch & Plate (3 x small brass screws) | x 3 |  |
| K | Pivot Hinge with Spacers (4 x screws) | 2 sets |  |



CLEANING INSTRUCTIONS

NB: Clean with a damp cloth only.

Excessive water will cause damage, voiding the warranty.



SCAN TO WATCH VIDEO



SWEDEN TV STAND



Unit Assembly

Top Panel Setup:

- ▶ Lay the Top Panel (5) on a soft surface with the drill holes facing up.
- ▶ Using a Phillips Screwdriver (⊕) *, screw in 6 Cam Pins (F) into the small holes.
- ▶ Attach the Magnetic Catch (J) to the Top Panel using two 4x16 screws.

* *Not Supplied*

2. Sides & Dividers Setup:

- ▶ Insert Cams (E) into the large drill holes of the Sides & Dividers (1, 2 & 3). Ensure the arrows on the Cams point towards the drill holes.
- ▶ Attach Drawer Runners (G) to the Right Side & Divider (2 & 3) using the provided FLAT Screws (H).

3. Large Shelf Installation:

- ▶ Insert Cam pins into Left side and Divider. Be careful not to over tighten.
- ▶ Insert 4 Cams (E) into the Large Shelf (6).

4. Assembling Sides & Divider to Top Panel:

- ▶ Position the Sides (1 & 2) and Divider (3) over the Cam Pins on the Top Panel (5).
- ▶ Tighten securely without applying excessive force.
- ▶ Slide the shelf between the Left Side (1) and Divider (3), ensuring the Cams face upwards. Tighten securely.

5. Backing Installation:

- ▶ Slide the 3mm Backing (9) into the grooves at the back of the unit. Ensure the small holes in the Backing align with the shelf.

6. Door Installation:

- ▶ Attach the Pivot Hinges (K) to the Door (7) using six 4x16 screws.
- ▶ Attach the small Plate (J) to the Door using one 4x16 screw.
- ▶ Position the Door at the bottom panel with two plastic Washers in place.
- ▶ Ensure you place the Plate close to the Magnetic Catch.

7. Bottom Panel Setup:

- ▶ Attach the Bottom Panel (4) to the main unit using 6 Confirmat Screws (A) and the provided Allen Key (B).
- ▶ Ensure the Door Hinges are in their correct position.

8. Final Touches:

- ▶ Attach the Sofa Legs (C) to the Bottom Panel (4) using G Screws (D).
- ▶ Secure the Backing (9) using any remaining 4x16 screws.
- ▶ Flip the unit over onto its feet.



Drawer Assembly

1. Drawer Front Setup:

- ▶ Lay the Drawer Fronts (10) on a soft surface.
- ▶ Screw 2 Cam Pins into the small holes on each Drawer Front.

2. Drawer Sides Installation:

- ▶ Lay down the Drawer sides and insert Cam, ensuring the arrow faces the nearest side.
- ▶ Position the Drawer Sides (11) over the pins on the Front.
- ▶ Tighten securely.

3. Drawer Backing Setup:

- ▶ Slide the 3mm Drawer Backing (8) into the grooves.

4. Drawer Rear Installation:

- ▶ Place the Drawer Rear (12) between the sides (11).
- ▶ Ensure the Backing fits into its groove.
- ▶ Use 4 Confirmat Screws to secure the Drawer Rear to the Drawer Sides.

5. Inserting the Drawer:

- ▶ Tilt the assembled drawer at a downward angle and slide it into the main unit.
- ▶ Ensure the wheels run inside the guides on the main unit's sides.

