



**me&co**  
QUALITY, AFFORDABLE FURNITURE


# ASSEMBLY INSTRUCTIONS



## VEGAS FLOATING UNIT


### Parts List (12 parts)

- |                  |     |                 |     |
|------------------|-----|-----------------|-----|
| 1. Left Side     | x 1 | 8. Cleat 96     | x 1 |
| 2. Left Divider  | x 1 | 9. Left Flap    | x 1 |
| 3. Right Divider | x 1 | 10. Middle Flap | x 1 |
| 4. Right Side    | x 1 | 11. Right Flap  | x 1 |
| 5. Bottom Panel  | x 1 |                 |     |
| 6. Top Panel     | x 1 |                 |     |
| 7. Cleats 128    | x 2 |                 |     |

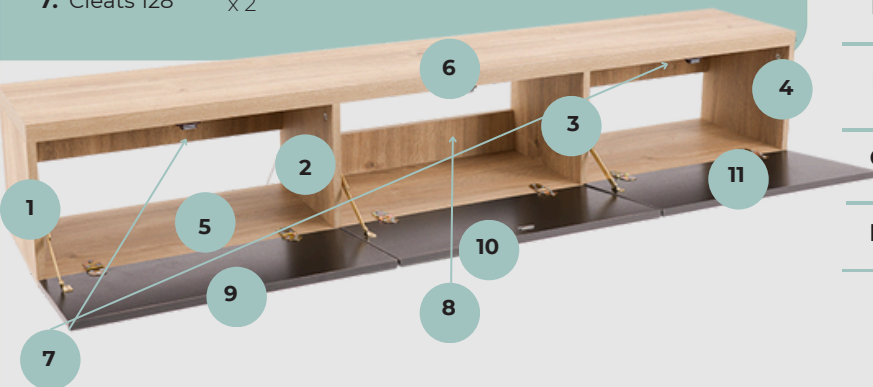

### Hardware

<b>A</b>	Confirmat Screws (use the supplied Allen Key)	x 14	
<b>B</b>	Allen Key	x 1	
<b>C</b>	Cams	x 8	
<b>D</b>	Cam Pins	x 8	
<b>E</b>	Flap Stay (12 Screws)	x 3	
<b>F</b>	Magnetic Catch & Plate (9 x small brass screws)	x 3	
<b>G</b>	Round Backflap Hinge (36 x Screws)	x 6	
<b>H</b>	Hilti 70mm	x 8	

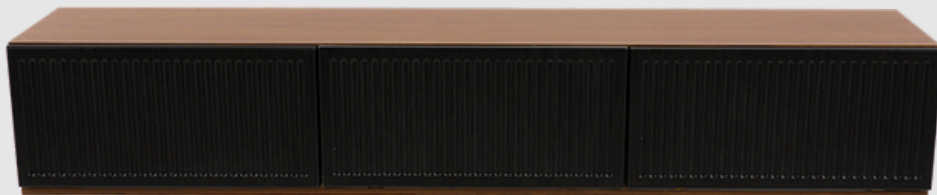

### CLEANING INSTRUCTIONS

**NB: Clean with a damp cloth only.**

Excessive water will cause damage, voiding the warranty.



## VEGAS FLOATING UNIT

### Unit Assembly

Before you begin make sure you have all the parts listed and organise them by type and size



- ▶ Start by placing the Top Panel (7) on a flat surface with the screw holes facing upward. Insert the Cam Pin (D) into the small holes on the Top Panel (6). Use the provided screws to attach the magnetic catch (F) at the designated holes.
- ▶ Fit the Sides (1, 4) and Dividers (2, 3) over the pins on the Top. Insert 1 x Cleat 128 (7) between each side and divider using 3 x wooden dowels that go into the Top Panel. Slide Cleat 96 (8) between the two dividers.
- ▶ Position the Cam (C) in the larger holes on the sides and dividers, ensuring the small arrow on the cam is facing downwards. Secure it with a Phillips screwdriver. Insert and tighten 6 x Conformat Screws (A) through the sides and dividers into the cleats using Allen Key (B).
- ▶ Place the Bottom Panel (5) onto the structure, making sure the holes for hinges are facing forward. Fasten the Conformat Screw (A) through the bottom using the Allen Key.
- ▶ Attach the Hinges (G) to the three Flaps (9-11) using the provided screws. Secure the Magnetic Catch Plate (F) at the marked hole on one Flap.
- ▶ Fix the flaps (9-11) to the Bottom (5) using screws and the designated holes, ensuring that each flap is placed on its corresponding side (the Left Flap goes on the Left Side).
- ▶ Affix the Flap Stay (E) to each flap with 2 x screws, while the other end of the flap stay is attached to the left side (1) and the two divisions.
- ▶ The Floating Unit is now assembled and can be mounted to the wall using the 8 x supplied Hilti's (H) (4 x behind the flaps and 4 x on the back boards).

### Qr Code

- ▶ Available soon



**There we go! You are all  
done. Congratulations !**

#### CLEANING INSTRUCTIONS

**NB: Clean with a damp cloth only.**

Excessive water will cause damage, voiding the warranty.